

Changing Codes

Panel	# of Users	Procedure
5620 (Alert II)		1 MasterCode+CODE+new temp code (master to erase)
5720 (Alert III)		1 MasterCode+CODE+new temp code (master to erase)
4150		2 PRGRM or CODE+master code+1-3(user)+tempcode (master to erase)
4160/4160-12 (version 1)		1 MasterCode+CODE+new temp code (master to erase)
4160/4160-12 (version 2 and 3)		7 MasterCode+CODE+2-8 (user#)+new temp code (master to erase)
4180-12/4180EC		7 MasterCode+CODE+2-8 (user#)+new temp code (master to erase)
4130XM / 5130XM / 4140XM		20 MasterCode+CODE+03-22 (user#)+new temp code (master to erase)
4110		3 MasterCode+CODE+2-4 (user#)+new temp code (master to erase)
4110DL		3 MasterCode+CODE+2-4 (user#)+new temp code (master to erase)
4110XM		3 MasterCode+CODE+2-4 (user#)+new temp code (master to erase)
VIA-16		3 MasterCode+CODE+2-4 (user#)+new temp code (master to erase)
VIA-30		3 MasterCode+CODE+2-4 (user#)+new temp code (master to erase)
4120EC		6 MasterCode+CODE+3-8 (user#)+new temp code (master to erase)
4140XMP		68 MasterCode+CODE+03-70 (user#)+new temp code (master to erase)*
4140XMPV		68 MasterCode+CODE+03-70 (user#)+new temp code (master to erase)*
4120XM		68 MasterCode+CODE+03-70 (user#)+new temp code (master to erase)*
4140XMPT		98 UserCode+CODE+02-99 (user#)+new code->menu selection To delete: *UserC+CODE+User to delete (01-99)+*UserC->menu
4140XMPT2	<i>Need alpha</i> <i>Need alpha</i> <i>Need alpha</i> <i>Need alpha</i>	98 UserCode+CODE+02-99 (user#)+new code->menu selection To delete: *UserC+CODE+User to delete (01-99)+*UserC->menu
4152 (Vector 2000 / 4153 Vector 3000)		7 MasterCode+CODE+2-8 (user#)+new temp code (master to erase)
5140XM	<i>Need alpha</i> <i>Need alpha</i>	98 UserCode+CODE+02-99 (user#)+new code->menu selection To delete: *UserC+CODE+User to delete (01-99)+*UserC->menu
Vista 10		Master Code + CODE + 03-16 3-6 (user#) + new code <i>to delete: MC+CODE+</i>
Vista 15		
Vista 20		Master Code + CODE + 03-16 (user#) + new code, to delete: MC+CODE+
Vista 30		
Vista 40		
Vista 50P	<i>Need alpha</i>	Master c: Mgr code + CODE + 02-99 (user#) + code + menu <i>Delete: MC</i>
Vista 100	<i>Need alpha</i>	MC or Mgr code + CODE + 02-122 (user#) + code + menu
Vista 128		

*-User 03 can program temp codes for users 04-69.

#* Commands

- #93 -- Menu Mode
- *94 -- Next Level Up

Set Up for Download

Vista 10, 20

- *97 -- Factory Default
- *96 -- Download Default
- *95 -- Ring Count (#15)
- *94 -- Download Phone # (*Number*)

Vista 40>

- *97 -- Factory Default
- *37 -- Download Options (11011111)
- *44 -- Ring Count (15)
- *35 -- Download Phone # (*Number*)

Other

- Installer Code + #68 -- Fire Walk Test
- Installer Code + #69 -- Fire Drill
- Installer Code + #63 -- Set Clock
- Installer Code + #80 -- Scheduling Menu
- Installer Code + 0 -- 10 day Alarm History

- *98 -- Exit Programming with Lockout
- *99 -- Down a Level or Exit Programming No Lockout