

# R A D I O N I C S

---

## **Omegalarm D6112 Control/Communicator**

---

### **Operation and Installation Manual**

(including operation and installation instructions and specifications for the D620, D626, and D630 Command Centers, and the D640 Zone Expansion Center)

**Notice**

The material and instructions in this manual have been carefully checked for accuracy and are presumed to be reliable. However, Radionics, Inc. assumes no responsibility for inaccuracies and reserves the right to modify and revise this manual without notice.

**FCC Notice**

This equipment generates and uses radio frequency energy. If not installed in accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply with the specifications in Subpart J of Part 15 of FCC rules for Class B Computing Devices. If this equipment causes interference to radio or television reception — which can be determined by turning the equipment on and off — the installer is encouraged to correct the interference by one or more of the following measures: 1) Reorient the antenna of the radio/television, 2) Connect the AC transformer to a different outlet so the control panel and radio/television are on different branch circuits, 3) Relocate the control panel with respect to the radio/television.

If necessary, the installer should consult an experienced radio/television technician for additional suggestions, or send for the "Interference Handbook" prepared by the Federal Communications Commission. This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402, stock no. 004-000-00450-7.

**Table of Contents**

Section	Page
1. General System Description _____	2
2. D6112 Control/Communicator Assembly _____	3
3. Primary Power Supply _____	5
4. Secondary Power Supply and Charging Circuit _____	6
5. Alarm Power Output _____	6
6. Auxiliary Power Output _____	7
7. Auxiliary Relay Connections _____	7
8. Serial Data Devices _____	7
9. Glass Break Detector Zone Input _____	8
10. Smoke Detector Zone Input _____	8
11. Protective Zone Inputs _____	9
12. Telephone Connections _____	10
13. Programmer Connector _____	11
14. Accessory Serial Devices _____	11
15. The D620, D626, and D630 Command Centers _____	13
16. The D640 Zone Expansion Center _____	18
17. Guide for U.L. Certificated Systems _____	19
18. Specifications _____	22

## 1. General System Description

- 1.1 Control Panel** - The Radionics D6112 Control/Communicator uses eight protective zones to detect and respond to intrusion and other system status conditions. These zones are programmable for a variety of responses, and are compatible with normally-open and/or normally-closed dry contact detection devices. Two zones are two-wire DC powered detection zones: one zone is optimized for glass break detectors and the other zone is optimized for smoke detectors. The two-wire DC powered zones eliminate the need for an interface module between the D6112 and the two-wire detection devices. The two-wire powered zones can also be reset from the command centers. The alarm output of the D6112 can be programmed for steady and pulsed output; individual zones can initiate either response, depending on programming. An auxiliary relay (form C contacts) can be activated during alarm conditions, or the relay can be programmed to activate by entering a combination at a command center.
- 1.2 Communicator** - The Radionics D6112 uses a built-in communicator to transmit reports to a central station receiver. The communicator can be programmed for two different telephone numbers, using two separate reporting formats, and is compatible with most major receivers. The communicator may even be programmed to report two separate account numbers; each account with the ability to report different information using different formats. The D6112 connects to an RJ38X jack for full phone line seizure, and complies with FCC regulations for using the public telephone network.
- 1.3 RFI/Lightning Protection** - The D6112 has been designed and tested to withstand radio frequency interference and high voltage surges common to lightning areas. MOVs protect all input and output connections and several spark gaps provide additional protection.
- 1.4 Programming** - The D6112 is programmed with the Radionics D5100 Bar Code Programmer. The Programmer must contain the 6112:MAIN product handler to enable programming functions for the D6112. (See the *Omegalarm 6112:MAIN Program Entry Guide*.) The D6112 may also be programmed from a central station equipped with the Radionics D9310 Remote Programmer, which permits the central station to reprogram the system, arm the system, request system status, or even troubleshoot the system over the telephone line. Individual zones may be selectively shunted with remote programming, and arm/disarm combinations can be changed without a service call.
- 1.5 Multiple Accounts and Zone Expansion** - With proper programming, the D6112 security system can be divided into two independent security systems: Account #1 and Account #2. Each protective zone in the system is programmed to associate with either Account #1 or Account #2. (NOTE: This function is not suitable for use in UL Certificated burglary alarm systems.) Zones and command centers may be assigned to either account. If a Radionics D6500 Receiver is equipped with the appropriate software compatible with the Modem II format, a single account can have up to sixteen reporting zones. The combined number of reporting zones is limited to sixteen: if ten zones report to Account #1, only six zones remain to be assigned to Account #2. With a Radionics D6000, sixteen zones can be assigned to a single account, with a maximum of ten reporting zones. The remaining zones must be local zones. Command centers assigned to Account #1 control those zones associated with Account #1, while command centers assigned to Account #2 control those zones associated with Account #2. Account #1 command centers cannot control Account #2 zones, nor can Account #2 command centers control Account #1 zones. Zone expansion devices compatible with the D6112 include the D630 and D636 Command Center (three additional zones) and the D640 Zone Expansion Center (six zones).
- 1.6 Command Centers** - The D6112 controlled (burglar) zones are armed and disarmed with Radionics D620, D626, D630, and D636A Command Centers or a D611 Keyswitch module. Up to four command centers can be installed in one D6112 system. The D620 and D630 are equipped to annunciate up to eight protective zones, and the D626 and D636A can annunciate up to 16 zones. Each command center annunciates status for a particular section of the system (depending on which zones are assigned).

For information and installation instructions concerning the D636A Command Center, refer to the *D636A Installation Instructions* (part # 74-05475-000). For information concerning the D611 Keyswitch module, refer to the *D611 Operation and Installation Instructions* (part #74-05516-000).

## 2. D6112 Control/Communicator Assembly

- 2.1 Description** - The D6112 is shipped from the factory completely assembled and mounted in its enclosure. The printed circuit assembly (PCA) is mounted in the enclosure with four screws. The transformer, lock, 8 resistors, and battery leads are also included. The D6112 printed circuit assembly may be ordered separately as a D6112LC, and can be installed in a D6103 Enclosure. The D6112M includes a mounting skirt for installation in a D8108A Attack Resistant Enclosure (available for UL certificated Local, Central Station, and Police Connected burglary alarm applications) or D8103 Enclosure.

The D6112 is U.L. listed for Central Station Grade A (with a D127 Reversing Relay) Grade B and Grade C Burglary Alarm, Digital Police Connection, Local Grade A Burglary Alarm, and Household Burglary Alarm applications. The D6112 is U.L. listed and California State Fire Marshal approved for Household Fire Alarm applications. At least one D620, D626, D630 or D636A Command Center must be installed with a D6112 for U.L. certification. See "Installation Guide for U.L. Certificated Systems" for more information. The D6112 should be installed in accordance with U.L. 681 Installation and Classification of Mercantile and Bank Burglar Alarm Systems, or U.L.1641 Installation and Classification of Residential Burglar Alarm Systems, and/or NFPA 74 and NFPA 70 (NEC article 760) for fire applications.

### 2.2 D6112 Enclosure Specifications

**Size:** 14.25" x 14.25" x 3.00"


**Color:** Light gray.

**Construction:** Cold rolled steel. Base 20 gauge. Door 18 gauge.

**Knockouts:** Two 1.625" (1 5/8") wiring knockouts in base.  
Eight 0.875" (7/8") conduit knockouts in sides.  
Knockout for enclosure lock. One keypad knockout on enclosure door.

**Keypads:** Surface mount the D620/D626/D630/D636 Command Center (ordered separately).

**Tamper switch** (part #D110) ordered separately.

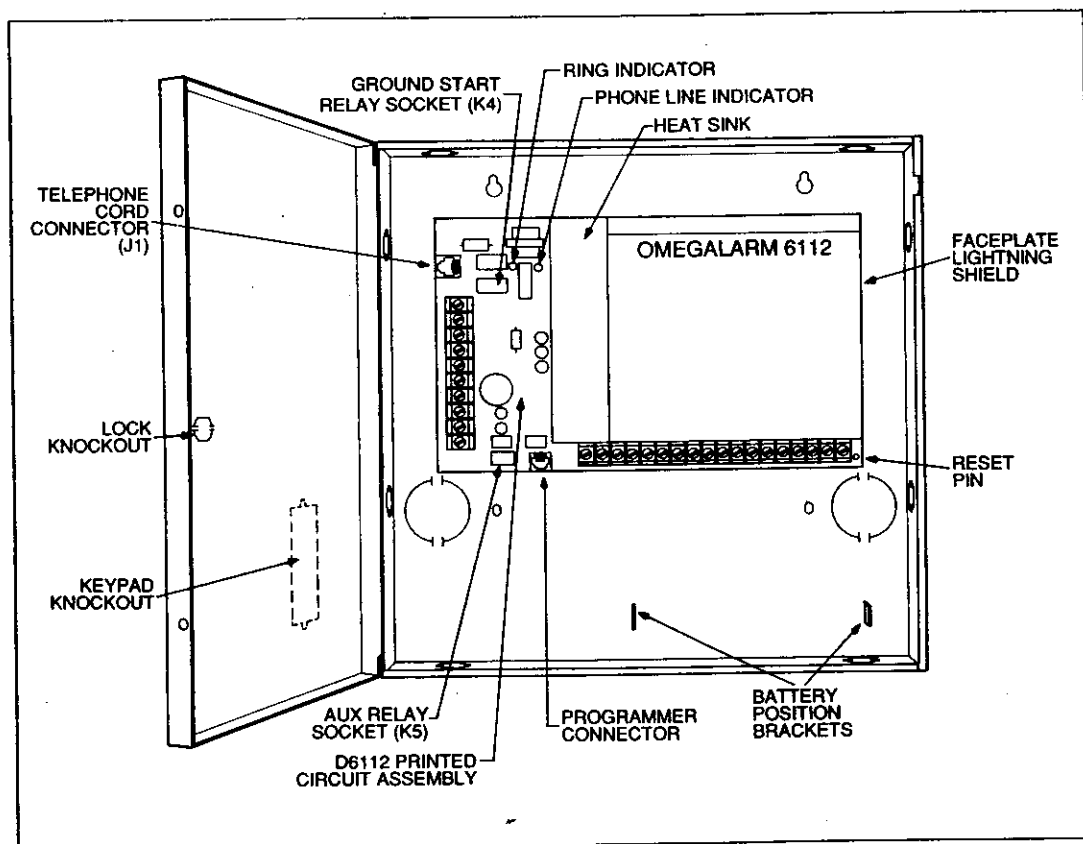

**Figure 1: D6112 CONTROL/COMMUNICATOR ASSEMBLY**

- 2.3 **Faceplate** - The D6112 faceplate is mounted on the printed circuit board, and contains short descriptions of each terminal. Figure 2 displays a typical installation of the D6112 and accessories.
- 2.4 **Reset Pin** - The D6112 reset pin is located in the lower right hand corner of the printed circuit assembly, to the right of the horizontal terminal strip (see Figure 1). Momentarily connect this pin to terminal 27 to reset the Control/Communicator. NOTE: Some versions of the D6112 contain a *momentary reset button* instead of a reset pin. Press this button to reset the D6112.
- 2.5 **Phone Line Indicator** - The red LED on the printed circuit board remains illuminated during normal operation of the D6112. The LED is off when D6112 is communicating on the phone line or a program is being uploaded from or downloaded to the Control/Communicator from the Radionics D9310 Remote Programmer.
- 2.6 **Ring Indicator** - The neon light on the printed circuit board flickers when the D6112 phone line is "ringing."

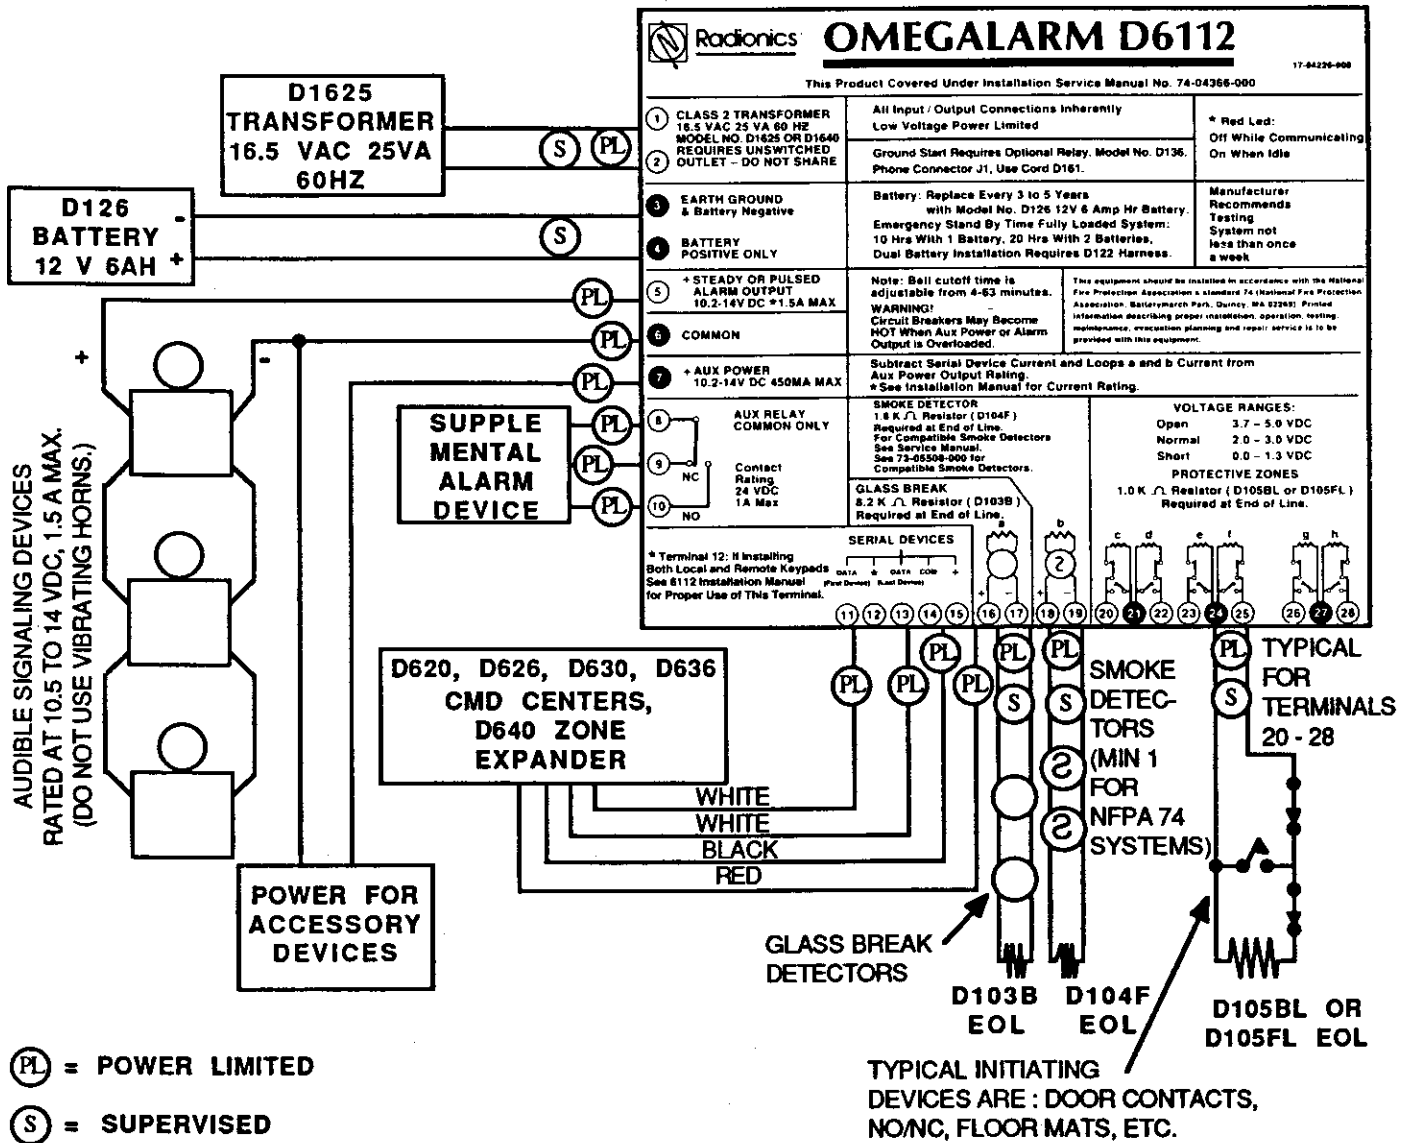


Figure 2: TYPICAL D6112 SYSTEM INSTALLATION


**2.7 Installation Checklist** - The following steps serve as an outline for installing components in the D6112 security system. For detailed information on each installation procedure, refer to the sections indicated.

1. **D6112 Mounting:** Permanently mount the D6112 in an upright position (with P.C. board on top leaving room on the bottom for the battery) within the protected installation site.
2. **Earth Ground:** Earth ground the D6112 at terminal 3 (see section 4. **Secondary Power Supply and Charging Circuit**).\*
3. **Bell:** Connect alarm signalling devices to terminals 5 and 6 (see section 5. **Alarm Power Output**).
4. **Auxilliary Power:** Connect auxiliary devices to terminals 7 and 6 (see section 6. **Auxilliary Power Supply**).
5. **Auxilliary Relays:** Connect devices to the auxiliary relay output, terminals 8, 9, and 10. A plug-in relay (#D136) must be obtained to use this option (see section 7. **Auxilliary Relay Connections**).
6. **Serial Devices:** Install the serial devices (command centers and zone expanders), using terminals 11 through 15. See section 8. **Serial Data Devices**, and sections 14 through 16 for installation instructions.
7. **Protective Zones:** Connect protective loops to terminals 16 and 17 (see section 9. **Glass Break Detector Zone Input**), terminals 18 and 19 (see section 10. **Smoke Detector Zone Input**), and terminals 20 through 28 (see section 11. **Protective Zone Inputs**). Install detectors on the protective loops. Install the appropriate end-of-line resistor at the end of the line for each protective zone.
8. **Transformer:** Connect the transformer to terminals 1 and 2. Plug the transformer into a 110-120 VAC 60 Hz unswitched commercial power outlet (see section 3. **Primary Power Supply**).
9. **Battery:** The D6112 uses a 12 VDC 6 AH sealed lead-acid rechargeable battery (Radionics model #D126). Connect a wire from D6112 terminal 3 to the negative (black) terminal of a 12V 6 Amp-hour battery. Connect a wire from D6112 terminal 4 to the positive (red) terminal of the battery (see section 4. **Secondary Power Supply and Charging Circuit**).

\*NOTE: It may take as long as 12 hours to charge the battery. The battery should be charged prior to installation, or it can be connected at the beginning of installation, so that it can charge while the installation procedure is completed.

### 3. Primary Power Supply (AC Transformer)

 Terminals



- 3.1 Transformer** - The D6112 Control/Communicator is powered by a 16.5 VAC 25 VA transformer (Radionics model #D1625). The transformer is included with the D6112. Connect the transformer to a 120 VAC 60 Hz commercial power outlet not controlled by a wall switch. Use 18 AWG cable (maximum length 50 ft.) to connect the transformer to the control/communicator.

**NOTE:** Never share the transformer with other equipment! A foreign ground on the AC input will damage the Omegalarm power circuit.

- 3.2 Primary Power Circuit** - The primary power circuit is protected from voltage surges by MOV's and spark gaps. If primary power (AC) is lost the D6112 switches immediately to secondary power.

## 4. Secondary Power Supply and Charging Circuit

### Terminals

3

4

- 4.1 Battery** - A 12 VDC 6 AH sealed lead-acid rechargeable battery (Radionics model #D126) supplies power for the system during interruptions in primary (AC) power. A second battery can be added to the system (using the D122 Dual Battery Harness) to increase the standby time. *However, if the batteries discharge down to 12V, it may take up to 48 hours to recharge the batteries up to full capacity (13.6V).* DO NOT SUBSTITUTE ANY OTHER TYPE OF BATTERY IN THIS CIRCUIT! The D6112 charging circuit is calibrated only for lead-acid type batteries.
- IMPORTANT:** The D6112 system must be earth grounded using terminal 3!
- 4.2 Installation** - Install the battery in an upright position at the base of the enclosure (in battery location). Connect the negative side to terminal 3 (black lead), the positive side to terminal 4 (red lead).
- 4.3 Replacement** - Manufacturer recommends BATTERY REPLACEMENT EVERY 3 TO 5 YEARS under normal use. Do not exceed the maximum auxiliary and bell voltage output ratings or install the transformer in an outlet that is routinely switched off. This causes heavy discharges of the battery resulting in premature failure.
- 4.4 Battery Charging Circuit** - The D6112 charges the battery with a trickle charge circuit. Charging voltage is 13.6 VDC at a maximum current of 100mA. (Actual current lower due to auxiliary power draw.)
- 4.5 Battery Supervision** - During an AC power loss, the battery supplies all power to the security system. In doing so the battery slowly discharges. When the battery voltage drops below 11.5 volts, the Control/Communicator, if programmed, sends a TROUBLE report to the central station receiver(s).
- 4.6 Bell Disable** - During an extended AC power outage, when the battery charge drops below 9.7 volts, the bell output voltage is disabled along with the rest of the panel. When AC power is again restored the bell output voltage is enabled. See battery schedule below. *The Auxiliary power remains enabled during bell disable.*

### Battery Discharge/Recharge Schedule

Discharge Cycle		Recharge Cycle	
13.6 volts -	Battery Charged	AC power "on" -	Battery Recharging Begins (if the battery discharged below 9.7 volts, all functions remain disabled until battery reaches 11.5 volts)
11.5 volts -	Battery Trouble report		
10.05 volts -	Loop b (terminals 18 & 19) trouble report (if programmed)	10.1 volts -	Loop b (terminals 18 & 19) restoral report (if programmed, and if battery did not discharge below 9.7)
9.7 volts -	Disable Alarm Power Output, and all processing and memory functions (deep discharge may occur below this level)	11.5 volts-	Trouble Zone 9 (only if battery discharged below 9.7)
		12.75 volts -	Battery Restoral Report
		13.6 volts-	Battery Charged

## 5. Alarm Power Output

### Terminals

5

6

- 5.1 Steady/Pulsed Alarm Output** - Terminal 5 supplies positive (+) 10.2 to 14 VDC at 1.5 Amps maximum current for alarm signaling devices. This output may be steady or pulsed voltage depending on the zone code programming. Terminal 6 is the ground (-) reference for the circuit. For Residential Fire (NFPA 74) it is recommended that you limit your alarm power output to 300mA.

The alarm power output circuit is protected against shorts with a self-resetting thermal circuit breaker. To reduce noise problems, avoid installing alarm output cables near D6112 serial data lines or Telco lines. Compatible bells for this output include Radionics models M802, M803, and M806, and Amseco models MSB-8B-PC4, MSB-10B-PC4, and MSG-10G-12. Electronic type horns can be used, however, Radionics does not recommend the use of vibrating horns with the D6112 Control/Communicator.

## 6. Auxiliary Power Supply

Terminals

7
6

- 6.1 Auxiliary Power** - Terminal 7 supplies positive (+) 10.2 to 14 VDC at 450 mA continuous current to power auxiliary devices. Terminal 6 is the ground (-) reference for the circuit. To determine the maximum power available for auxiliary devices, subtract the total keypad current from the auxiliary current (450 mA). Detectors powered from this output must operate over a range of 10.2 to 14 VDC. A supervised self-resetting thermal circuit breaker protects this circuit and the bell output against shorts. When a sustained short is applied to Aux Power, a TROUBLE ZONE 9 report (if programmed in 1.7 *BatSupv*) is sent to the central station.

## 7. Auxiliary Relay Connections

Terminals

8
9
10

- 7.1 Auxiliary Relay** - The auxiliary relay output is a form C dry contact relay rated at 1 ampere maximum current at 24 VDC. Terminal 8 is the common of the relay, terminal 9 is normally-closed and terminal 10 is normally-open.

The relay can be activated (reverse state) by an alarm condition (individual zones may be programmed to activate relay) or it may be programmed to momentarily activate by entering a combination at a command center. When activated, terminals 8 and 10 have continuity. When in a normal state, terminals 8 and 9 have continuity. Consult the *Omegalarm 6112:MAIN Program Entry Guide* for programming details.

**NOTE:** The auxiliary relay is an optional plug-in relay (model #D136), and it is *not* included with the control/communicator. The relay must be installed into socket K5 as shown in Figure 3. The plug-in relay has two legs on one side and three legs on the other side. When inserting the relay, always ensure that the three leg side is facing upwards and the two leg side is facing down.

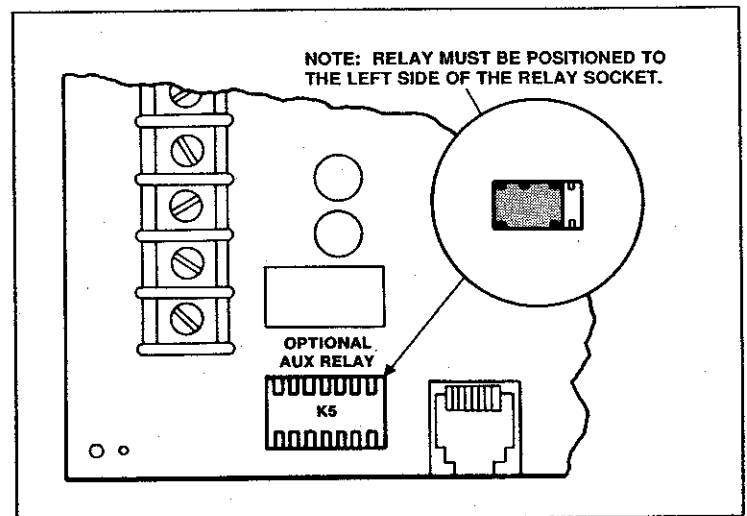


Figure 3: OPTIONAL AUX RELAY INSERTION

## 8. Serial Data Input

Terminals

11
12
13
14
15

- 8.1 Serial Data Devices** - Terminals 11 through 15 are the Serial Data terminals which connect command centers and zone expanders to the D6112. The D6112 security system can be enhanced with a maximum of four serial data devices: any combination of the D620, D626, D630, and D636 Command Centers, and the D640 Zone Expansion Center. A four-conductor cable is used to interface all command centers and zone expansion devices. This cable is connected to the D6112 serial data terminals. Detailed descriptions of each device and system configuration are provided in sections 15, 16, and 17.



## 9. Glass Break Detector Zone Input (Loop A)

Terminals

16
17

- 9.1 Glass Break Zone** - This fully-programmable two-wire powered zone input is optimized for interfacing glass break detectors to the D6112. Other types of detectors can also be connected to these terminals. This zone input is supervised with an 8.2K ohm end-of-line resistor: Radionics model D103B (for UL listed applications - one supplied with the D6112). Terminal 16 supplies positive (+) voltage to the detection devices (up to;1.7 mA idle, and 7 mA on a dead short). Terminal 17, the loop return (-) for the circuit, is isolated from earth ground. *If terminal 16 or 17 are erroneously connected to earth ground (terminal 3) or another circuit common (terminals 6,19,21,24,27), the glass break loop will not operate properly.* The glass break detector zone can be reset (voltage to detectors interrupted) from a command center using Command 47, if the D6112 is programmed for this function (see the *6112:MAIN Program Entry Guide*.)

Up to 10 glass break detectors (IEI model #725L required for U.L. certificated installations) may be connected to the glass break zone input. Other types of detectors connected to this zone must be specified to operate with 10.2 to 14 VDC, 1 mA draw, 2 mA in alarm, and an 8.2k ohm end-of-line resistor, and be evaluated for electrical compatibility with the D6112.

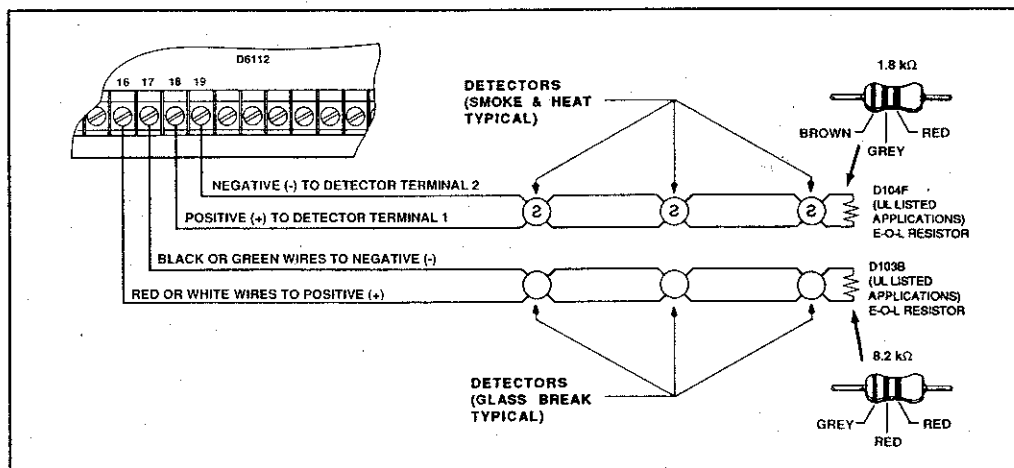


Figure 4: GLASS BREAK AND SMOKE DETECTOR ZONE WIRING

## 10. Smoke Detector Zone Input (Loop B)

Terminals

18
19

- 10.1 Description** - This fully-programmable two-wire powered zone input is optimized for interfacing smoke and heat detectors to the D6112. Other types of detectors can be connected to these terminals. This zone input is supervised with a 1.8K ohm end-of-line resistor: Radionics model D104F (one supplied with the D6112). Terminal 18 supplies positive (+) voltage to the detection devices (up to;19 mA idle, and 75 mA on a dead short). Terminal 19, the loop return (-) for the circuit, is isolated from earth ground. *If terminal 19 is erroneously connected to earth ground (terminal 3) or another circuit common (terminals 6,17,21,24,27) the smoke detector loop will not operate properly.* The smoke detector zone can be reset (voltage to detectors interrupted) from a command center if the D6112 is programmed for this function. (Consult the *6112:MAIN Program Entry Guide*.)

### 10.2 Connection of Compatible Fire Detection Devices to Loop B

1. **Two-Wire Smoke Detectors:** Up to 10 two-wire smoke detectors (refer to Radionics Technogram #73-05508-000 for smoke detector requirements) can be connected to Loop B at the same time.
2. **Four-Wire Smoke Detectors:** Any number\* of 12 VDC four-wire smoke detectors. A suitable power supervision device must be installed according to the manufacturer's instructions. **NOTE:** If four-wire detectors are used, the detectors power connections must be connected to D6112 terminals 15 (+) and 14 (-) in order to provide the Command Centers with reset capabilities.
3. **Heat Detectors:** Any number.

Any number\* of burglar devices may be connected to Loop B as long as fire detection devices and burglar devices are not connected to Loop B at the same time.

\* The number of devices is limited by the available Auxiliary Power (see section 6. Auxiliary Power Supply).


**10.3 Zone Supervision** - During an AC power loss, the battery supplies all power to the security system. In doing so the battery slowly discharges. When the battery voltage drops below 10.2 volts, the Control/Communicator sends a Loop B trouble report to the central station receiver. When the battery voltage drops below 9.7 volts, the fire alarm circuit will no longer operate. A separate report (RESTORAL ZN 9) will be sent when the battery recharges to 10.1 volts (see Section 4 for specific events concerning the battery operations).

## 11. Protective Zone Inputs

Terminals



**11.1 Description** - The D6112 has six additional programmable protective zone inputs (loops c,d,e,f,g, and h). Each zone functions independently and does not interfere with the operation of the others. When wiring these zone inputs, a 1000 ohm end-of-line resistor is required at the far end of each loop to provide a reference for supervision. It is also recommended that a 1000 ohm end-of-line resistor is attached to any unused zones on the D6112. Use Radionics model D105BL (for UL listed burglar applications; six supplied with the D6112) or D105F (for UL listed fire applications). Dry contact sensing devices may be connected to any of these zone inputs in series (normally-closed), in parallel (normally-open), or in a combination of series and parallel.

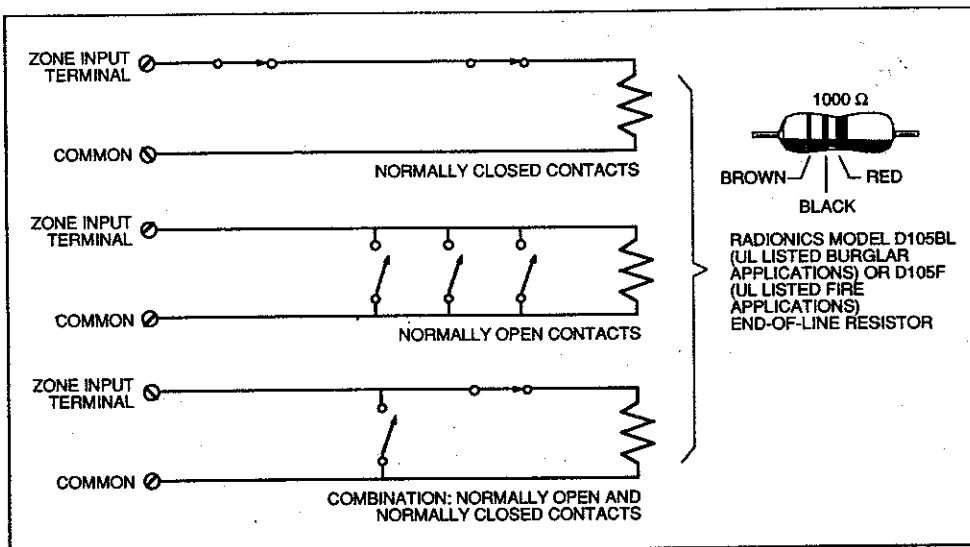

**Figure 5: PROTECTIVE ZONE WIRING GUIDE**

**11.2 Protective Zone Parameters** - Each D6112 protective zone is programmed to respond to different electrical conditions (i.e. open, shorted, and normal circuits). To determine the electrical condition of any zone, use a voltmeter to measure the voltage across the zone input terminal connections. The loops must be connected, E.O.L. resistors must be in place, and the D6112 must be powered up.

Electrical Condition	Voltmeter Reading (measured zone input voltage)
Open	3.7 - 5.0 VDC
Normal	2.0 - 3.0 VDC
Shorted	0.0 - 1.3 VDC

**11.3 Loop Response Time** - The D6112 checks protective zones every 100 milliseconds. A zone must be in an abnormal condition on two successive checks to be recognized as a faulted zone. (This precaution reduces false alarms.) Loop response time is rated between 100 and 200 milliseconds.

## 12. Telephone Connections

- 12.1 Registration** - The Radionics D6112 Control/Communicator is registered with the Federal Communications Commission under part 68, for connection to the public telephone network using an RJ38X jack installed by your local telephone company.

FCC Registration Number: AJ996H-15715-AL-E

Ringer Equivalence: 0.1B

- 12.2 Location** - To prevent jamming of alarm and other signals, the RJ38X jack must be wired and located within the system so that normal phone use is temporarily interrupted while the communicator transmits data (see Figure 6). After installation, confirm that the communicator seizes the line, acquires dial tone, and reports correctly to the central station.

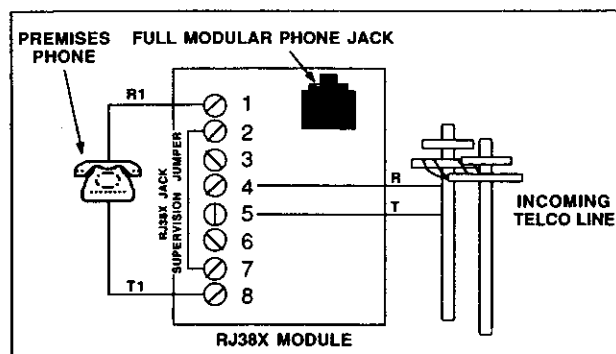


Figure 6: RJ38X WIRING

- 12.3 Notification** - Registered equipment may NOT be connected to party lines or coin operated telephones. If the local telephone company requests notification before the communicator is connected to the telephone network, the following information should be supplied: 1) the particular line to which service is to be connected, 2) the make, model and serial number of the device, and 3) the FCC registration number and ringer equivalence. NOTE: If the telephone company makes changes in its communications facilities, equipment, operations, or procedures which may affect the performance of the communicator, the phone company is obligated to notify the user in writing.
- 12.4 Telephone Cord Connection** - Connect one end of the D161 Telephone Jack Interface Cord to the D6112 TelCo Cord Connector (J1, located on the top left corner of the D6112) and the other end to an RJ38X phone jack. NOTE: To ensure proper operation when using this equipment on ground start telephone lines in Canada, use a Radionics model D163 Telephone Jack Interface Cord.
- 12.5 Ground Start Systems** - Some telephone systems require a momentary ground to initiate dial tone. To interface with a ground start system, a plug-in relay (Radionics model #D136) must be installed into socket K4 as shown in Figure 7. NOTE: The plug-in relay has two legs on one side and three legs on the other side. When inserting the relay, always ensure that the three leg side is facing upwards and the two leg side is facing down.

**IMPORTANT:** The D6112 Control/Communicator must be connected to an earth ground reference for the ground start system to function correctly. Use terminal 3 of the D6112 for earth ground reference.

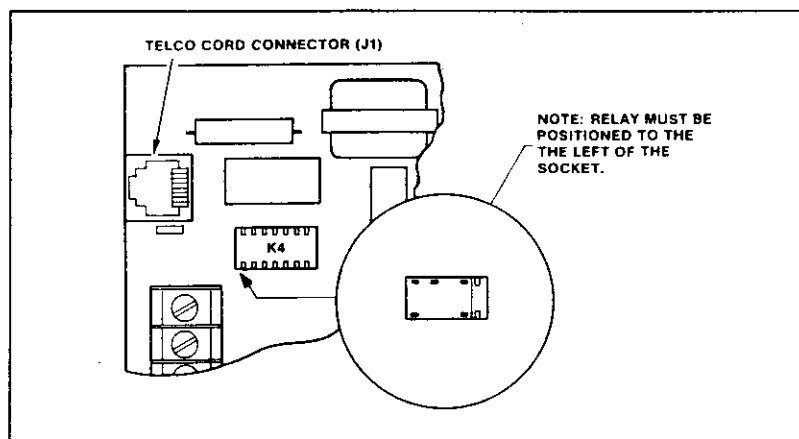


Figure 7: GROUND START RELAY INSERTION

### 13. Programmer Connector

**13.1 Programmer Connection** - The Radionics D5100 Bar Code Programmer is connected to the D6112 Control/Communicator for programming the D6112. This connection is made at the Programmer Connector (J2) located on the bottom left corner of the D6112. For more details about programming the D6112 Control/Communicator, consult the *D6112:MAIN Program Entry Guide*. **NOTE:** While the D6112 Control/Communicator is addressing the Programmer, all control, detection and transmitting functions of the system are inoperable.

### 14. Accessory Serial Devices

**14.1 Description** - Several *serial devices* are available for the D6112 security system. The D620, D626, D630 and D636A are *Command Centers*, which are used for arming and disarming functions. The D620 and D630 are equipped to annunciate up to eight protective zones, and the D626 and D636A can annunciate up to 16 zones. The D630 and D636A also has *zone expansion* capability, which allows the user to supervise three zones in addition to those provided on the D6112. (The D636A is connected to the D6112 the same way as the D630, however, for information and installation instructions concerning the D636A Command Center, refer to the *D636 Installation Instructions* part # 74-05475-000). The D640 is a *Zone Expansion Center* for the connection of up to six additional zones. A maximum of four Command Centers (in any combination), or three Command Centers and one D640, can be connected to a D6112. A four-conductor cable is used to interface all Command Centers and zone expansion devices with the D6112.

The D6112 Control/Communicator can be programmed with two accounts, allowing the security system to be split into two independent systems (referred to as Account #1 and Account #2). Each device connected to the serial data cable is assigned, in programming, to one of these accounts (see the *6112:MAIN Program Entry Guide* for details.)

**14.2 Wiring the Serial Devices** - The cable used to connect the serial devices (Command Centers and zone expanders) to the D6112 can run no longer than a 1000 feet total (no more than 500 feet out, and 500 feet back to the Control/Communicator) when using 22AWG. The wire run between serial devices can be no more than 300 feet. Figure 8 depicts a typical installation using one D620 Command Center. Figure 9 illustrates an installation with three remote devices using return loop wiring techniques. Figure 10 illustrates an installation with four devices connected to the Control/ Communicator.

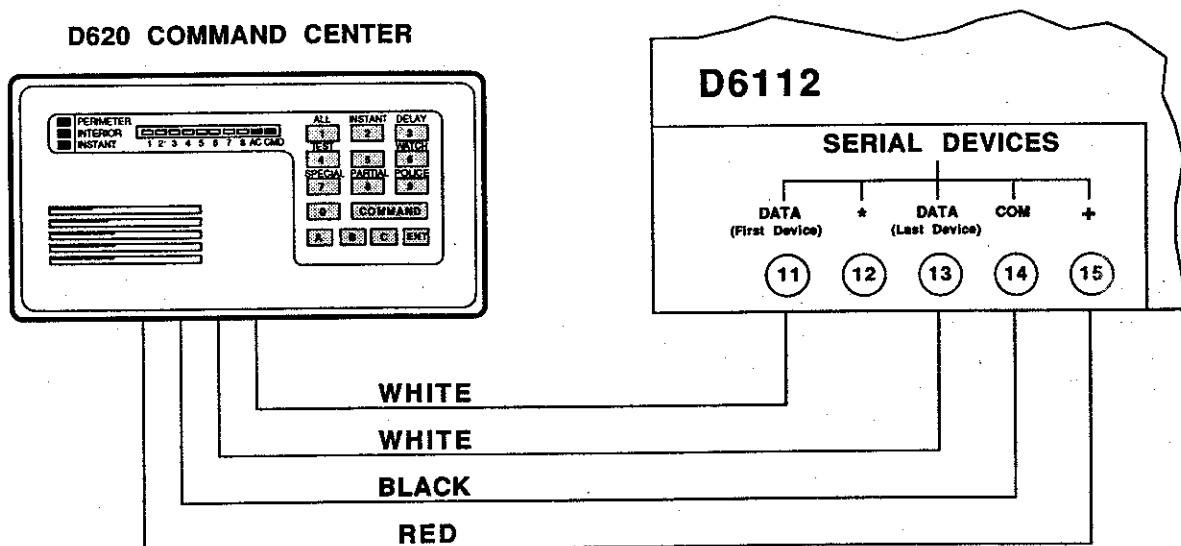


Figure 8: SINGLE DEVICE

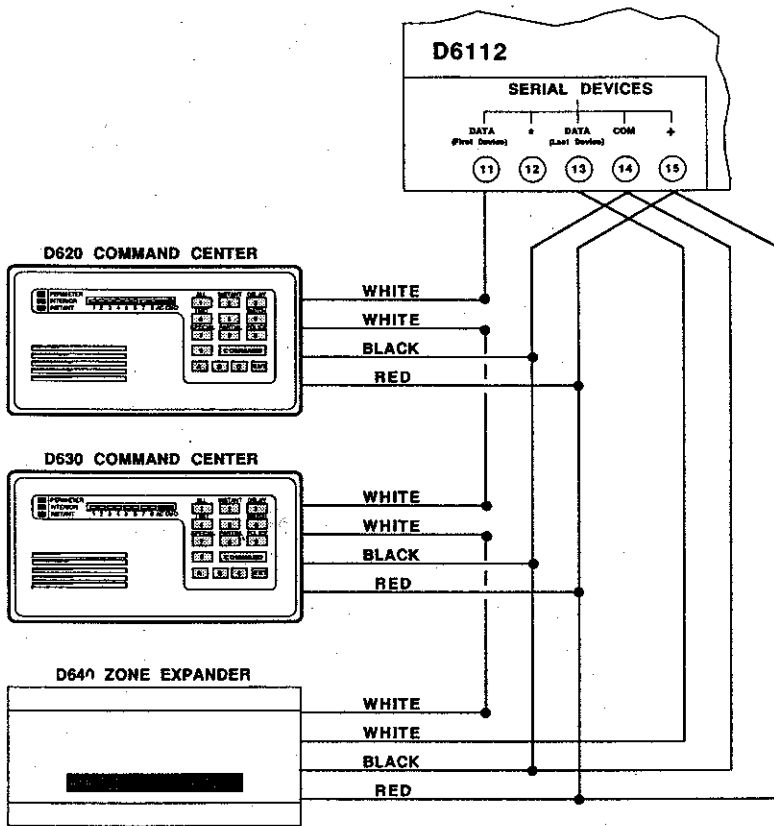


Figure 9:  
RETURN LOOP WIRING

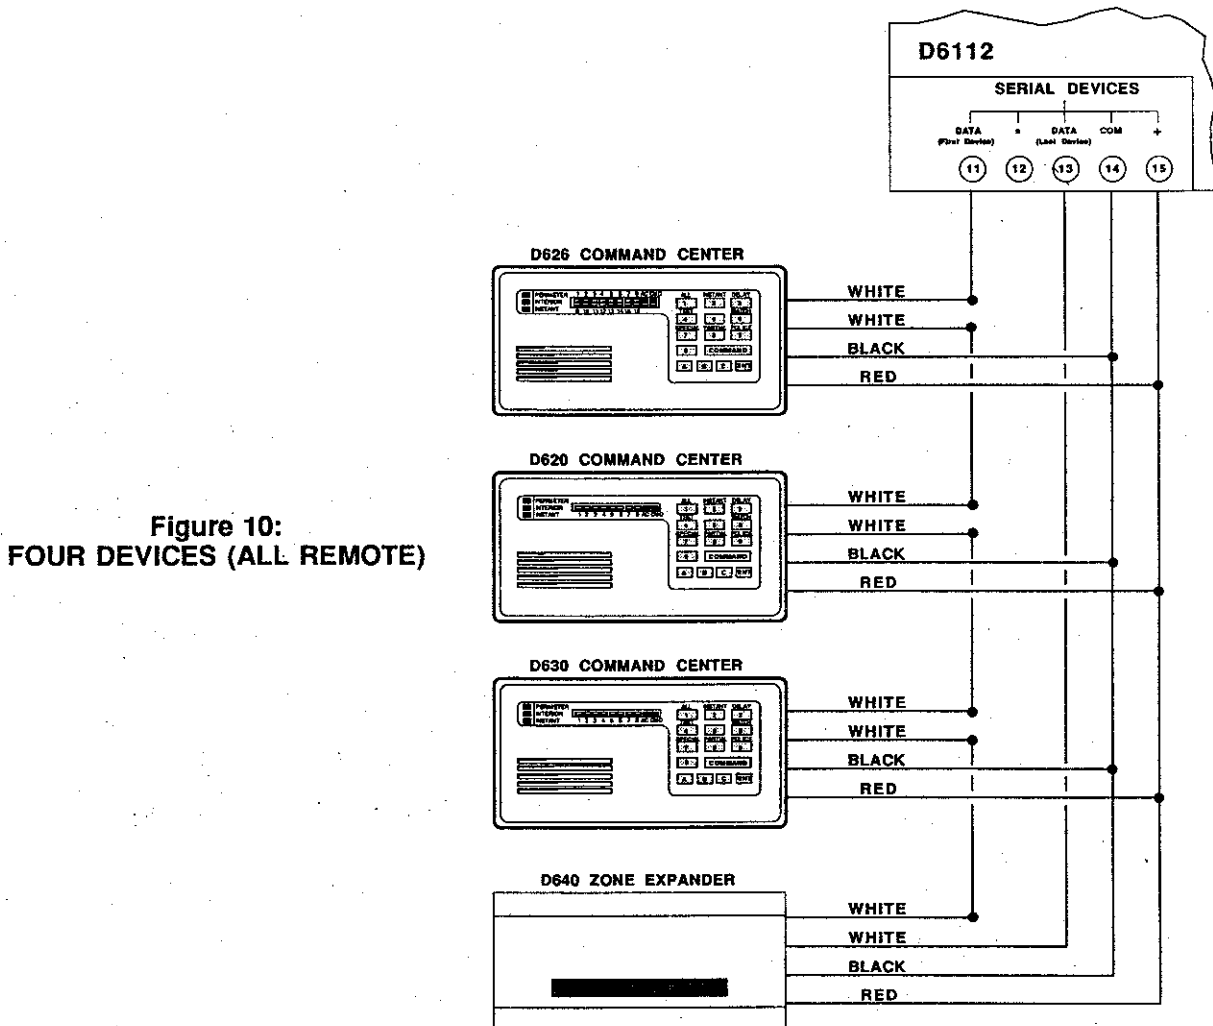


Figure 10:  
FOUR DEVICES (ALL REMOTE)

## 15. The D620, D626, and D630 Command Centers

The D620, D626, and D630 Command Centers are low profile surface mount, four-wire units. The D620 is a Command Center which annunciates up to eight protective zones. The D626 annunciates up to 16 zones. The D630 is a Command Center with a built-in zone expander. For information and installation instructions concerning the D636A Command Center, refer to the *D636A Installation Instructions* (part #74-05475-000).

- 15.1 D620/D626/D630 Command Centers** - All command centers have a COMMAND bar, an ENT(ENTER) key, and number keys from 0 to 9. These twelve keys (backlighted on the D620, D626, and D630) are used to enter personal passcodes and command functions into the D6112 Control/ Communicator. Each Command Center can hold up to four key entries from its keypad in its storage area (known as a buffer). All key entries stored in the buffer are transmitted to the D6112 every half second for processing. As each key is touched the Command Center emits a short beep to indicate that the buffer has stored the entry. When a passcode is completed, the ENT key must be pressed to enter the passcode. If the ENT key is not pressed the passcode is ignored by the D6112 Control/ Communicator. *The ENT key is not required to enter COMMAND bar functions.* The D6112 Control/Communicator has a *time window* for accepting key entries. After one key is pressed, the next key in the passcode must be pressed within five seconds. After five seconds have expired from the last key entry, the entire entry is cleared and the passcode must be restarted.
- 15.2 The Function Keys** - The D620, D626, and D630 Command Centers have three programmable function keys labeled A, B, and C. Each key can be programmed to perform many command functions of the D6112 Control/Communicator. This enables the user to press one button to perform many command functions instead of memorizing the command combination. For complete details concerning the programming of the function keys, see the *6112:MAIN Program Entry Guide*.
- 15.3 Response Tones** - All command centers contain a sounder used to annunciate several system conditions and account conditions. The response tones for each of these stations are as follows:
- Entrance Warning** - The command center beeps during the entry delay period to remind the user to disarm the security system. This is a programmable function of the D6112.
- Keystroke Entry** - As each key is touched the Command Center emits a short beep to indicate that the entry has been stored in the command center buffer.
- Faulted Zone Protest** - Protective zones may be programmed to sound the account Command Center buzzer for two seconds *after* an arming command is entered, to indicate that a zone is faulted.
- Watch Tone** - The Command Center sounder emits a short beep when a perimeter zone is faulted during the perimeter watch mode.
- Service Tone** - Some zones may be programmed to sound a service tone when they are faulted. To silence the sounder enter an arm/disarm passcode for that account or enter COMMAND 4. **NOTE:** Some zones, such as fire zones, may be programmed so that the sounder cannot be silenced until the zone fault is corrected (*see the D6112:MAIN Program Entry Guide*).
- Telephone Trouble** - When the phone line is disconnected or the system fails to report, the control station beeps until the situation is corrected, or a personal passcode or COMMAND 4 is entered.
- 15.4 The Display Panel** The display panel for the D620, D626, and D630 Command Centers annunciate four different types of status: armed, zone, AC power, and command mode (see Figures 11 and 12).
- Armed Status Indicators:** Armed Status Indicators show the armed condition of the account to which the command center has been assigned. (Command Centers are assigned to accounts in the 6112:MAIN program.) There are three different indicators to show the account armed status.
- Perimeter** - When this indicator is lit, the account perimeter zones are armed. During exit delay time, this indicator flashes slowly.
- Interior** - When this indicator is lit, the account interior zones are armed. During exit delay time, this indicator flashes slowly.
- Instant** - When this indicator is lit, the account is armed without entry/exit delay time. When the account is armed and this indicator is *not* lit, entry/exit delay time is enabled if programmed.

**Zone Status Indicators:** The D620 and D630 contain eight *numbered* indicator lights, which are used to annunciate the condition of the account protective zones (see Figure 11). The D626 contains 16 numbered zone indicator lights (see Figure 12).

**Zone Fault** - While a zone is faulted, its indicator lights steadily. When the zone is restored to normal, the indicator goes "off".

**Zone Alarm Memory** - A zone alarm memory condition causes the indicator light to flash "on" and "off" *rapidly*. The indicator continues to flash rapidly until the system is next armed or COMMAND 4 is entered.

**Shunted Zone** - When a zone is shunted, the zone's indicator flashes "on" and "off" *slowly*. The indicator continues to flash slowly until the system is disarmed.

**NOTE:** The D6112 protective zones may be programmed as invisible. When programmed invisible, the status of that zone is not displayed for alarm conditions.

**AC Power Indicator:** The AC indicator is lighted while the system is operating on AC power. The AC indicator flashes "on" and "off" when the system is NOT operating on AC power.

**Command Mode Indicator:** When the COMMAND bar is pressed, the command mode indicator is lighted approximately 15 seconds or until the command is completed.

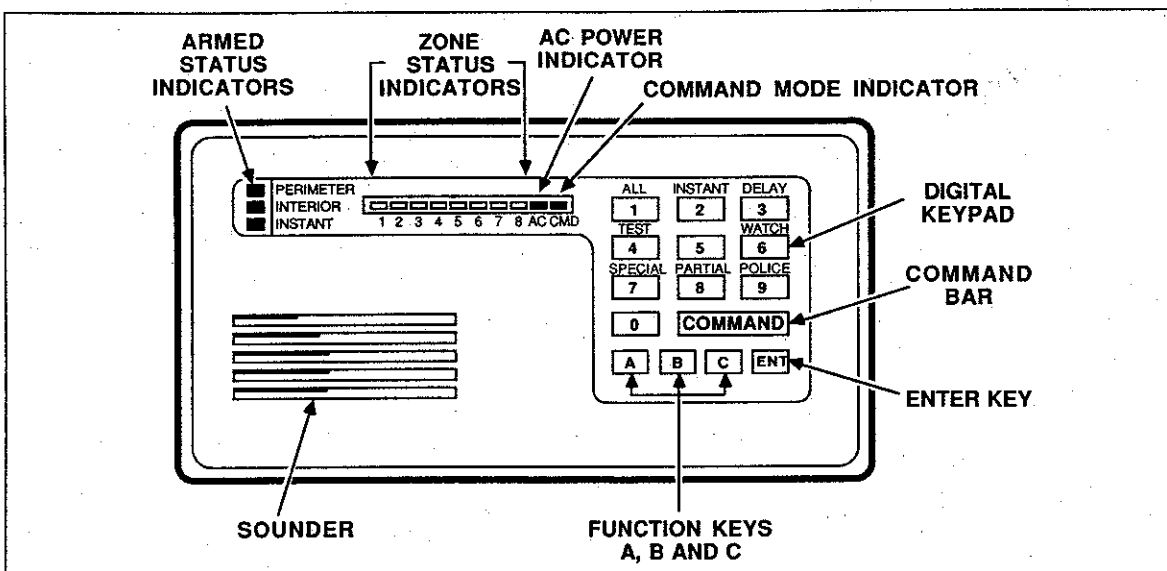


Figure 11: D620/D630 COMMAND CENTERS

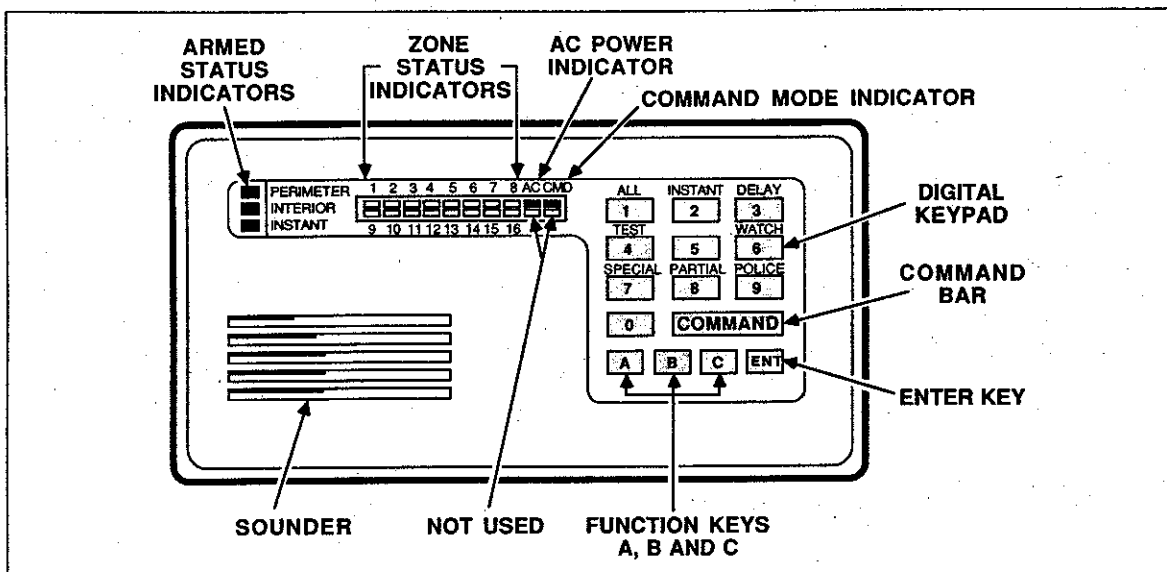


Figure 12: D626 COMMAND CENTER

**15.5 Zone Annunciation Jumper (D620/D630)** — The D6112 Control/Communicator can supervise up to sixteen protective zones. The D626 can annunciate up to sixteen zones. The D620 and D630 Command Centers can annunciate up to *eight* zones.

When more than eight zones are assigned to a single account, two D620/D630 command centers can be used to annunciate all protective zones. This is done by assigning both Command Centers to the same account, and cutting the Zone Annunciation jumper (W1 on the D620, W2 on the D630) on the second Command Center (see Figure 13). With the jumper cut, the second Command Center now annunciates zones 9 through 16 of the assigned account. When the jumper is not cut, the Command Center annunciates zones 1 through 8 of the assigned account.

**15.6 Command Center Buzzer Disable (D620/D626/D630)** — Power can be disconnected from the Command Center buzzer to permanently disable it. To permanently disable the buzzer, cut the leads on resistor R36 (see Figure 13), and remove this component. **NOTE:** For U.L. installations, the buzzer on at least one Command Center in the D6112 system must remain connected.

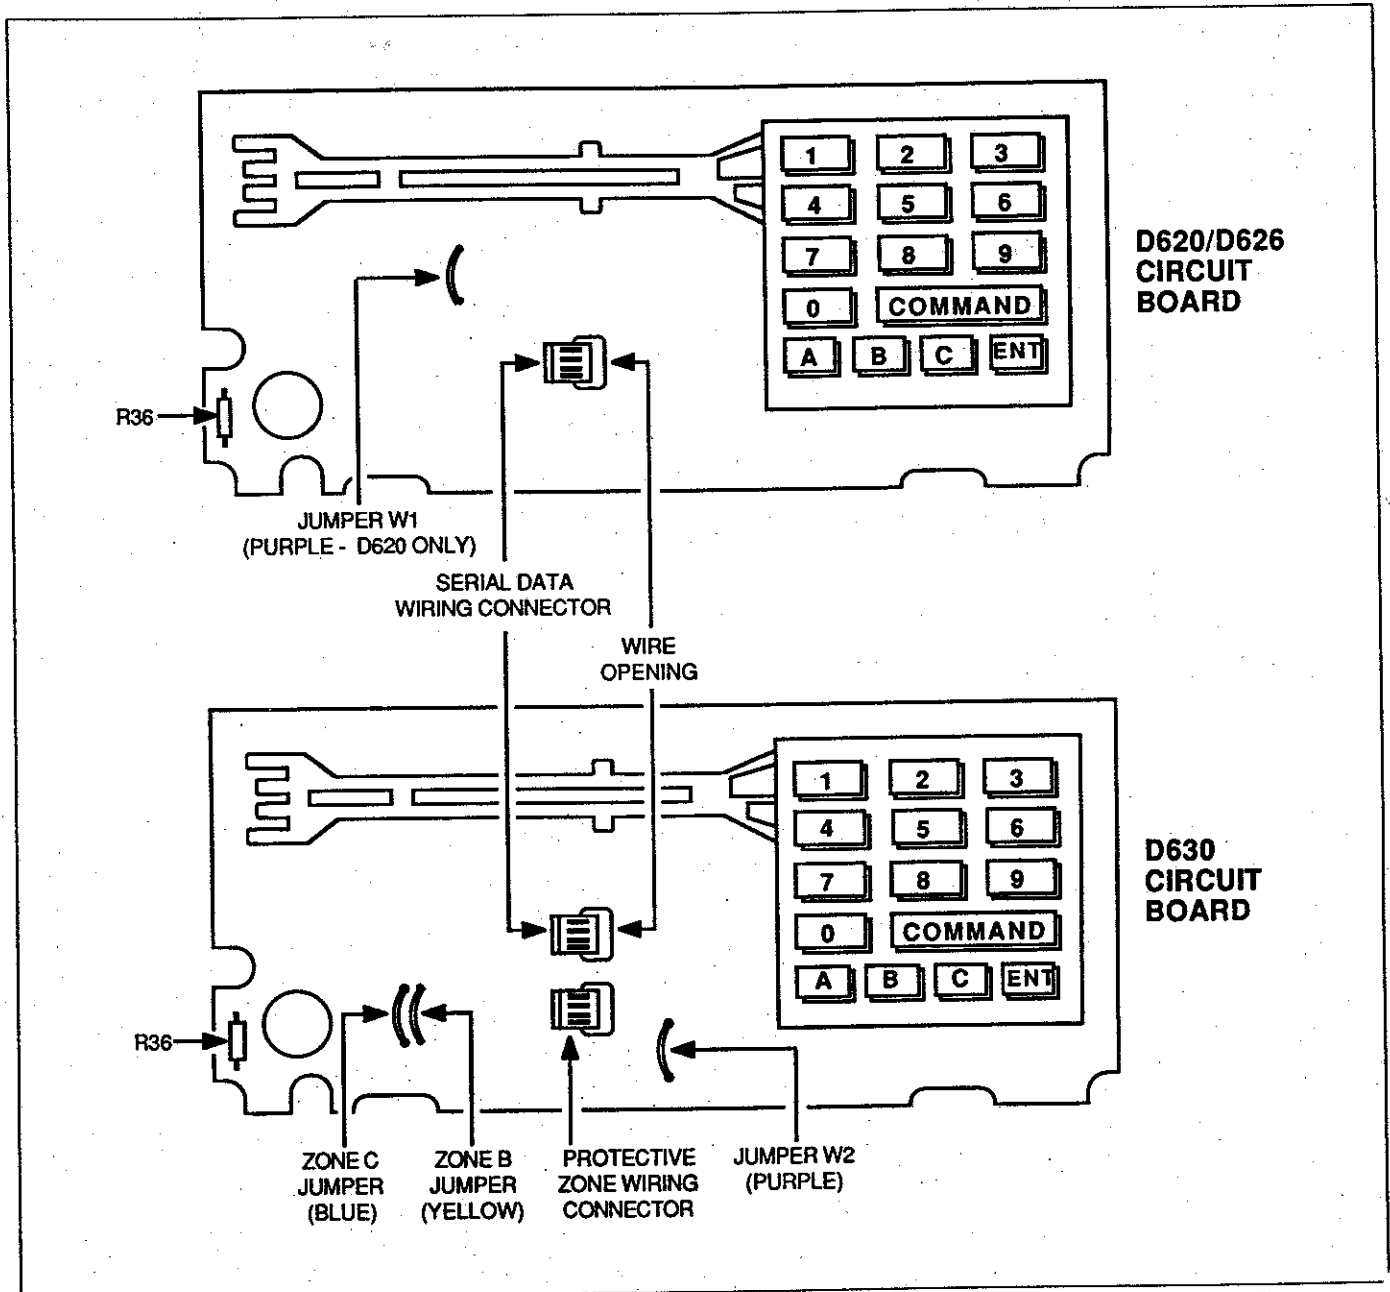



Figure 13: D620/D626/D630 CIRCUIT BOARD REFERENCES



- 15.7 Installing the D620, D626, and D630 Command Centers** — To mount the unit, the front cover must be removed from the base, exposing the mounting holes. Follow the directions below for mounting.

**IMPORTANT:** Do not mount the Command Center in a location exposed to direct sunlight. Direct sunlight makes the display less visible and may also cause damage to the command center electrical components.

1. Remove the front cover from the enclosure base. Use a small flat bladed screwdriver to gently push two bottom cover tabs back. As the tabs are pushed back, lift the bottom of the cover away from the base. Remove the cover.
2. Connect wiring as described in section 14.2 of this manual. Route the four wire flying leads through the wiring opening in the back of the enclosure base and plug into the serial data wiring connector.
3. Place the enclosure base on the wall in the desired location. Use a center punch or a pencil to mark the locations of the mounting holes. (The enclosure base can be mounted to a single-gang wall box if desired. Two mounting screw holes on the base are positioned for standard single-gang compatibility.) Secure the enclosure base to the wall or gang box.
4. Align the top two tabs of the enclosure cover with the top two tab slots in the enclosure base. Slide the top of the cover into the base. Gently push the bottom of the cover down on the base until it snaps into place.
5. Push each key on the keypad towards the top of the enclosure to ensure proper mating with the openings in the top cover.

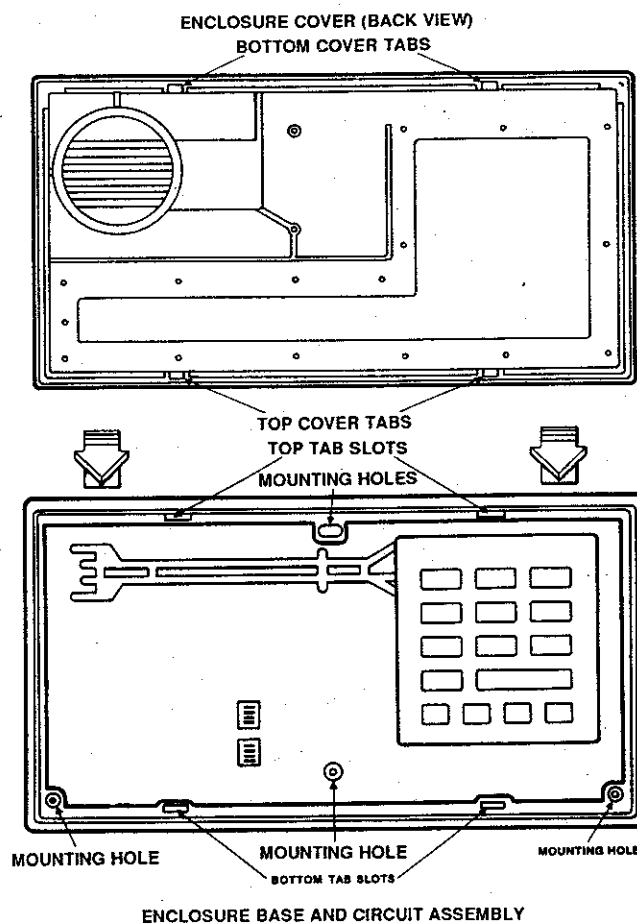


**Figure 14: INSTALLING THE D620, D626, AND D630 COMMAND CENTERS**

**15.8 Wiring the D630 Protective Zones** — The D630 is a command center which also expands the system with three hardwire protective zone inputs. Each zone functions independently and does not interfere with the operation of the others. Each zone is supervised with a 1000 ohm end-of-line resistor: Radionics D105BL (for UL listed burglary alarm applications; two supplied with the unit) or D105F (for UL listed fire alarm applications; one supplied with the unit). Dry contact sensing devices may be connected in series (normally closed) or in parallel (normally open) to any of these zones. Each zone can detect open circuit, closed circuit, and normal circuit conditions (refer to the table in Section 11.2 "Protective Zone Parameters" for voltmeter readings of specific conditions).

The D6112 Control/Communicator is programmed with a zone code for each protective zone. The zone codes determine how each zone responds to faults and command centers. Consult the *D6112:MAIN Program Entry Guide* for programming details.

The D630 has two sets of four wire flying leads attached to connector plugs. The zone expansion flying leads are colored black, green, yellow, and blue and this connector plugs into the bottom plug. When wiring zone inputs, the black wire is the zone common and the green, yellow, or blue wire is the zone input (see Figure 15).

**NOTE:** Protective zones B and C have jumpers that must be cut before wiring zone inputs. If using protective zone B, cut the yellow (W3) jumper. If using protective zone C, cut the blue (W4) jumper (see Figure 13). Do NOT cut these jumpers if the protective zones are not used. Do NOT wire protective zones with end-of-line resistors if the protective zones are not used. Zone A does not have a cuttable jumper, and requires an end-of-line resistor even if the zone is not used.

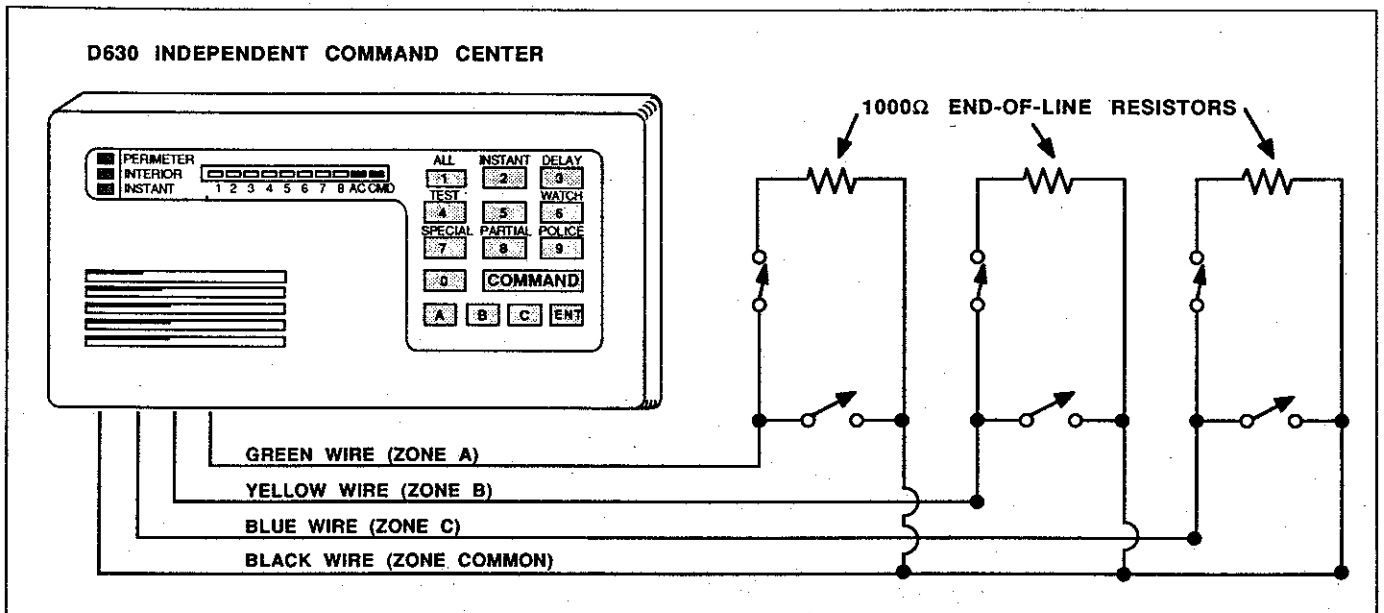

**FIGURE 15: WIRING THE D630 PROTECTIVE ZONES**

**D630 Protective Zone Wiring Guide**

Black Wire	Zone Common	No Jumper
Green Wire	Zone A Input	No Jumper
Yellow Wire	Zone B Input	Yellow Jumper (W3)
Blue Wire	Zone C Input	Blue Jumper (W4)

## 16. The D640 Zone Expansion Center

The D640 Zone Expansion Center module adds a maximum of six protective zones to the D6112 security system. Each of these zones is physically connected to the D640 module, however they can be individually assigned to either account number of the D6112. All of the protective zones are programmed at the D6112 for response characteristics and arming parameters.

- 16.1 Installing the D640** — The D640 Zone Expansion Center can be mounted in the D6112 enclosure or in a customer supplied enclosure. The unit is mounted in a plastic bracket which can be attached to any clean dry surface with double-adhesive tape. See Section 18.3 for dimensions of the unit.
- 16.2 Wiring the D640** — Connect the D640 Zone Expansion Center to the serial data wiring loop as shown in Section 14.2. The D640 +12VDC (+) and common (COM) terminals are wired in parallel with the serial data loop power and common wires. The data wire from the previous device connects to either D640 DATA terminal. The remaining D640 DATA terminal connects to the data terminal of the next device.
- 16.3 Wiring the D640 Protective Zones** — D640 protective zones function independently, and are similar to loops connected to the D6112 Control/Communicator (see Figure 5 and Section 11 "Protective Zone Inputs"). Each zone is supervised with a 1000 ohm end-of-line resistor. Six 1000 ohm resistors are supplied with the D640: one Radionics model 105F (for U.L. listed fire applications) and five 105BLs (for U.L. listed burglary alarm applications). Dry contact sensing devices may be connected in series (normally-closed) or in parallel (normally-open) to any of these zones. Each zone can detect open circuit, closed circuit, and normal circuit conditions (refer to the table in Section 11.2 "Protective Zone Parameters" for voltages of specific circuit conditions). The D6112 is programmed with a zone code for each protective zone. The zone code determines how each zone responds to faults and arming stations. Consult the *D6112:MAIN Program Entry Guide* for programming details.

**NOTE:** If not using a zone, DO NOT program that zone for a response. Wiring an end-of-line resistor to unused zone inputs is recommended.

- 16.4 Loop Summary LED** — The green LED on the D640 module is a loop summary status of the D640 Zone Expansion Center detection loops. This LED is not applicable to a particular account, nor does it govern any loops other than those connected directly to the D640 module. The LED is on if all D640 loops are normal, and is off if one or more loops are open or shorted.

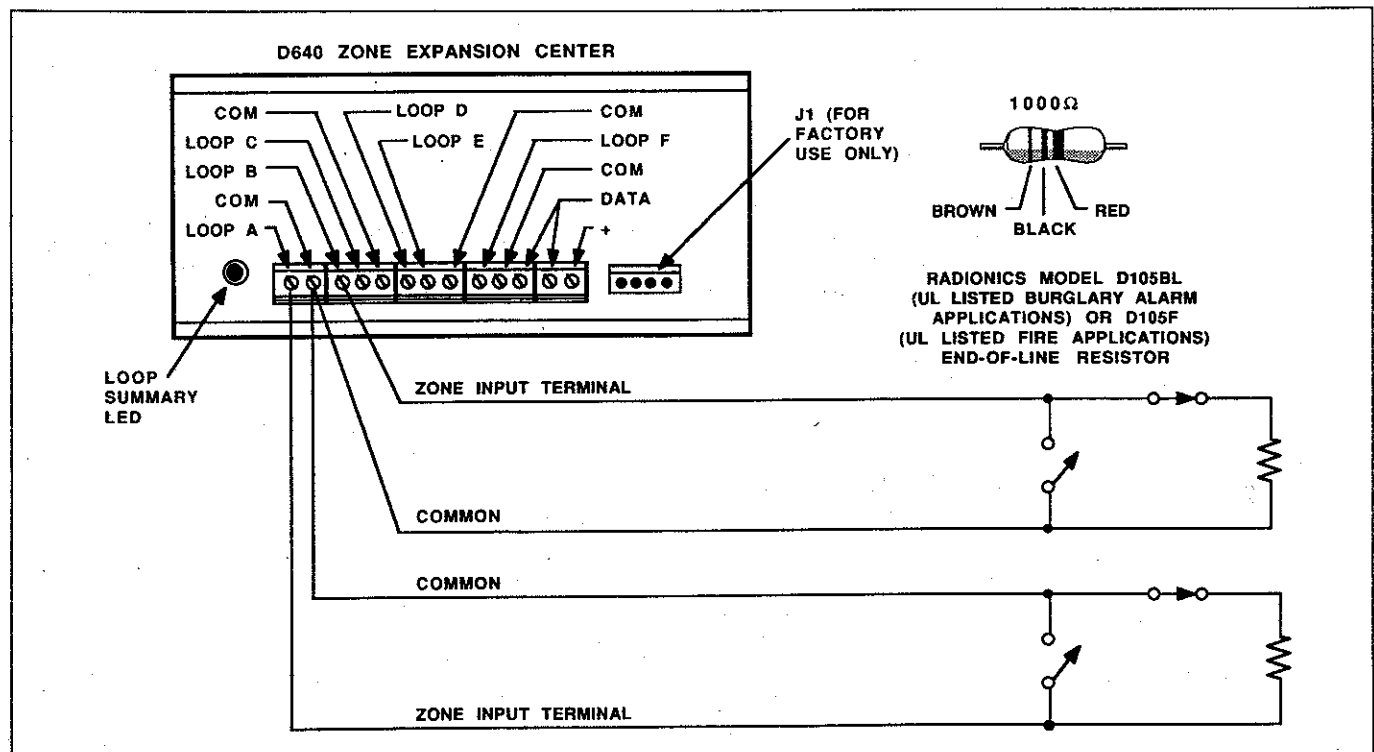


Figure 16: WIRING THE D640 PROTECTIVE ZONES

## 17. Guide for U.L. Certificated Systems

The D6112 Control/Communicator is U.L. listed for Central Station Grade A, Grade B, and Grade C Burglary Alarm, Digital Police Connection, Local Grade A Burglary Alarm, Household Fire Alarm, and Household Burglary Alarm applications. The D6112 should be installed in accordance with U.L. 681 Installation and Classification of Mercantile and Bank Burglar Alarm Systems, or U.L. 1641 Installation and Classification of Residential Burglar Alarm Systems, and/or NFPA 74 and NFPA 70 (NEC article 760) for fire applications. For U.L. certificated installations, at least one D620, D626, D630, or D636 Command Center must be installed with the D6112, and only Account #1 can be programmed.

### Programming Guidelines

U.L. certificated systems which include the D6112 must conform to several programming guidelines. Listed below are required program entries and enclosures for specific applications. Each section includes zone code entries. The specific function of each protective zone must be determined in order to verify that the correct entries have been chosen. Command 47 provides reset capability for smoke detectors and glass break detectors. When these devices are used in the system, set program item 5.12 *Cmd47* to *Yes*. Systems which report to a digital alarm receiver must have a phone number programmed in 2.2 *Ph*. See the *D6112 Program Entry Guide* for specific details on all program entries and zone code functions.

A trained technician representing the installing or servicing company must perform all operations necessary to display the program for verification by inspecting authorities. These operations include connecting the programmer to the D6112 Control/Communicator, copying the program into the D5100 Bar Code Programmer, and using the D5100 Bar Code Programmer to display program items appropriate to the application. The performance of a reporting system must be tested by transmitting appropriate signal(s) to the central station.

#### 17.1 Household Fire Alarm (reporting or non-reporting)

The D6112 can be housed in a D6103 enclosure for this application. At least one smoke detector, and at least one M806 bell (or equivalent) is required. The available emergency battery standby time for this unit is 10 hours plus a 4 minute alarm. The D6112 should be installed in accordance with the requirements of the NFPA 74 and NFPA 70 (NEC article 760) standards. For Residential Fire (NFPA 74) it is recommended that you limit your alarm power output to 300mA.

##### Mandatory Program Entries:

1.8 Bell	05 (minimum)	7.2 1Off	No
5.11 Cmd44	Yes	7.3 1Local	Yes (if non-reporting system)
5.12 Cmd47	Yes		No (if reporting system)
		7.14 1Ring1	No

Zone Code:	7.20 1ZnX	Digit One:	0
		Digit Two:	1
		Digit Three:	1 through 6
		Digit Four:	0 through 8
		Digit Five:	4 or 6

#### 17.2 Household Burglary Alarm (reporting or non-reporting)

The D6112 can be housed in a D6103 enclosure for this application. At least one M806 bell (or equivalent) is required. The minimum battery standby time for this application is 4 hours. The D6112 should be installed in accordance with the requirements of the U.L. 1641 standard.

##### Mandatory Program Entries:

1.8 Bell	05 (minimum)	7.4 1DlyIn	040 (maximum)
5.11 Cmd44	Yes	7.5 1DlyOut	060 (maximum)
7.2 1Off	No	7.14 1Ring1	No
7.3 1Local	Yes (if non-reporting system)		
	No (if reporting system)		

Zone Code:	7.20 1ZnX	Digit One:	0 through 5
		Digit Two:	0 through F
		Digit Three:	0 (if reporting system), 1 through 6
		Digit Four:	0 through 8
		Digit Five:	0 through 7

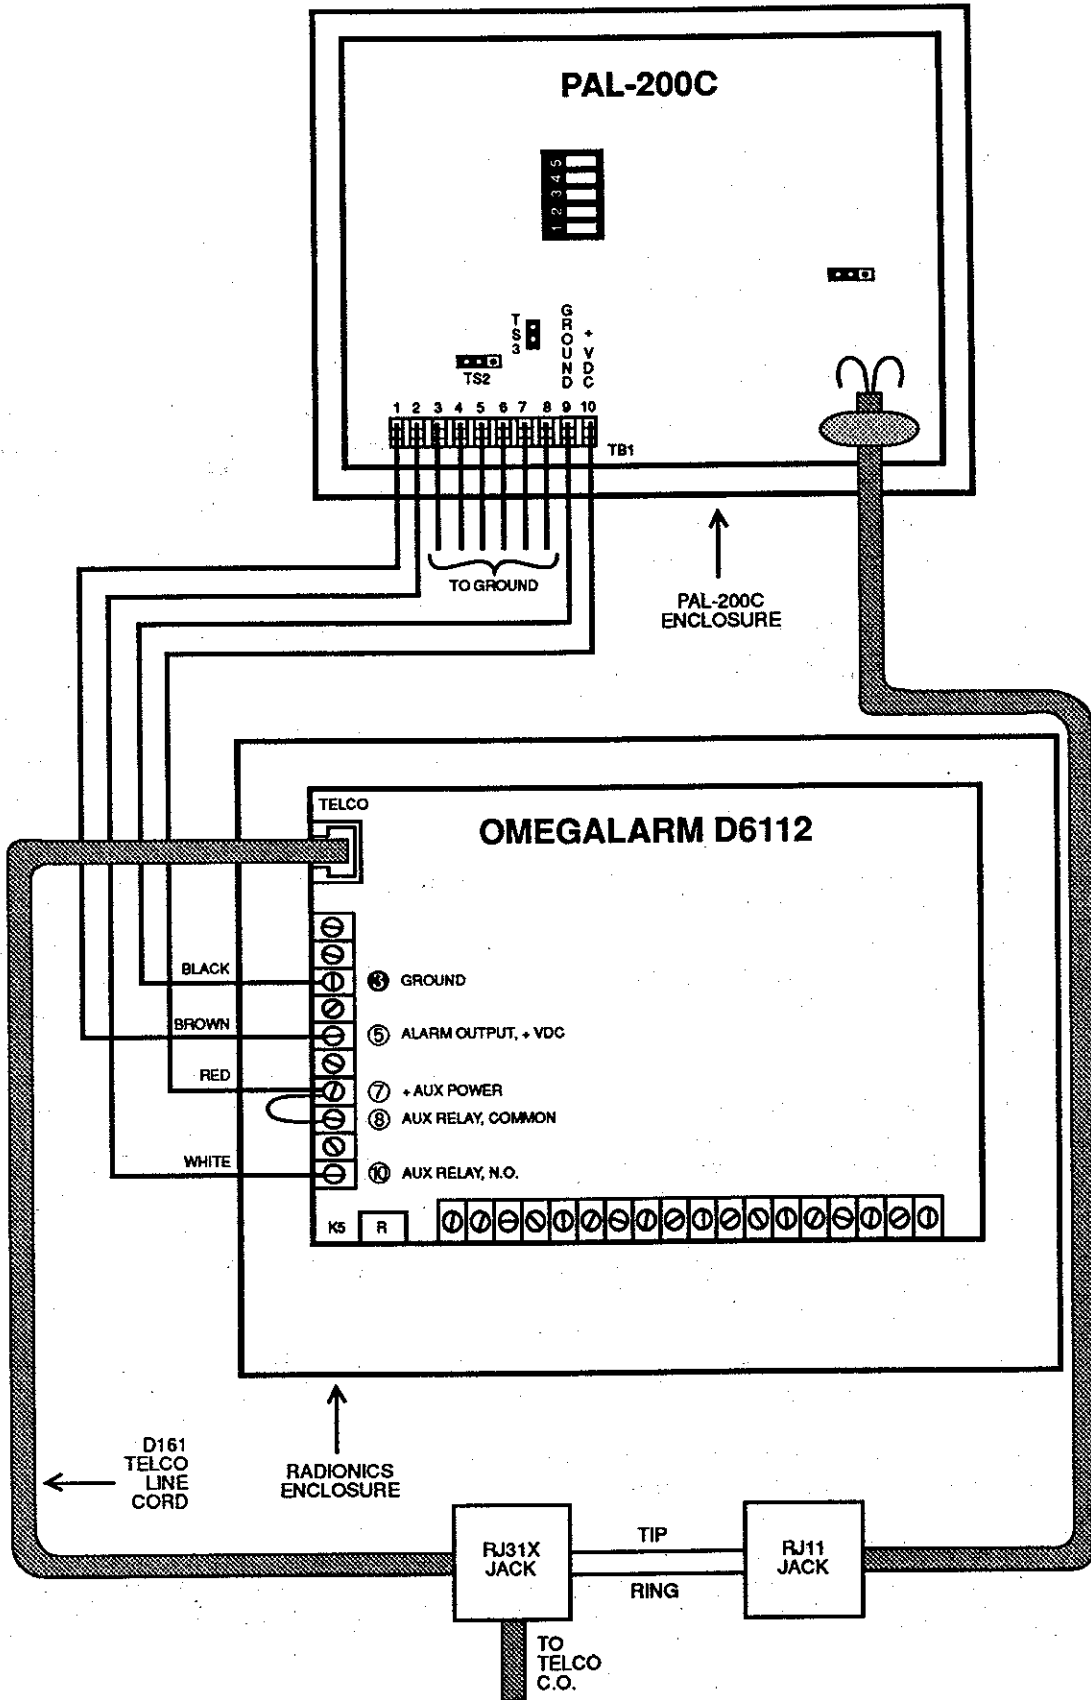


Figure 17: CONNECTION OF D6112 TO MORSE PAL-200C

## 18. Specifications

### 18.1 Radionics D6112 Control/Communicator Specifications

**Operating Voltage:**

*Primary:* 16.5 VAC 25 VA class 2  
plug-in transformer (supplied with unit).

*Secondary:* 12 VDC 6 AH sealed  
lead-acid type rechargeable battery.

**Auxiliary Power Output:**

Continuous 450 mA of current at  
10.2 to 14 VDC.

**Telephone Connection:** RJ38X jack

**Operating Temperature:**

0 to 50 °C (32 to 122 °F)\*

**Current Requirements:**

*Idle:* 75 mA

*Transmitting:* 150 mA

**Alarm Power Output:**

1.5 Amps of current at 10.2 to 14 VDC.  
Output programmable for steady or pulsed  
voltage supply. **For Residential Fire  
(NFPA 74) it is recommended that  
you limit your alarm power output to  
300mA.**

**Non-condensing Relative Humidity:**

5 to 85% at 30 °C (86 °F)

\* NOTE: It is recommended that the D6112 be installed in a temperature-controlled environment to prolong the life of the Control/Communicator, command centers, and batteries.

### 18.2 D620/D626/D630 Command Center Specifications

**Operating Voltage:**

Nominal 12 VDC supplied from the  
control/communicator auxiliary power supply.

**D626 Current Requirements:**

*Idle:* 60mA keypad lighted.  
*Maximum:* 120mA keypad lighted and  
warning tone "on."

**D620/D626/D630 Enclosure Dimensions:**

Height 4.56", Length 8.15", Depth .816"

**Operating Temperature:**

0 to 50 °C (32 to 122 °F)

**D620/D626/D630 Command Center Wiring:**

Four-conductor cable supplies data-in, data-out, positive voltage, and common.

**D630 Zone Wiring:**

Three two-wire loops with a 1000 ohm end-of-line resistor for zone supervision. Compatible with sensing devices having normally open dry contact output (wired in parallel) and normally closed dry contact output (wired in series).

**D620 Current Requirements:**

*Idle:* 50mA keypad lighted.  
*Maximum:* 80mA keypad lighted and  
warning tone "on."

**D630 Current Requirements:**

*Idle:* 60mA keypad lighted.  
*Maximum:* 90mA keypad lighted and  
warning tone "on."

**Color:** Warm gray.

**Non-condensing Relative Humidity:**

5 to 85% at 30 °C (86 °F)

**18.2 D620/D626/D630 Command Center Specifications (cont.)****Display:**

*Armed Status Indicators:* Annunciates account armed status by indicating perimeter arm, interior arm, instant arm and exit delay.

*Zone Status Indicators:* Account zone status displayed by eight individual indicators on the D620 and D630, and 16 individual indicators on the D626.

*AC Power Indicator:* Annunciates system power supply; either AC or battery.

*Command Mode Indicator:* Annunciates command mode for command center.

**18.3 D640 Zone Expansion Center Specifications****Operating Power:**

Nominal 12VDC supplied from the control/communicator auxiliary power circuit.

**Current Requirements:**

*Idle:* 45mA  
*Maximum:* 60mA

**Operating Temperature:**

0 to 50 °C (32 to 122 °F)

**Non-condensing Relative Humidity:**

5 to 85% at 30 °C (86 °F)

**Dimensions:**

Height 3.15", Length 5.90", Depth 1.10"

**Device Wiring:**

Four conductor cable supplies data-in, data-out, positive voltage, and common.

**D640 Protective Zone Wiring:**

Six two-wire loops, each with a 1000 ohm end-of-line resistor for zone supervision. Compatible with sensing devices having normally-open dry contact output (wired in parallel) and normally-closed dry contact output (wired in series).



**Radionics<sup>TM</sup>**

---

T H E      Q U A L I T Y      L E A D E R

1800 Abbott Street    P.O. Box 80012    Salinas, California 93912-0012

Technical Support: (800) 538-5807