



SILENT KNIGHT[®]

SK-5208

**Fire Control/
Communicator**

**Installation and
Operation Manual**

Part Number 151204C, 08/2001

Content

Section 1

Introduction 1-1

- 1.1 Model SK-5208 Features 1-1
- 1.2 About This Manual 1-2
 - 1.2.1 Optional Accessories 1-2
 - Limitations of Fire Alarm Systems 1-3

Section 2

Agency Listings and Requirements 2-1

- 2.1 Federal Communications Commission (FCC) 2-1
- 2.2 Underwriters Laboratories (UL) 2-2
 - 2.2.1 Requirements for All Installations 2-2
 - 2.2.2 Requirements for Central Station Fire Alarm Systems 2-2
 - 2.2.3 Requirements for Auxiliary Protected Fire Alarm Systems for Fire Alarm Service 2-2
 - 2.2.4 Requirements for Remote Station Protected Fire Alarm Systems, for Digital Communication or Polarity Reversal 2-2
- 2.3 Industry Canada Warnings 2-3
 - 2.3.1 Avis D'industrie Canada 2-4

Section 3

Control Panel Installation 3-1

- 3.1 Electrical Specifications 3-1
- 3.2 Environmental Specifications 3-1
- 3.3 Wiring Specifications 3-2
- 3.4 Control Board Components 3-3
- 3.5 Mounting the SK-5208 3-4
- 3.6 Current Draw Calculations 3-5
 - 3.6.1 Worksheet Requirements 3-5
 - Filling in the Current Draw Worksheet, Table 3-2 (Section 3.6.2) 3-5
 - 3.6.2 Current Draw Worksheet 3-6
 - 3.6.3 Maximum Battery Standby Load 3-7
- 3.7 AC Wiring 3-8
- 3.8 Backup Batteries 3-9
- 3.9 Terminal Strip Description 3-10
- 3.10 Telephone Line Connection 3-12
- 3.11 Detector Installation 3-13
 - 3.11.1 Class A (Style D) Zones 3-13
 - 3.11.2 Class B (Style B) Zones 3-14
 - 3.11.3 Four-Wire Smoke Detector Connection 3-15
 - 3.11.4 Two-Wire Smoke Detector Connection 3-16
- 3.12 Supervised Notification Appliance Outputs 3-17
- 3.13 Auxiliary Relays 3-18

3.14	Accessory Devices	3-19
3.14.1	Setting ID Codes	3-19
3.14.2	Model SK-5235 Remote Annunciator	3-20
3.14.2.1	Mounting the SK-5235 Remote Annunciator	3-20
3.14.2.2	Wiring the SK-5235	3-21
3.14.3	Model SK-5280 Status Display Module	3-22
3.14.3.1	Mounting the SK-5280	3-24
	Mounting the SK-5280 into SK-5208 Cabinet	3-24
	Mounting the SK-5280 into the SK-2190 Accessory Cabinet.	3-25
3.14.3.2	Wiring Relays	3-26
3.14.3.3	Wiring LEDs to Outputs	3-26
3.14.4	Model SK-5217 Zone Expander Installation	3-27
3.14.4.1	Zone Inputs	3-28
3.14.4.2	Mounting Instructions	3-29
	Mounting the SK-5217 into SK-5208 Cabinet	3-29
	Mounting the SK-5217 into the SK-2190 Accessory Cabinet.	3-30
3.15	Special Applications	3-31
3.15.1	Model 5220 Direct Connect Module	3-31
3.15.1.1	City Box Connection	3-31
3.15.1.2	NFPA 72 Polarity Reversal	3-32
3.15.2	Keltron 95M3158 Tones Transmitter Module	3-33

Section 4 Programming

4.1	Keypad Operation During Programming	4-1
4.1.1	Special Characters	4-2
4.1.2	Enabling Extended Programming List	4-2
4.2	Programming Flow	4-3
4.2.1	Zone Options	4-4
4.2.2	Misc System Option	4-5
4.2.3	NAC Cadence	4-6
4.2.3.1	Cadence Patterns	4-6
4.2.4	NAC Options	4-7
4.2.5	Relay Options	4-8
4.2.6	User Code	4-9
4.2.7	Account	4-10
4.2.8	Computer Options	4-11
4.2.8.1	Computer Code	4-11
4.2.9	Line Options	4-12
4.2.10	Misc Reporting	4-13
4.2.11	5280 Outputs	4-14
4.3	Programming Options	4-15

Section 5 Operation

5.1	On-board Touchpad and SK-5235 Operation	5-2
5.2	Acknowledge Operation	5-3
5.3	LED Indicators	5-3
5.4	Releasing Operation	5-4

5.4.1	Cross Alarm Operation	5-4
5.4.1.1	Default NAC Settings for Releasing	5-4
5.4.2	Double Interlock Releasing Operation	5-6
5.5	Smoke Alarm Verification	5-7
5.6	System Testing	5-8
5.6.1	Fire Drills	5-8
5.6.2	Walk Test	5-8
5.6.3	Automatic Self Test	5-8
5.6.4	Watchdog Circuit	5-8
5.7	Communicating with a Programming Computer	5-9
5.7.1	Programming From a Remote Computer Location	5-9
5.7.1.1	Having the Control Panel Call the Remote Computer	5-9
5.7.1.2	Having Remote Computer Call the Control Panel	5-10
5.7.2	Directly Connecting to a Programming Computer	5-11

Section 6

Reporting

6.1	Reporting Formats	6-1
6.2	Reporting Codes	6-2

Section 7

Troubleshooting

7.1	System Error Messages	7-1
7.2	Earth Ground Fault Troubleshooting	7-3

Appendix A

Compatible Devices

A.1	Smoke Detectors	A-1
	Two-Wire Smoke Detectors	A-2
	Four Wire Smoke Detectors	A-4
A.2	Notification Appliances	A-5

Section 1

Introduction

The Model SK-5208 is an 24-volt 10-zone fire alarm control panel (expandable up to 30 zones using SK-5217 Zone Expanders) with a digital communicator that meets NFPA 72 requirements. The SK-5208 cabinet can be surface mounted or semi-flush mounted.


1.1 Model SK-5208 Features

- Built-in two-line (16 Character each line) LCD display provides easy to read english language readouts
- 10 Initiation inputs, 8 Class B (Style B) and 2 zones that can be configured as Class B (Style B) or Class A (Style D), expandable to 30 zones
- Supervised zone expanders and I/O modules can be mounted remotely from the main control panel
- UL Listed
- Event History Buffer (approximately 150 events) with Date/Time stamp
- All zones are compatible with 2- and 4-wire detectors
- 8 selectable/programmable output pattern for notification appliance circuits (Including ANSI 3.41)
- Built-in Digital Alarm Communicator Transmitter (DACT)
- 4 Notification appliance circuits
- 4 programmable general purpose relays
- Programmable smoke verification, pre-alarm delay, cross zoning and enhanced verification mode features that can help minimize false alarms
- Capable of single or dual operation for water releasing services.
- Programmable from the built-in control panel touchpad, remote annunciator or Window[®] downloading software
- Built-in walk test

1.2 About This Manual

The *Model SK-5208 Fire Control/Communicator Installation Manual (P/N 151204)* is intended for those persons involved with the installation and maintenance of the SK-5208 panel. It is a comprehensive guide, providing detailed instructions, and should be kept for reference. As much as possible, we have tried to organize the manual chronologically by the tasks that need to be performed.

Table 1-1: Standards Used in this Manual

	A same graphic replicating the key that you press on a touchpad.
LCD DISPLAY MESSAGE	The font shown to the left represents messages that you see on a liquid crystal display (LCD) on the control panel and the remote annunciator.
1-1, 2-3, etc.	This manual is organized into sections. Section numbers are part of the page numbers. For example, 1-1 means Page 1 of Section 1.

1.2.1 Optional Accessories

Table 1-2: Compatible Modules Manufactured by Silent Knight

Model	What It Does
SK-5217 Zone Expander	Adds 10 zones to the SK-5208 for a total expansion of the system to 30 zones.
SK-2190 Accessory Cabinet	Used for remote mounting of the SK-5217 Zone Expander.
5220 Direct Connect Module	For direct alarming and trouble transmission from the SK-5208 to a supervising station.
SK-5235 Remote Annunciator	For remote annunciation, operation, and on-site programming.
SK-5280	The Model SK-5280 Status Display module provides outputs and control functions for remote annunciation of alarm, trouble, and supervisories for each zone.
SK-5495 Signal Power Expander	Notification circuit power for additional notification appliances. Provides additional 6A of 24 VDC, supervised.
SKSS Downloading Software Model 5660	For remote programming of the SK-5208 using a personal computer.
7181 Zone Converter	Converts a zone from Class B to Class A or from Class A to Class B. One 7181 per zone to be converted.

Limitations of Fire Alarm Systems

Manufacturer recommends that smoke and/or heat detectors be located throughout a protected premise following the recommendations of the current edition of the National Fire Protection Association Standard 72 (NFPA 72), manufacturer's recommendations, State and local codes, and the recommendations contained in Guide for the Proper Use of System Smoke Detectors, which is made available at no charge to all installing dealers. A study by the Federal Emergency Management Agency (an agency of the United States government) indicated that smoke detectors may not go off or give early warning in as many as 35% of all fires. While fire alarm systems are designed to provide warning against fire, they do not guarantee warning or protection against fire. A fire alarm system may not provide timely or adequate warning, or simply may not function, for a variety of reasons. For example:

- Particles of combustion or smoke from a developing fire may not reach the sensing chambers of smoke detectors because:
 - Barriers such as closed or partially closed doors, walls, or chimneys may inhibit particle or smoke flow.
 - Smoke particles may become cold, stratify, and not reach the ceiling or upper walls where detectors are located.
 - Smoke particles may be blown away from detectors by air outlets
 - Smoke particles may be drawn into air returns before reaching the detector.
- In general, smoke detectors on one level of a structure cannot be expected to sense fires developing on another level.
- The amount of smoke present may be insufficient to alarm smoke detectors. Smoke detectors are designed to alarm at various levels of smoke density. If such density levels are not created by a developing fire at the location of detectors, the detectors will not go into alarm.
- Smoke detectors, even when working properly, have sensing limitations. Detectors that have photoelectronic sensing chambers tend to detect smoldering fires better than flaming fires, which have little visible smoke. Detectors that have ionizing-type sensing chambers tend to detect fast flaming fires better than smoldering fires. Because fires develop in different ways and are often unpredictable in their growth, neither type of detector is necessarily best and a given type of detector may not provide adequate warning of a fire.
- Smoke detectors are subject to false alarms and nuisance alarms and may have been disconnected by users. For example, a smoke detector located in or near a kitchen may go into nuisance alarm during normal operation of kitchen appliances. In addition, dusty or steamy environments may cause a smoke detector to falsely alarm. If the location of a smoke detector causes an abundance of false alarms or nuisance alarms, do not disconnect the smoke detector; call a professional to analyze the situation and recommend a solution.
- Smoke detectors cannot be expected to provide adequate warning of fires caused by arson, children playing with matches (especially within bedrooms), smoking in bed, violent explosions (caused by escaping gas, improper storage of flammable materials, etc.).
- Heat detectors do not sense particles of combustion and are designed to alarm only when heat on their sensors increases at a predetermined rate or reaches a predetermined level. Heat detectors are designed to protect property, not life.
- Warning devices (including horns, sirens, and bells) may not alert people or wake up sleepers who are located on the other side of closed or partially open doors. A warning device that activates on a different floor or level of a dwelling or structure is less likely to awaken or alert people. Even persons who are awake may not notice the warning if the alarm is muffled by noise from a stereo, radio, air conditioner or other appliance, or by passing traffic. Audible warning devices may not alert the hearing-impaired (strobes or other devices should be provided to warn these people). Any warning device may fail to alert people with a disability, deep sleepers, people who have recently used alcohol or drugs, or people on medication or sleeping pills.
 - Please note that:
 - i) Strobes can, under certain circumstances, cause seizures in people with conditions such as epilepsy.
 - ii) Studies have shown that certain people, even when they hear a fire alarm signal, do not respond or comprehend the meaning of the signal. It is the property owner's responsibility to conduct fire drills and other training exercises to make people aware of fire alarm signals and instruct on the proper reaction to alarm signals.
 - iii) In rare instances, the sounding of a warning device can cause temporary or permanent hearing loss.
- Telephone lines needed to transmit alarm signals from a premises to a central station may be out of service or temporarily out of service. For added protection against telephone line failure, backup radio transmission systems are recommended.
- System components, though designed to last many years, can fail at any time. As a precautionary measure, it is recommended that smoke detectors be checked, maintained, and replaced per manufacturer's recommendations.
- System components will not work without electrical power. If system batteries are not serviced or replaced regularly, they may not provide battery backup when AC power fails.
- Environments with high air velocity or that are dusty or dirty require more frequent maintenance.

In general, fire alarm systems and devices will not work without power and will not function properly unless they are maintained and tested regularly.

While installing a fire alarm system may make the owner eligible for a lower insurance rate, an alarm system is not a substitute for insurance. Property owners should continue to act prudently in protecting the premises and the people in their premises and should properly insure life and property and buy sufficient amounts of liability insurance to meet their needs.

Section 2

Agency Listings and Requirements

2.1 Federal Communications Commission (FCC)

1. If requested by the telephone company, the following information must be provided before the SK-5208 can be connected to the phone lines:
 - A. Manufacturer: Silent Knight
 - A. Model Number: SK-5208
 - B. FCC registration number: AC6USA-34758-AL-E
 - Ringer equivalence: 0.5B
 - C. Type of jack (to be installed by the telephone company): RJ31X
4. This device may not be directly connected to coin telephone or party line services.
5. This device cannot be adjusted or repaired in the field. In case of trouble with the device, notify the installing company or return to:

Silent Knight
7550 Meridian Circle
Maple Grove, MN 55369-4927
612-493-6455
800-328-0103
6. If the SK-5208 causes harm to the telephone network, the telephone company will notify the user in advance that temporary discontinuance of service may be required. When advance notice is not practical, the telephone company will notify the user as soon as possible. Users have the right to file complaints, if necessary, with the Federal Communications Commission.
7. The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice to allow you to make the necessary modifications to maintain uninterrupted service.

Warning

This device has been verified to comply with FCC Rules Part 15. Operation is subject to the two following conditions: (1) This device may not cause radio interference; and (2) This device must accept any interference received including interference that may cause undesired operation.

2.2 Underwriters Laboratories (UL)

The SK-5208 is UL Listed as a control unit for use in Central Station Protected Premises, Local Protected Fire Alarm Systems, Auxiliary Protected Fire Alarm Systems for Fire Alarm Service (City Box), Remote Station Protected Fire Alarm Systems and water releasing service. If the SK-5208 and its accessories are to be used as part of a UL installation, carefully read the UL requirements in this section.

2.2.1 Requirements for All Installations

General requirements are described below. The sections that follow describe additional requirements for the type of installation (for example, Central Station Fire Alarm systems, Local Protected Fire Alarm systems, and so on).

1. Use UL listed smoke detectors compatible with the SK-5208. Refer to Appendix A.
2. Use UL listed compatible notification devices. Refer to Appendix A.

2.2.2 Requirements for Central Station Fire Alarm Systems

1. The Phone Line “Line Dial Type” must be selected for anything other than “Not Used”. (See programming Section 4.2.9).
2. On class A (style D) zones, the number of waterflow devices is limited to five.
3. Auxiliary relays may not be programmed to activate for Pre-Alarm. See programming Section 4.2.5.

2.2.3 Requirements for Auxiliary Protected Fire Alarm Systems for Fire Alarm Service

1. Follow the current load restrictions shown in Section 3.6.
2. The Model 5220 Direct Connect module must be installed (see Section 3.15.1 for wiring).

2.2.4 Requirements for Remote Station Protected Fire Alarm Systems, for Digital Communication or Polarity Reversal

1. Follow the current load restrictions shown in Section 3.6.
2. Use the SK-5208’s built-in dialer or install the Model 5220 Direct Connect Module (see Section 3.15.1).

2.3 Industry Canada Warnings

NOTICE:

The Industry Canada Label identifies certified equipment. This certification means that the equipment meets telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Number of all the devices does not exceed 5.

2.3.1 Avis D'industrie Canada

AVIS:

L'étiquette d'Industrie Canada identifie le matériel homologué. Cette étiquette certifie que le matériel est conforme aux normes de protection, d'exploitation et de sécurité des réseaux de télécommunications, comme le prescrivent les documents concernant les exigences techniques relatives au matériel terminal. Le Ministère n'assure toutefois pas que le matériel fonctionnera à la satisfaction de l'utilisateur.

Avant d'installer ce matériel, l'utilisateur doit s'assurer qu'il est permis de le raccorder aux installations de l'entreprise locale de télécommunication. Le matériel doit également être installé en suivant une méthode acceptée de raccordement. L'abonné ne doit pas oublier qu'il est possible que la conformité aux conditions énoncées ci-dessus n'empêche pas la dégradation du service dans certaines situations.

Les réparations de matériel homologué doivent être coordonnées par un représentant désigné par le fournisseur. L'entreprise de télécommunication peut demander à l'utilisateur de débrancher un appareil à la suite de réparations ou de modifications effectuées par l'utilisateur ou à cause de mauvais fonctionnement.

Pour sa propre protection, l'utilisateur doit s'assurer que tous les fils de mise à la terre de la source d'énergie électrique, des lignes téléphoniques et des canalisations d'eau métalliques, s'il y en a, sont raccordés ensemble. Cette précaution est particulièrement importante dans les régions rurales. Avertissement: L'utilisateur ne doit pas tenter de faire ces raccordements lui-même; il doit avoir recours à un service d'inspection des installations électriques, ou à un électricien, selon le cas.

AVIS:

L'indice d'équivalence de la sonnerie (IES) assigné à chaque dispositif terminal indique le nombre maximal de terminaux qui peuvent être raccordés à une interface. La terminaison d'une interface téléphonique peut consister en une combinaison de quelques dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'excède pas 5.

Section 3

Control Panel Installation

3.1 Electrical Specifications

Table 3-1: Electrical Specifications

Primary AC	120 Vrms at 60 Hz, 3A
Total DC Load	6A
Accessory Power	27.4 VDC, 1A
Smoke Power	27.4 VDC, 1A
Battery Charging Voltage	27.4
Battery Charging Current	.75 A max.
Class B (Style B) Circuit Current	95 mA max.
Telephone Minimum Input Sensitivity	35 dB
Good Phone Line Voltage	3 V
Maximum Low Battery Detect	20.4
Minimum Low AC Detect	98
Notification Power	3A max. per output (6A total)

3.2 Environmental Specifications

It is important to protect the SK-5208 control panel from water. To prevent water damage, the following conditions should be AVOIDED when mounting the units:

- Do not mount directly on exterior walls, especially masonry walls (condensation).
- Do not mount directly on exterior walls below grade (condensation).
- Protect from plumbing leaks.
- Protect from splash caused by sprinkler system inspection ports.
- Do not mount in areas with humidity-generating equipment (such as dryers, production machinery).

When selecting a location to mount the SK-5208 control panel, the unit should be mounted where it will NOT be exposed to temperatures outside the range of 0°C-49°C (32°F-120°F) or humidity outside the range of 10%-85% at 30°C (86°F) noncondensing.

See also the mounting recommendations in Section 3.5 for additional environmental specifications.

3.3 Wiring Specifications

To avoid induced noise (transfer of electrical energy from one wire to another), keep input wiring isolated from high current output and power wiring. Induced noise can interfere with telephone communication or even cause false alarms. Avoid pulling one multiconductor cable for the entire panel. Instead, separate the wiring as follows:

1/4" spacing must be maintained between each of these circuit types; as well as between power limited and non-power limited circuits.	Input/Output Type	Wiring
	High current:	AC power, speaker, and notification devices
	Low current:	Annunciator and zone circuit wiring
	Audio:	Telephone wiring

DO NOT pull wires from different groups through the same conduit. If you must run them together, do so for as short a distance as possible or use shielded cable. Connect the shield to earth ground at the panel only.

For the same reasons, wiring within the cabinet should be routed around the perimeter of the cabinet. It should not cross the printed circuit board where it could induce noise into the sensitive microelectronics or pick up unwanted RF noise from the high speed circuits.

High frequency noise, such as that produced by the inductive reactance of a speaker or bell, can also be reduced by running the wire through ferrite shield beads or by wrapping it around a ferrite toroid. Figure 3-1 provides an example.

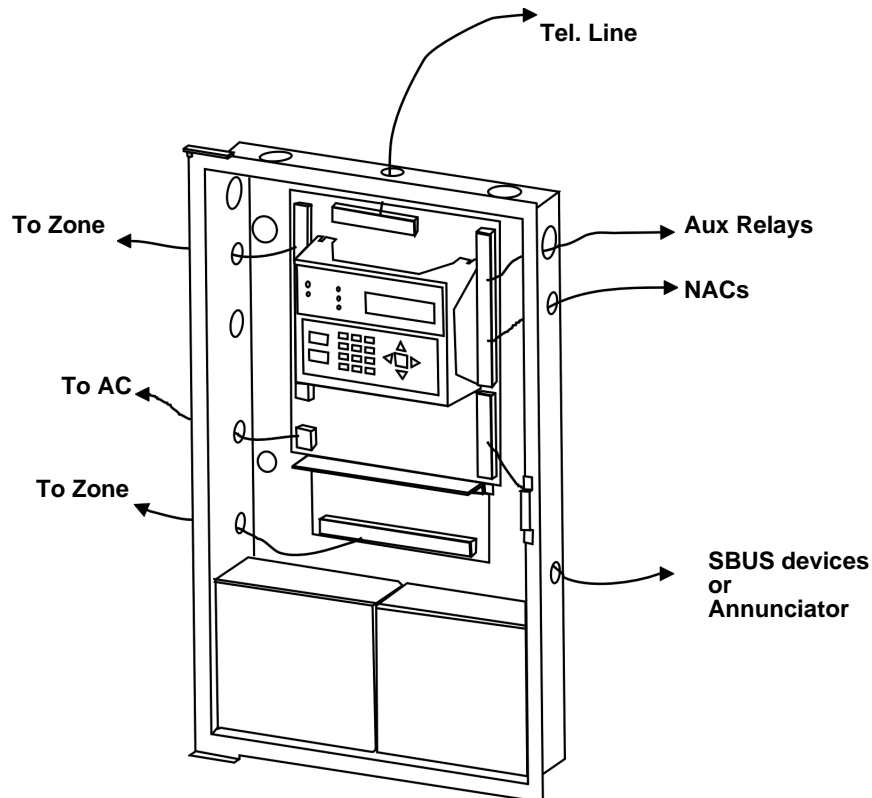


Figure 3-1 Wire Routing Example

3.4 Control Board Components

Figure 3-2 is a wiring diagram for wiring the Model SK-5208 panel.

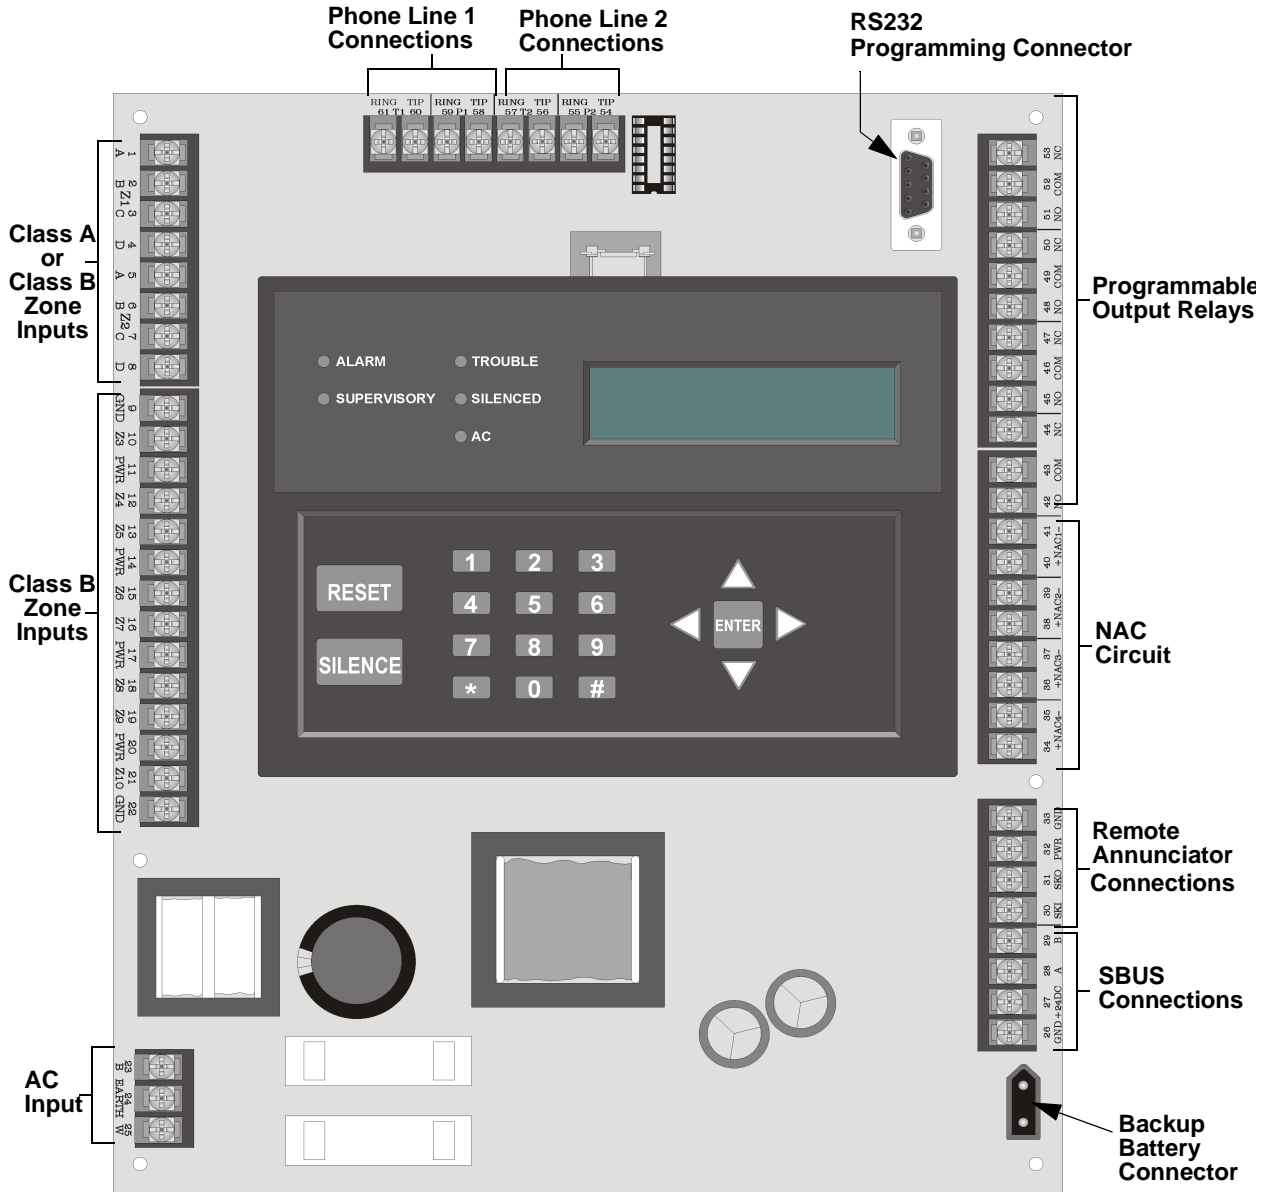


Figure 3-2 Model SK-5208 Board Layout

Refer to Section 3.9 for complete description of control panel terminal connections.

3.5 Mounting the SK-5208

Read the environmental specifications in section 3.2 on page 1 before mounting the SK-5208 panel.

The SK-5208 cabinet dimensions are:

16" W x 26.4" H x 4" D (40.64 cm W x 67.06 cm H x 10.16 cm D).

The SK-5208 panel should be located within a secured area, where it is accessible to main drop wiring runs and where it can be easily tested and serviced. End-users responsible for maintaining the panel should be able to hear alarms and troubles. When selecting a location, keep in mind that the panel itself is the main source of alarm and trouble annunciation.

When mounting on interior walls, use appropriate screw anchors in plaster. When mounting on concrete, especially when moisture is expected, attach a piece of 3/4 inch plywood to the concrete surface and then attach the SK-5208 to the plywood. Also mount any other desired components to the plywood.

DO NOT flush-mount the SK-5208 cabinet in a wall designated as a fire break.

3.6 Current Draw Calculations

3.6.1 Worksheet Requirements

The following steps must be taken when determining SK-5208 current draw and standby battery requirements.

Filling in the Current Draw Worksheet, Table 3-2 (Section 3.6.2)

1. For the SK-5208, the worst case current draw is listed for the panel and panel accessories. Fill in the number of devices that will be used in the system and compute the current draw requirements for alarm and standby. Record this information in Table 3-2 at Line A.
2. Add up the current draw for all smoke detectors and record in the table at Line B.
3. Add up all notification appliance loads and record in the table at Line C.
4. For notification appliances and auxiliary devices not mentioned in the manual, refer to the device manual for the current ratings.
5. Make sure that the total alarm current you calculated, including current for the panel itself, does not exceed 6.0 A. This is the maximum alarm current for the SK-5208 control panel.

If the current is above 6.0 A you will need to use a notification power expander(s) such as the 5495 to distribute the power loads so that the SK-5208 or the power expanders do not exceed their power rating. Refer to the current draw worksheets provided with the 5495 manuals so you do not exceed their power requirements.

6. Complete the remaining instructions in Table 3-2 for determining battery size requirements.

3.6.2 Current Draw Worksheet

Use Table 3-2 to determine current requirements during alarm/battery standby operation.
(Copy the page if additional space is required.)

Table 3-2: Current Draw Calculations

Device	# of Devices	Current per Device		Standby Current	Alarm Current	
For each device use this formula: This column X This column = Current per number of devices.						
SK-5208 Fire Panel (Current draw from battery)	1	Standby:	140 mA	140 mA		
		Alarm:	460 mA		460 mA	
Panel Accessories						
SK-5217 Zone Expander	(2 max.)	Standby:	60 mA	mA		
		Alarm:	260 mA		mA	
5220 Direct Connect		Standby:	15 mA	mA		
		Alarm:	15 mA		mA	
SK-5235 Annunciator	(6 max.)	Standby:	30 mA	mA		
		Alarm:	50 mA		mA	
SK-5280 Status Display Module	(8 max.)	Relay (max.)	Standby:	10 mA	mA	
			Alarm:	80 mA		mA
		Outputs	Per output	100 mA		mA
			Max.	700 mA		mA
7181 Zone Converter		Standby:	35 mA	mA		
		Alarm:	65 mA		mA	
A	Total System Current					
Smoke Detectors						
		Standby:	mA	mA		
		Alarm:	mA		mA	
		Standby:	mA	mA		
		Alarm:	mA		mA	
		Standby:	mA	mA		
		Alarm:	mA		mA	
		Standby:	mA	mA		
		Alarm:	mA		mA	
		Standby:	mA	mA		
		Alarm:	mA		mA	
B	Smoke Detector Current				mA	
Notification Appliances						
		Alarm:	mA		mA	
		Alarm:	mA		mA	
		Alarm:	mA		mA	
		Alarm:	mA		mA	
C	Notification Appliances Current				mA	
Additional Devices						
		Standby:	mA			
		Alarm:	mA			
		Standby:	mA			
		Alarm:	mA			
D	Additional Devices Current				mA	
E	Total current ratings of all devices in system (line A + line B + C +D)				mA	
F	Total current ratings converted to amperes (line E x .001):				A	
G	Number of standby hours (24 or 60 for NFPA 72, chapter 1, 1-5.2.5):				H	
H	Multiply lines F and G. Total standby AH				AH	
I	Alarm sounding period in hours. (For example, 5 minutes = .0833 hours)				H	
J	Multiply lines F and I. Total alarm AH				AH	
K	*Add lines H and J. Total ampere hours required				AH	

* Use next size battery with capacity greater than required.

3.6.3 Maximum Battery Standby Load

Table 3-3 shows the maximum battery standby load for the SK-5208 based on 24 and 60 hours of standby. The standby load calculations of line D in the Current Draw Calculation Worksheet (Table 3-2) must be less than the number shown in Table 3-3 for the battery size used and standby hours required.

Batteries larger than 17 AH will not fit into the SK-5208 cabinet and must be housed in the AB-33 Accessory Battery Cabinet. See Section 3.8 for battery installation.

Table 3-3: Maximum Battery Standby Load

Rechargeable Battery Size	Max. Load for 24 hrs. Standby, 5 mins. Alarm	*Max. Load for 60 hrs. Standby, 5 mins. Alarm
7 AH	270 mA	105 mA
12 AH	475 mA	190 mA
18 AH	685 mA	270 mA
33 AH	1.1 A	450 mA

- * *Required for NFPA 72 Auxiliary Protected Fire Alarm systems for Fire Alarm Service (City Box) and Remote Station Protected Fire Alarm systems (Polarity Reversal) and Digital Alarm Communicator/Transmitter (DACT).*

Warning!

Silent Knight does not support the use of batteries smaller than those listed in Table 3-3. If you use a battery too small for the installation, the system could overload the battery resulting in the installation having less than the required 24 hours standby power. Use Table 3-2 to calculate the correct battery amperes/hour rating needed for your installation.

3.7 AC Wiring

The Model SK-5208 power supply delivers 24 VDC at 6A for smoke detector power, notification device power, and accessory power. Figure 3-3 shows the AC connections to the SK-5208 control panel.

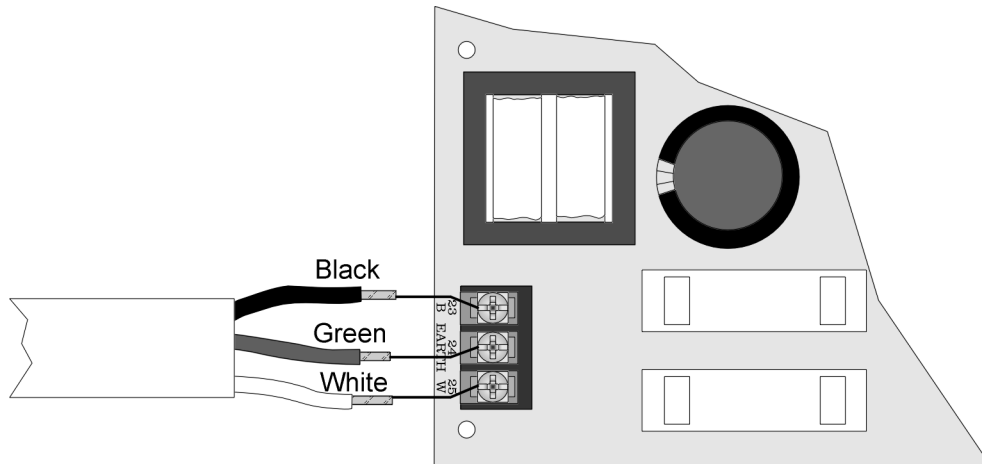


Figure 3-3 AC Wiring

Warning

To reduce the risk of electrical shock, make sure that all power has been turned off or disconnected before attempting to connect the Model SK-5208 control panel. Do NOT apply power to this panel until all accessories are properly connected.

Note: Note: All conduit and wiring connected to the SK-5208 must meet the applicable National Electric Code, NFPA Standards, state, and local building code requirements. In all cases, the authority having jurisdiction takes precedence.


3.8 Backup Batteries

The control panel battery charge capacity is 7.0 to 33.0 AH. Use 12V batteries of the same AH rating. Determine the correct AH rating as per your current load calculation (see 3.6.2).

Wire batteries in series to produce a 24-volt equivalent. Do not parallel batteries to increase the AH rating.

Batteries larger than 17 AH (not to exceed 33 AH) use the 33-AB Accessory Battery Cabinet. It is recommended that you replace the batteries every five years. The following steps and diagram explain how to connect the batteries.

1. Connect the black wire to the negative (-) side of battery #1.
2. Connect the jumper wire provided (P/N 140694) from the positive (+) side of battery #1 to the negative side of battery #2.
3. Connect the red wire to the positive (+) side of battery #2

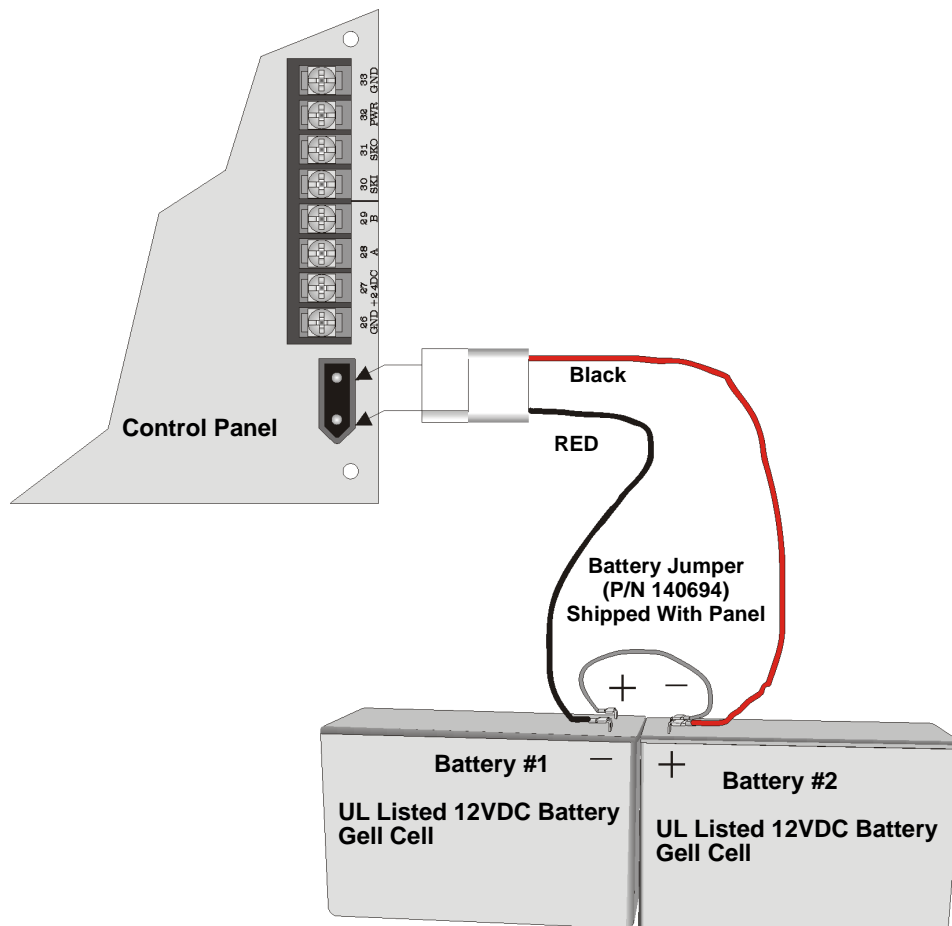

Caution

Apply AC power before connecting the batteries to the power supply to prevent arcing on battery terminals.

Note: The total current draw on smoke power, accessory power, and notification device outputs must not exceed 6A.

3.9 Terminal Strip Description

The terminal strips on the PC board are non-removable. Table 3-4 lists the functions of each terminal. See Section 3.4 for the board layout.

Table 3-4: Terminal Descriptions

Function	Terminal Number	Terminal Label	Comments
Zone 1 input.	1	A	Zone 1 input Class A (Style D) or Class B (Style B). See Section 3.11 for wiring configurations.
	2	B	
	3	C	
	4	D	
Zone 2 input	5	A	Zone 2 input Class A (Style D) or Class B (Style B). See Section 3.11 for wiring configurations.
	6	B	
	7	C	
	8	D	
Ground	9	GND	
Zone 3 input	10	Z3	Zone input Class B (Style B). Refer to Section 3.11.2. Power Limited at 100mA. Voltage 27.4 VDC.
Power (Zone 3 & 4)	11	PWR	
Zone 4 input	12	Z4	
Zone 5 input	13	Z5	
Smoke Power	14	PWR	
Zone 6 input	15	Z6	
Zone 7 input	16	Z7	
Smoke Power	17	PWR	
Zone 8 input	18	Z8	
Zone9 input	19	Z9	
Smoke Power	20	PWR	
Zone 10 input	21	Z10	
Ground	22	GND	
AC Power Connections	23	B	
	24	Earth	
	25	W	
SBUS Connections	26	GND	Used to connect SK-5217 Zone Expanders and 5280 Status Display Modules to the control panel. Accessory Power (terminals 26 and 27) provides 1 Amp total current.
	27	+24DC	
	28	A	
	29	B	
Remote Annunciator Connections	30	SKI	Used to connect 5235 remote annunciators to the control panel.
	31	SKO	
	32	PWR	
	33	GND	

Table 3-4: Terminal Descriptions

Function	Terminal Number	Terminal Label		Comments	
Notification Appliance Circuit 4	34	+	NAC4	3 Amp maximum per circuit. Voltage 27.4 VDC. Note: Total control panel current is 6 Amps.	
	35	-			
Notification Appliance Circuit 3	36	+	NAC3		
	37	-			
Notification Appliance Circuit 2	38	+	NAC2		
	39	-			
Notification Appliance Circuit 1	40	+	NAC1		
	41	-			
Auxiliary Relay 4	42	NO			Relay contacts are rated at 2.5 A, 24 VDC/24VAC (inductive rating). 5A, 24 VDC/24 VAC (resistive). Connect to power limited source only.
	43	COM			
	44	NC			
Auxiliary Relay 3	45	NO			
	46	COM			
	47	NC			
Auxiliary Relay 2	48	NO			
	49	COM			
	50	NC			
Auxiliary Relay 1	51	NO			
	52	COM			
	53	NC			
Telco Line 2	54	TIP	P2	Telephone line 2 connection terminals (see Section 3.10 for wiring diagram).	
	55	RING			
	56	TIP	T2		
	57	RING			
Telco Line 1	58	TIP	P1		
	59	RING			
	60	TIP	T1		
	61	RING			

3.10 Telephone Line Connection

The SK-5208 connects to two separate telephone lines to report data to the central station. An RJ31X jack should be installed by the telephone company for each line. Figure 3-4 shows how to wire the telephone line interconnect cords (not provided) to the SK-5208.

Note: To reduce the possibility of false alarms and transient damage, DO NOT bundle telephone wires together with initiation or notification device wires.

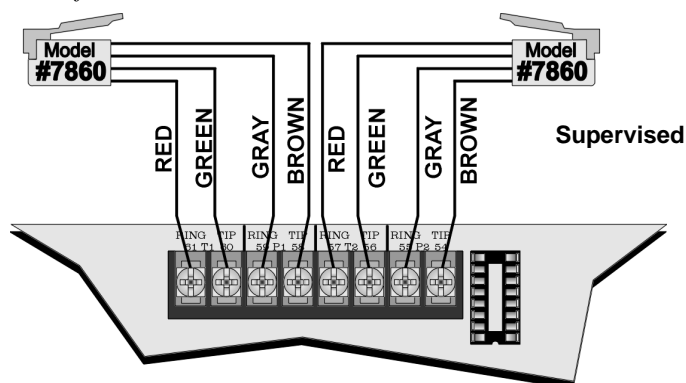


Figure 3-4 Telephone Line Connection

The letter designator on the phone input indicates whether it is the Telco or House side of the phone circuit. For example terminals 60 and 61 are labeled T1, T = Telco side of the phone circuit and terminals 58 and 59 are labeled P1, P = Premise (House) side of the phone circuit.

The SK-5208 has built-in dual phone line monitors. These circuits will detect any fault in the phone lines by monitoring the DC voltage present on the lines. If phone line voltage drops below 3 VDC and is not corrected within approximately 60 seconds, an audible trouble signal will sound and the panel will report a line fault trouble over the remaining phone line.

A situation could occur where both phone lines appear to be good, but the dialer cannot get through to the central station on the first line. In this case, the SK-5208 will switch phone lines and attempt the call again using the second line. Make sure the phone lines are programmed properly (see Section 4).

Note: To comply with industry standards, this product is equipped with line seizure. Any time the system's dialer needs to communicate with the central station, it will not be possible to use any telephones that are on the same line(s) as the system. Normally, this condition will last approximately one minute, but under adverse telephone circuit conditions, could last for as long as 15 minutes.

3.11 Detector Installation

3.11.1 Class A (Style D) Zones

Zones 1 and 2 may be selected through programming as Class A (Style D) zones (see Section 4.2.2 for zone style programming). See Section 3.11.2 for Class B (Style B) configuration.

Each class A zone is a four-wire circuit that allows an alarm to be detected even after a single open or ground fault occurs. When a single open or ground fault occurs, the audible trouble signal will sound and the SK-5208 will report the trouble to the central station (if programmed to report troubles).

Figure 3-5 shows how to wire a Class A (Style D) circuit. No end-of-line (EOL) resistors are needed for these zones. These zones must be wired using normally open contacts.

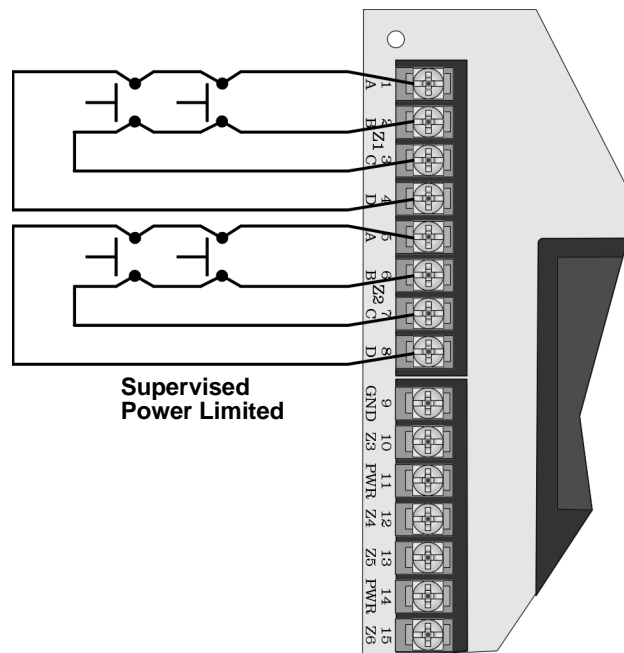


Figure 3-5 Class A (Style D) Supervised Fire Circuit

Maximum voltage:	25.6 VDC
Circuit Current:	95 mA

3.11.2 Class B (Style B) Zones

Zones 3 through 10 are Class B (Style B) only fire zones. Zones 1 & 2 may also be programmed as Class A (Style D) or Class B (Style B), see Section 4.2.2 for zone 1 & 2 zone programming.

Each Class B zone consists of a two-wire circuit that will detect the occurrence of an open in the circuit, but may not be able to detect an alarm after such an occurrence. The detection of an open will cause the audible trouble signal to sound and the SK-5208 will report the trouble to the central station (if programmed to do so).

Figure 3-6 shows how to wire a Class B (Style B) circuit. One side of each Class B circuit connects to a zone input terminal and the other side of each circuit connects to Smoke power. For each circuit, use a 4.7K-ohm EOL resistor wired in parallel with the normally open contact farthest from the panel.

Note: Zones 1 and 2 can be configured as either Class A or Class B. See also Section 3.11.1.

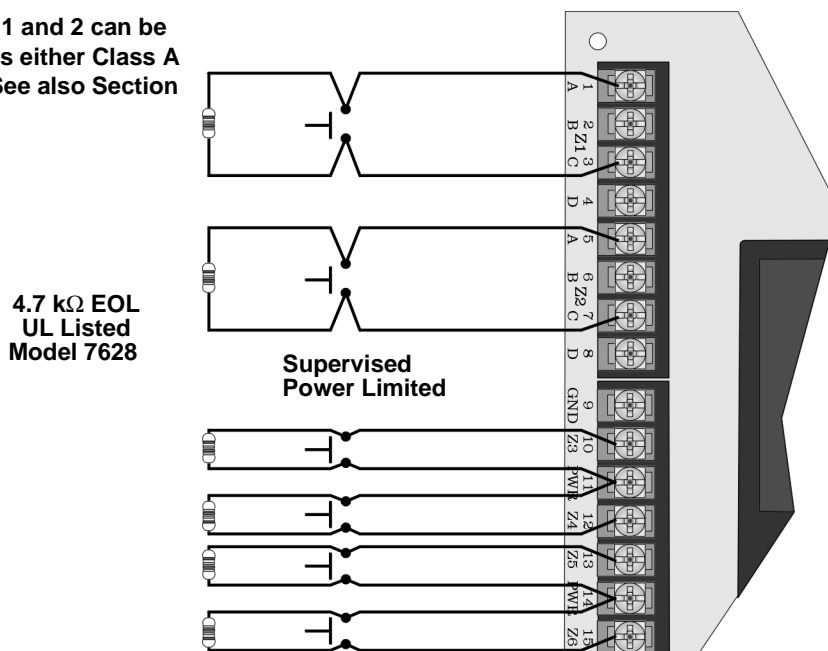


Figure 3-6 Model SK-5208 Class B (Style B) Circuits

Maximum circuit Resistance - 50 ohms

Maximum Total alarm current for all Class B (Style B) zones - 1 A

Maximum Standby Current per Zone: 3.0 mA

Maximum Alarm Current per Zone: 95 mA

3.11.3 Four-Wire Smoke Detector Connection

Figure 3-7 illustrates how UL listed four-wire smoke detectors must be connected to Class B (Style B) zones.

When wiring a four-wire smoke detector to the Class B (Style B) zones, you must use a Power Supervision Unit, such as Silent Knight's 160150.

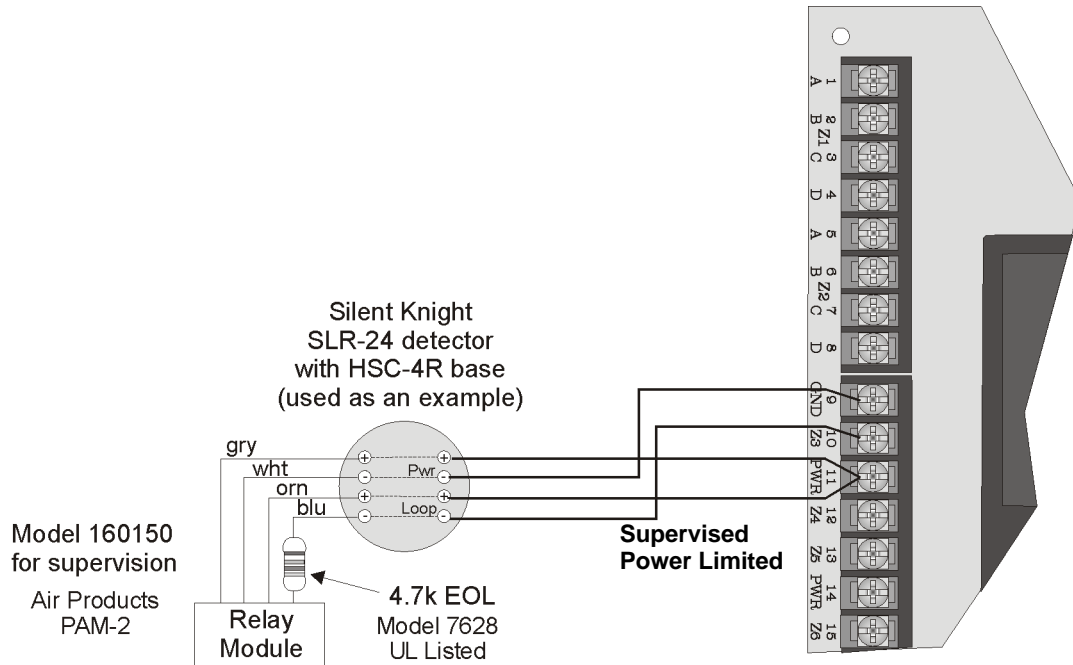


Figure 3-7 Four-Wire Smoke Detector Wiring

See Appendix A for a list of four-wire smoke detectors that may be used with the SK-5208.

Important!

When an alarm occurs on an 5217 zone expander, upon reset the power will drop only on the expander that initiated the alarm. See Figure 3-21.

3.11.4 Two-Wire Smoke Detector Connection

Figure 3-8 shows how to connect two-wire smoke detectors to Class B (Style B) zones.

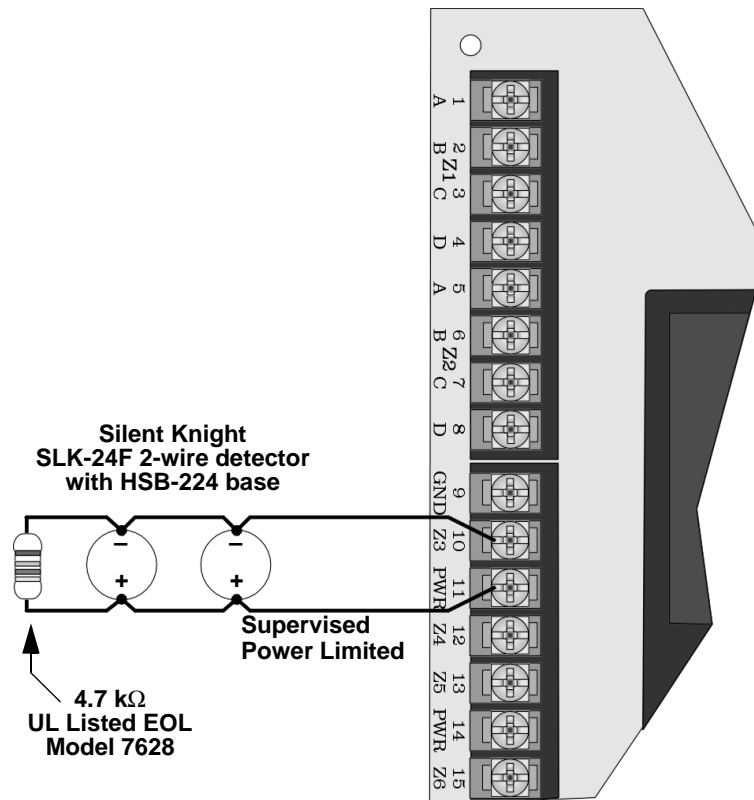


Figure 3-8 Two-Wire Smoke Detector Wiring

See Appendix A for a list of two-wire smoke detectors that may be used with the SK-5208.

Note: Two-wire detectors can be configured for Enhanced Mode. Enhanced mode is smoke verification for zones with 2-wire detectors and contact type devices, such as pull stations, used on the same circuit. If the alarm current is greater than 78 mA, the smoke verification cycle will not occur. See Section 4.2.1 Verify Options under the Zone Options Menu to program initiation circuits for enhanced mode.

3.12 Supervised Notification Appliance Outputs

Note: To reduce the possibility of false alarms and transient damage, DO NOT bundle telephone wires together with notification circuit wires.

The SK-5208 provides four Class B (Style Y) supervised notification circuit outputs to annunciate alarm conditions. For proper operation, you must use polarized sounding devices with a 4.7k ohm end-of-line resistor on each circuit. Figure 3-9 shows how to connect the notification circuits to the SK-5208.

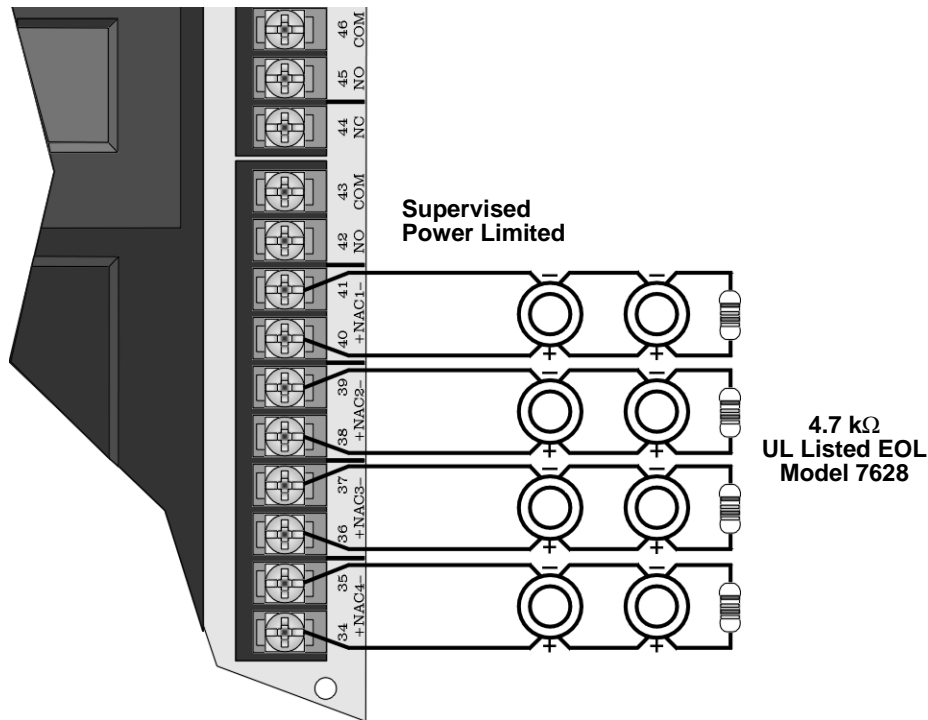


Figure 3-9 Supervised Notification Appliance Wiring

3 Amp maximum current draw from any single NAC output (not to exceed a total current draw of 6 amps for the control panel). See Appendix A for a list of the UL notification appliances that can be used with the SK-5208. Contact Silent Knight if you have any questions about compatible notification circuits.

3.13 Auxiliary Relays

The SK-5208 provides four programmable auxiliary relay outputs. Relays can be programmed to activate for the following conditions, either for all zones or by individual zone: pre-alarm (not acceptable for NFPA 72 Central Station), fire alarm, auxiliary alarm, alarm by zone, and system or circuit troubles (loss of AC, low battery, failed to communicate, phone line troubles, fire drills, and notification circuit troubles).

Refer to the SK-5208 programming manual for more information. Figure 3-10 shows the relay contact connections using a door holder application as an example.

Note: Relays programmed as “Trouble” will be active during normal state and deactivated during a trouble condition.

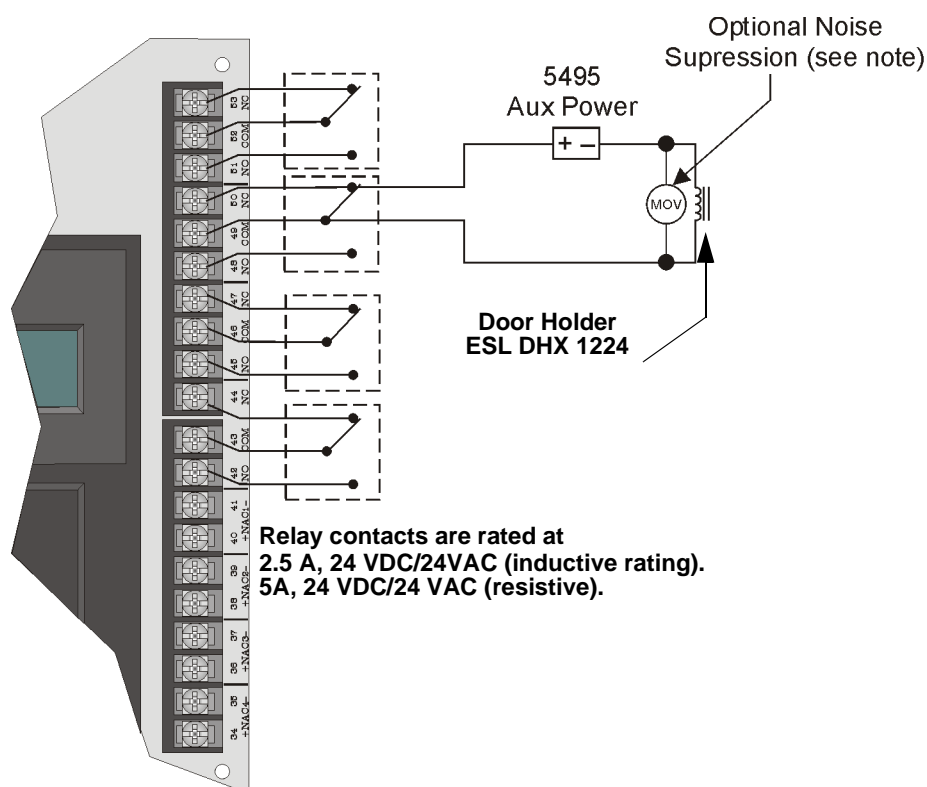


Figure 3-10 Auxiliary Relays

Note: Noise suppression devices, such as metal oxide varistors (MOVs), can be used with auxiliary relay outputs. Connect the noise suppression devices close to the auxiliary device. Refer to auxiliary device manufacturers installation manual for noise suppression requirements.

3.14 Accessory Devices

The section describes how to install the SK-5235 Remote Annunciator, SK-5217 Zone Expander, and the SK-5280 Status Display Module.

3.14.1 Setting ID Codes

Before installing the SK-5235, SK-5217 or SK-5280, you must first set their identification codes. Each Like device must be given its own identification codes. For example: each SK-5235 needs a unique ID code, but a SK-5235 can have the same ID code as a SK-5217. Each type of device has it's own devices type programmed into it enabling the control panel to distinguish between the different devices.

On the back of each device is a small 4-position dip switch used to set the ID code. Use the chart below to determine the dip switch positions for each possible ID code.

Table 3-5: ID Dip Switch Settings

ID Number	Switches			
	1	2	3	4
0 *	Down	Down	Down	Down
1	Up	Down	Down	Down
2	Down	Up	Down	Down
3	Up	Up	Down	Down
4	Down	Down	Up	Down
5	Up	Down	Up	Down
6	Down	Up	Up	Down
7	Up	Up	Up	Down
8	Down	Down	Down	Up

*Not supervised Up = On Down = Off

3.14.2 Model SK-5235 Remote Annunciator

The SK-5235 performs all system operation. It also provides trouble and alarm information and can be used for programming. The control panel can support up to six SK-5235 Remote Annunciators.

Upon initial power up, the address of each SK-5235 is displayed on the LCD. (Annunciators with address 0 will not be supervised.)

3.14.2.1 Mounting the SK-5235 Remote Annunciator

The SK-5235 Remote Annunciators must be mounted on a dual gang electrical box.

To mount the annunciator:

1. Remove the rear mounting plate by inserting a #4 flat blade screwdriver into the slots on the bottom edge of the annunciator. See Figure 3-11. Gently turn the screwdriver until the mounting plate pulls away from the frame.

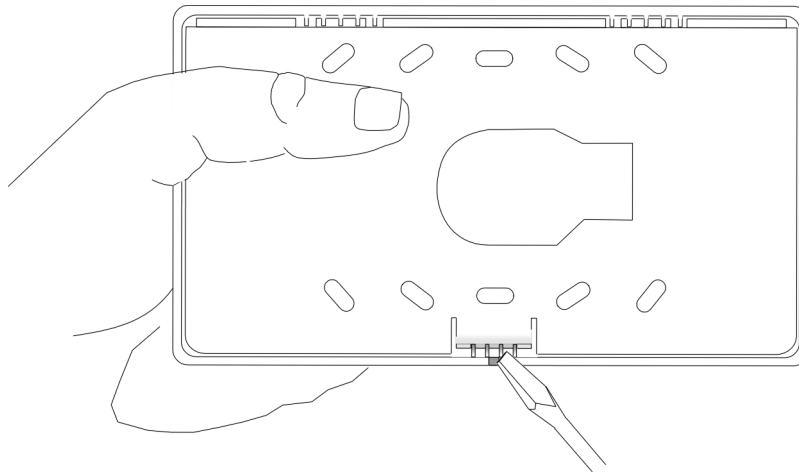


Figure 3-11 Rear Mounting Plate Removal

2. Secure it to the wall using #6 or #8 screws. The mounting plate should be oriented so that the word TOP is toward the top of the plate and facing you. A square hole is provided in the mounting plate to run the wiring to the annunciator.
3. When all of the wires have been connected to the annunciator, set the top of the annunciator over the tabs on the top of the mounting plate. Make sure the wires do not get pinched between the frame and the mounting plate. Press each corner of the bottom side onto the annunciator mounting plate until you hear it click. You may have to gently squeeze the annunciator (top to bottom) to align it while snapping the bottom edge into place.

3.14.2.2 Wiring the SK-5235

Follow these steps to properly wire the SK-5235 to the control panel.

1. Remove power from the control panel.
2. Wire the SK-5235s as shown in Figure 3-12.
3. Set the ID number. See Table 3-5.

Note: The ID number of 7 is reserved for the built-in touchpad on the SK-5208.

4. Reapply power to the control panel.

When the annunciator powers up, it will display its ID code and current status of the panel.

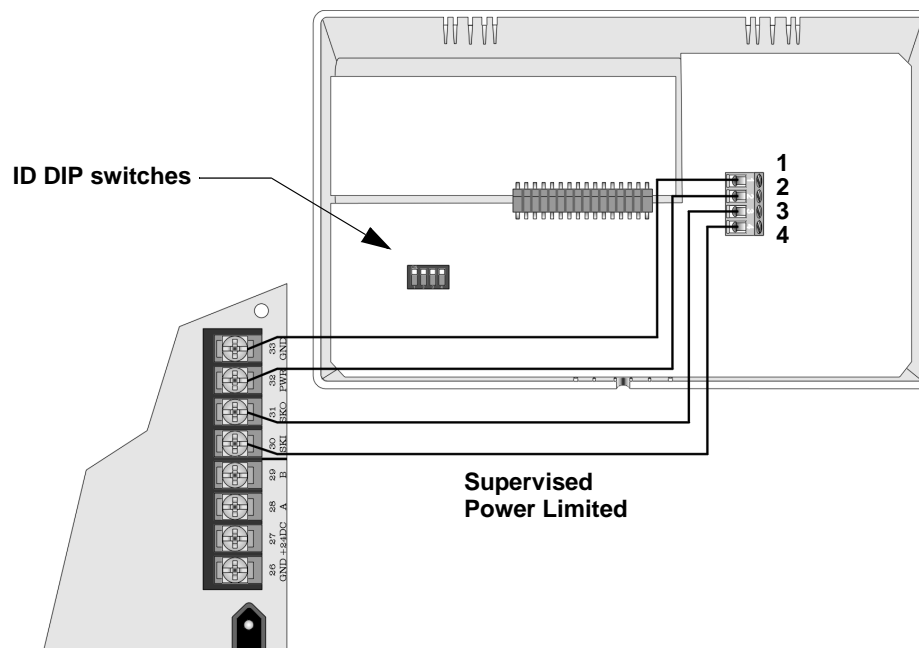


Figure 3-12 Model SK-5235 Connection

Note: Each 5235 touchpad can be individually supervised. See Section 4.2.2 for programming touchpads as supervised.

3.14.3 Model SK-5280 Status Display Module

The Model SK-5280 Status Display module provides outputs and control functions for remote annunciation of alarm, trouble, and supervisories for each zone. The system can supervise up to eight SK-5280 Status Display Modules.

Note: The driver outputs are non-supervised. Relays must be connected to power limited sources only.

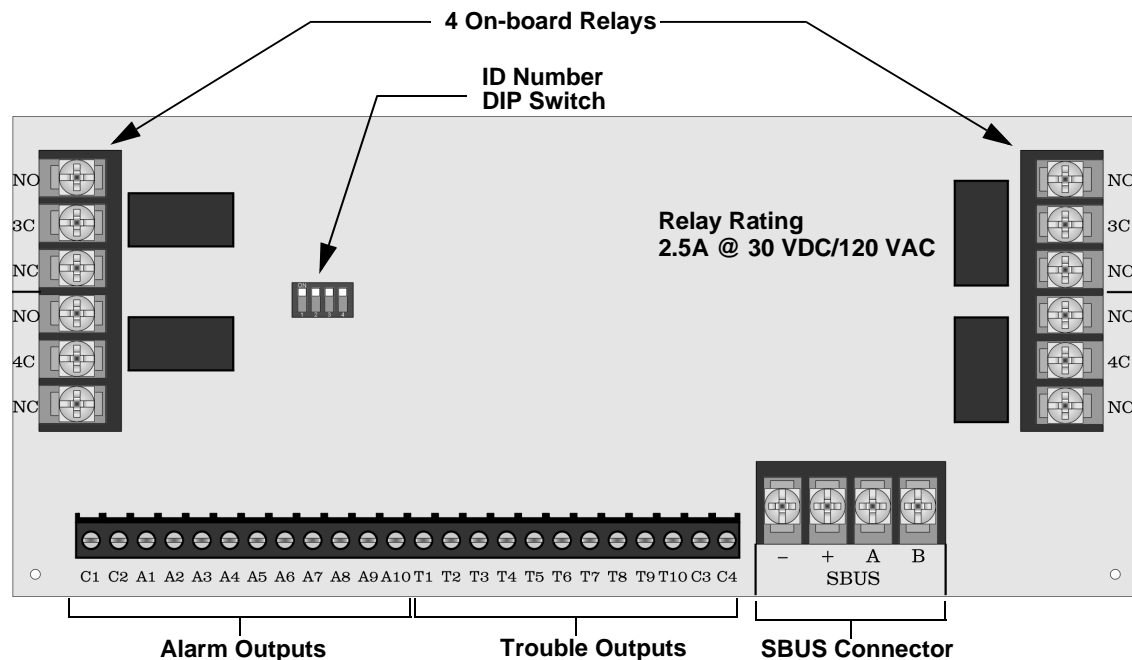


Figure 3-13 Model 5280 Board Layout

The SK-5280 has 1 connector which has 10 outputs for alarms and 10 outputs for trouble annunciation. These outputs are active low. Each output can provide up to 100 mA of current, with a total limitation of 700 mA.

The module has 4 normally open non-dedicated relays that can be wired to be active with any of the outputs.

Wire the SK-5280 as shown in Figure 3-14. Maintain a physical separation of one-half inch or more between field wires and connection points to prevent damage from transients.

Note: SILENCE does not affect SK-5280 outputs. To reset a SK-5280 output, the alarm or trouble condition must be restored.

Control Panel Installation

The SK-5280 can be used to interface to LED annunciator.

The SK-5280 can be programmed to indicate alarms and trouble status for; zones 1 - 10, zones 11 - 20, zones 21 - 30, or system status outputs. See Section 4.2.11.

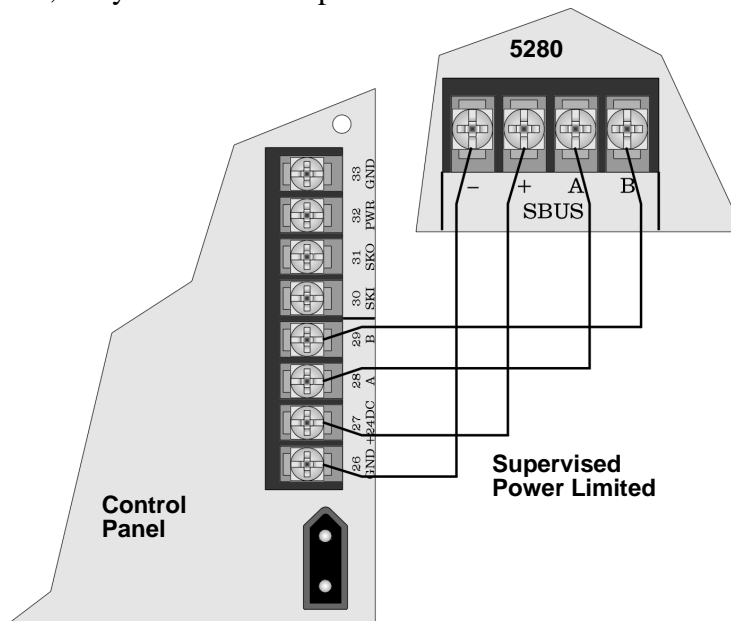


Figure 3-14 Model SK-5280 Connection to the Control Panel

3.14.3.1 Mounting the SK-5280

The SK-5280 into a metal bracket and standoffs in the SK-5208 cabinet or into SK-2190 accessory cabinet.

Mounting the SK-5280 into SK-5208 Cabinet

Follow these steps to properly mount the SK-5280 into the SK-5208 cabinet:

1. Remove power from the control panel.
2. Mount the SK-5280 onto the standoffs and bracket located in the cabinet. See Figure 3-15.

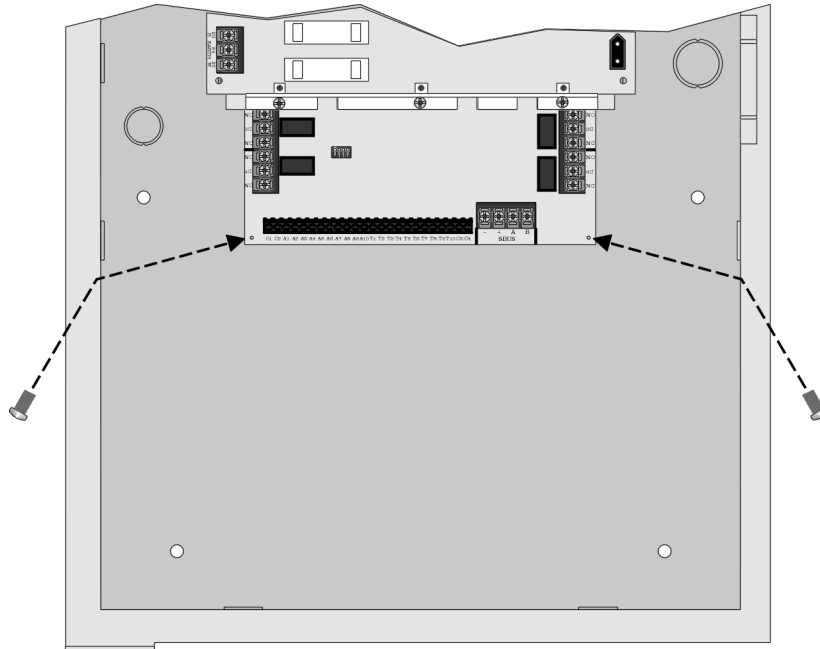


Figure 3-15 Installing the 5280 Into the 5208 Cabinet

3. Connect the SK-5280 to the SK-5208 control panel as shown in Figure 3-14.
4. Set the ID number (see Figure 3-13 for ID DIP switch location). See also Section 3.14.1 for information on setting ID numbers.
5. Reconnect power to the control panel.

Mounting the SK-5280 into the SK-2190 Accessory Cabinet.

Follow these steps to properly mount the SK-5280 into the SK-2190 cabinet:

1. Mount the remote cabinet using the cabinet mounting holes. See Figure 3-16.
Refer to Section 3.5 for proper cabinet mounting procedures.
2. Remove power from the control panel.
3. Mount the SK-5280 onto the standoffs and bracket located in the cabinet. See Figure 3-16.

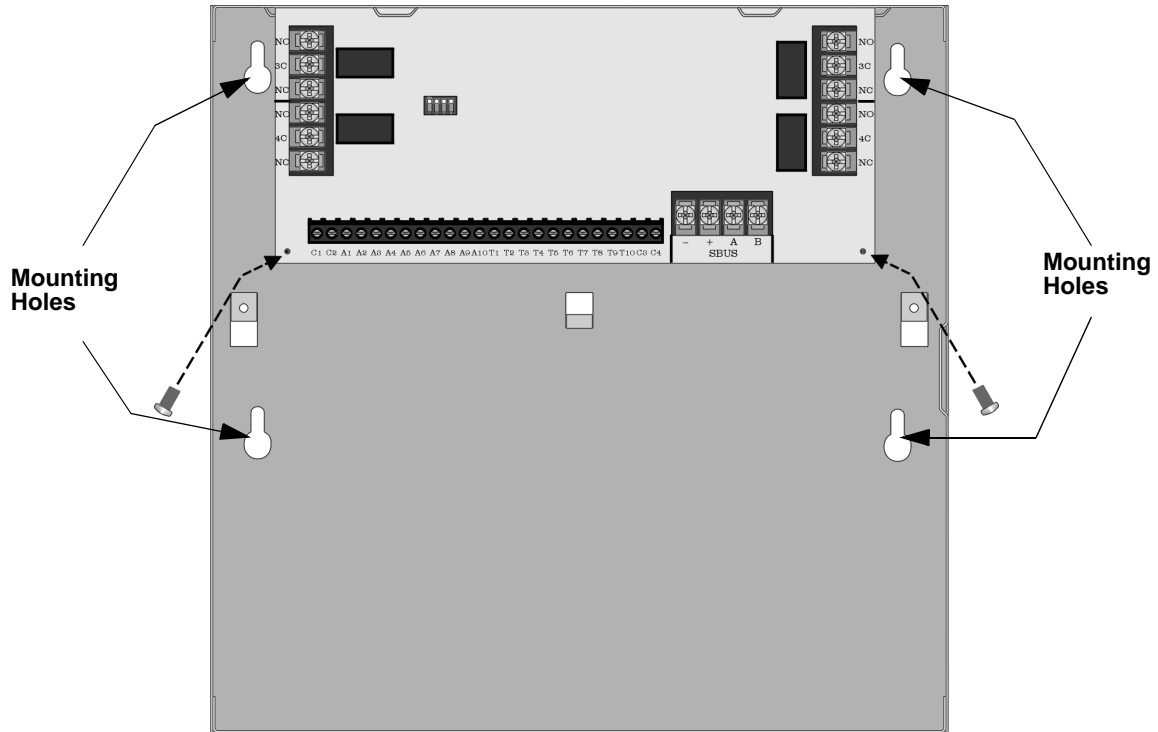


Figure 3-16 Model SK-5280 Remote Installation

4. Connect the SK-5280 to the SK-5208 control panel as shown in Figure 3-14.
5. Set the ID number (see Figure 3-13 for ID DIP switch location). See also Section 3.14.1 for information on setting ID numbers.
6. Reconnect power to the control panel.

3.14.3.2 Wiring Relays

The four on-board relays can be triggered by the active low outputs. For example, the alarm outputs can all be wired to relay 3 and the trouble outputs can be wired to relay 4 (see Figure 3-17).

C1 is the coil for the relay 1, C2 is the coil for relay 2, C3 and C4 are the coils for relays 3 and 4 respectively.

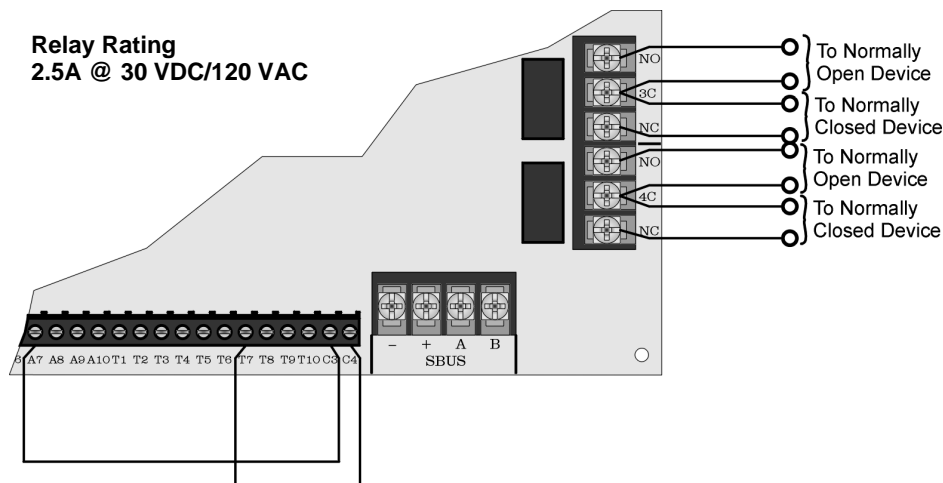


Figure 3-17 Relay Wiring on the SK-5280

Note: Figure 3-17 uses A7 and T7 to activate relays 3 and 4 as an example. However, any of the outputs can be used to trip any of the relays.

3.14.3.3 Wiring LEDs to Outputs

The outputs (A1-A10 and T1-T10) can be used to operate LEDs used in a remote annunciator (see Figure 3-18). Outputs A1-A10 are alarm outputs for the zones corresponding to those outputs. For example, if the SK-5280 is programmed to output for zones 11-20, then outputs A1-A10 will correspond with zones 11 through 20.

Outputs T1-T10 are trouble outputs for the zones corresponding to those outputs. for example, if the SK-5280 is programmed to output for zones 21-30, then outputs T1-T10 will correspond with zones 21-30.

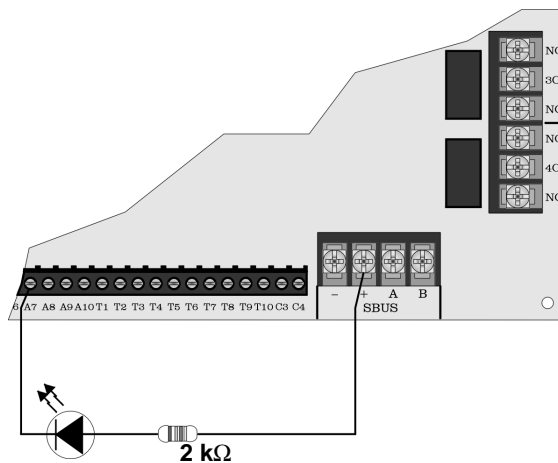


Figure 3-18 LED Wiring on the SK-5280

3.14.4 Model SK-5217 Zone Expander Installation

The Model SK-5217 provides the SK-5208 with ten additional Class B (style B) zones. The SK-5217 connects to the SK-5208 control panel via the SBUS as shown in Figure 3-19.

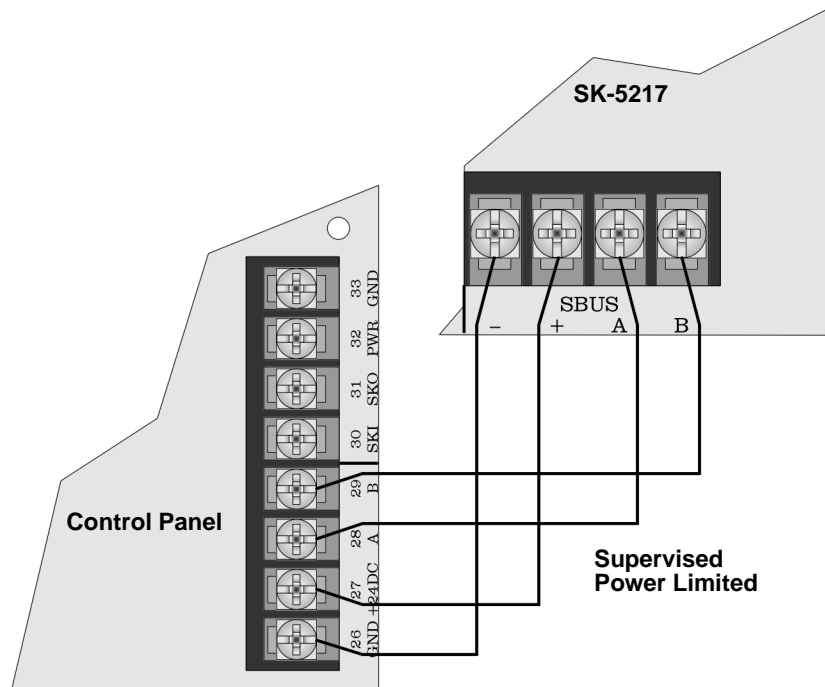


Figure 3-19 SBUS Connections

3.14.4.1 Zone Inputs

Figure 3-20 and Figure 3-21 shows how to wire detectors to the SK-5217. Use a 4.7k end of line resistor for each Class B circuit. The EOL must be wired in parallel with the normally open contact farthest from the panel. See Appendix A for a list of the smoke detectors that can be used with the SK-5217.

- Maximum circuit Resistance - 50 ohms
- Maximum Total alarm current for all class B (style A) zones - 1 A
- Maximum Standby Current per Zone: 3.0 mA
- Maximum Alarm Current per Zone: 95 mA
- Voltage: 27.4 VDC

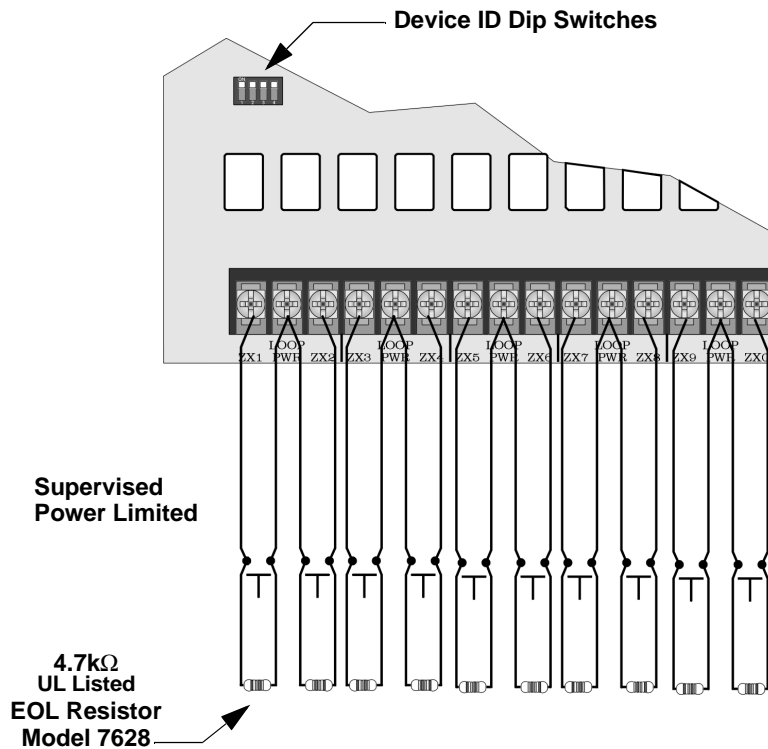


Figure 3-20 Model SK-5217 Two-wire Detectors

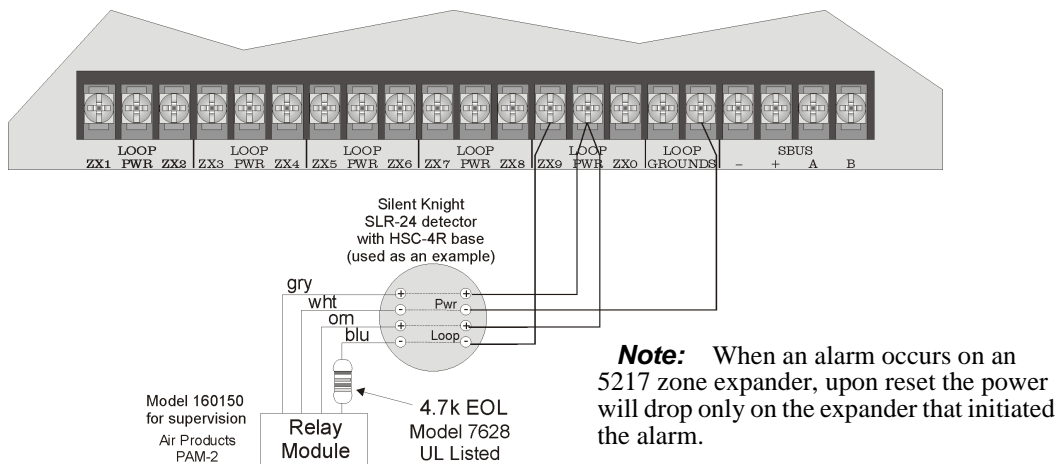


Figure 3-21 4-Wire Detector Connections

3.14.4.2 Mounting Instructions

The SK-5217 into a metal bracket and standoffs in the SK-5208 cabinet or into SK-2190 accessory cabinet.

Mounting the SK-5217 into SK-5208 Cabinet

Follow these steps to properly mount the SK-5217 zone expander into the SK-5208 cabinet:

1. Remove power from the control panel.
2. Mount the SK-5217 onto the standoffs and bracket located in the cabinet. See Figure 3-22.

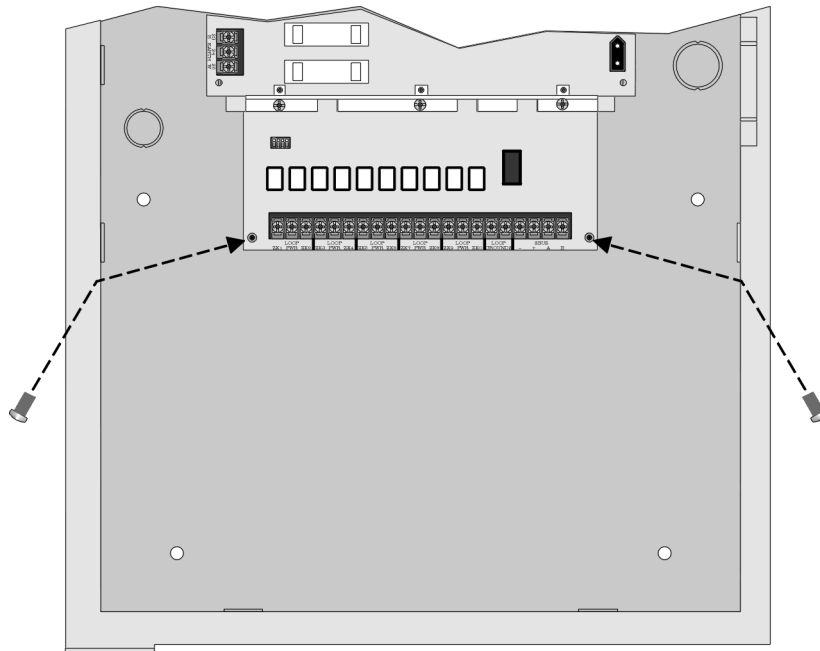


Figure 3-22 Installing the SK-5217 Into the SK-5208 Cabinet

3. Connect the SK-5217 to the SK-5208 control panel as shown in Figure 3-19.
4. Wire the zone inputs to the zone expander as shown in Figure 3-20.
5. Set the ID code (see Section 3.14.1).
 - If ID code 1 is selected the SK-5217 will input zones 11 - 20.
 - If ID code 2 is selected the SK-5217 will input zones 21 - 30.
6. Reconnect power to the control panel.

Mounting the SK-5217 into the SK-2190 Accessory Cabinet.

Follow these steps to properly mount the SK-5217 zone expander into the SK-2190 cabinet:

1. Mount the remote cabinet using the cabinet mounting holes. See Figure 3-23.
Refer to Section 3.5 for proper cabinet mounting procedures.
2. Remove power from the control panel.
3. Mount the SK-5217 onto the standoffs and bracket located in the cabinet. See Figure 3-23.

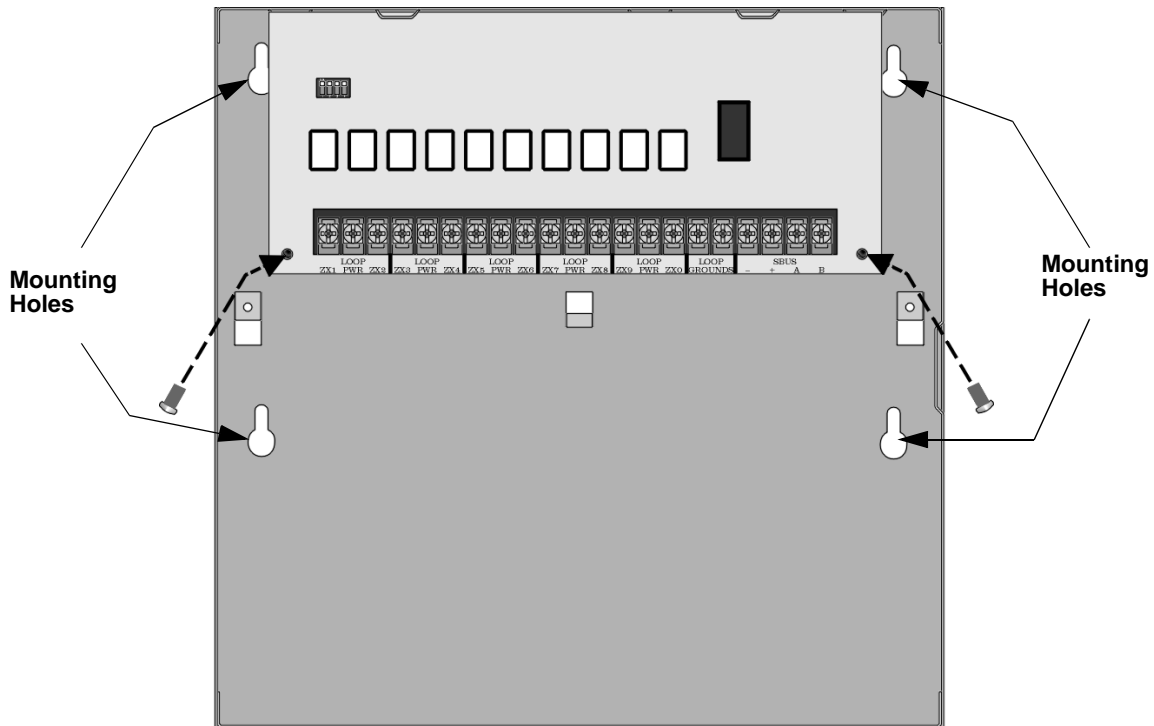


Figure 3-23 Model SK-5217 Remote Installation

4. Connect the SK-5217 to the SK-5208 control panel as shown in Figure 3-19.
5. Set the ID code (see Section 3.14.1).
If ID code 1 is selected the SK-5217 will input zones 11 - 20.
If ID code 2 is selected the SK-5217 will input zones 21 - 30.
6. Wire the zone inputs to the zone expander as shown in Figure 3-20.

3.15 Special Applications

3.15.1 Model 5220 Direct Connect Module

The 5220 Direct Connect module can be used with the SK-5208 to meet NFPA 72 standards. The 5220 requires four connections to the SK-5208 and provides outputs for city box and polarity reversal applications. The 5220 cannot be used for sprinkler supervisory.

The 5220 provides a current that reverses polarity during alarm or removes current during a trouble condition.

*Note: The 5220 Direct Connect Module will activate for alarm and trouble conditions during a Walk Test. To disable alarm activation during Walk Test, bypass the NAC programmed for Direct Connect before entering the Walk Test mode. To bypass the NAC, press; 10 + NAC# + * + Code (repeat to un-bypass NAC). The Direct Connect relay will indicate trouble until the NAC is un-bypassed.*

3.15.1.1 City Box Connection

This section describes how to connect the SK-5208 to a municipal fire alarm box or "city box" as required by NFPA 72 Auxiliary Protected Fire Alarm systems for fire alarm service. The city (master) box is an enclosure that contains a manually operated transmitter used to send an alarm to the municipal communication center which houses the central operating part of the fire alarm system.

The maximum coil and wire resistance (combined) must not exceed 30 ohms.

To install the 5220 for city box connection:

1. Locate the knockout on the right side of the SK-5208 cabinet to connect the 5220 using a short piece of conduit (must not exceed 20 feet in length).
2. Wire the 5220 to the SK-5208 as shown in Figure 3-24. This drawing also shows how to connect the city box coil to terminals 3 and 4 on the 5220.
3. Program NAC #4 to be direct connect from the NAC Options menu. Relay #4 will automatically be configured to indicate system troubles.

Note: It is not possible to reset the remote indication until you clear the condition and reset the SK-5208.

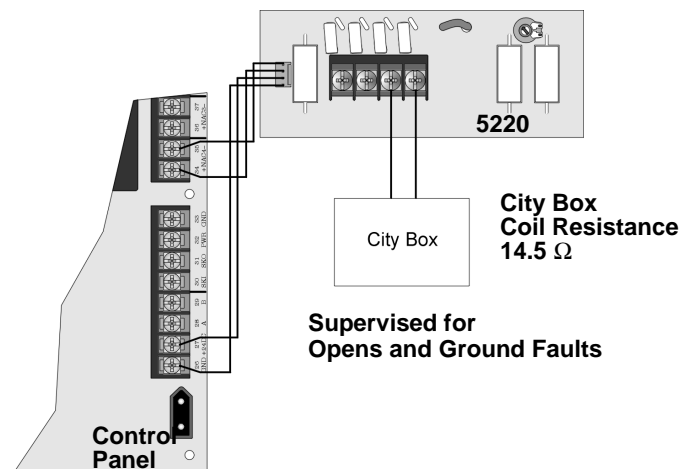


Figure 3-24 City Box Connection

3.15.1.2 NFPA 72 Polarity Reversal

When the 5220 is wired and programmed for polarity reversal, it reports alarm and trouble events to a remote site. Alarms will override trouble conditions and it will not be possible to reset the remote indicator until the condition is cleared and the SK-5208 panel is reset.

If an alarm condition occurs, the alarm relay will close, overriding the trouble condition.

To install the 5220 for polarity reversal, follow the steps below:

1. Locate the knockout on the right side of the SK-5208 cabinet to connect the 5220 using a short piece of conduit (must not exceed 20 feet in length).
2. Wire the 5220 to the SK-5208 using the four-wire pigtail provided as shown in Figure 3-25 (next page). This diagram also shows how to connect the 5220 to the remote indicator.
3. Program one of the notification circuits to be Direct Connect (Figure 3-25 uses NAC 4 and Relay 4). The relay and NAC circuits are paired when selected as direct connect. For example, if NAC 4 is programmed as Direct Connect then relay 4 used for the trouble output. Do not program the NAC for Silence or Supervision (NACs with EOL).
4. If necessary, adjust circuit current using potentiometer R10 on the 5220 board. Normal circuit current is 4-to-8 mA with a 1k ohm remote station receiving unit. Maximum circuit resistance is 3k ohm.

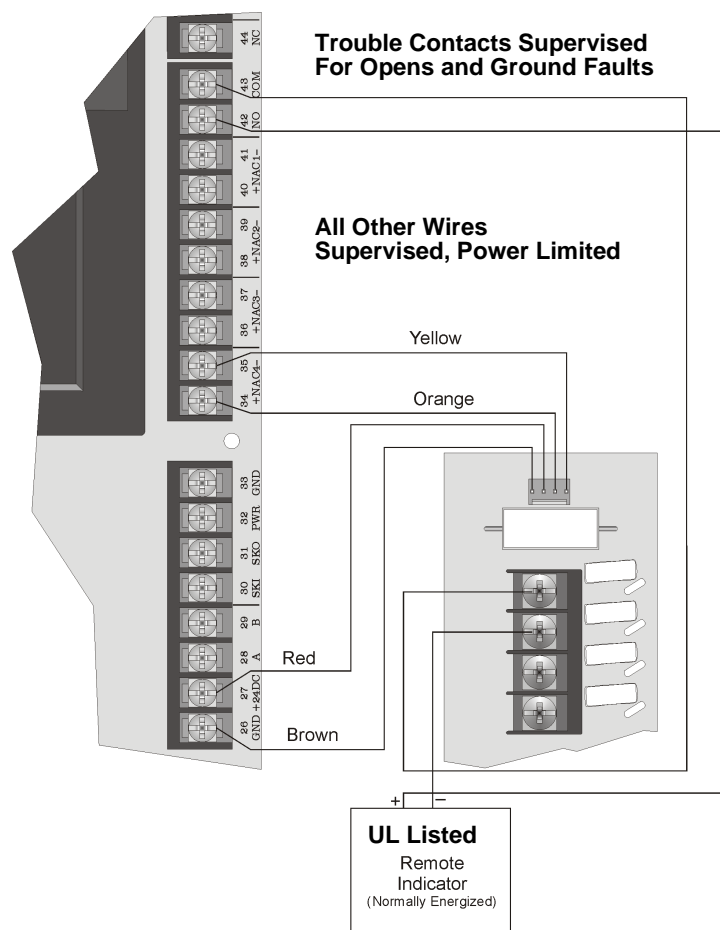



Figure 3-25 Polarity Reversal Connection

3.15.2 Keltron 95M3158 Tones Transmitter Module

This section of the manual shows the specific connections you will make when wiring the SK-5208 to the Keltron 95M3158 Tones Transmitter Module (3158). Refer to the installation sheet shipped with the 95M3158 for complete information. (Note: The 3158 is not available from Silent Knight.)

Note: The 3158 Keltron Module must be mounted within 3 feet of the control panel and all wiring must be run in conduit. The Keltron Module shall be enclosed in the TBX1 enclosure.

1. Wire the 3158 to the SK-5208 as shown in the Figure 3-26.
2. Program NAC 4 for Direct Connect (see Section 4.2.4).
3. Program NAC 3 for Supervisory (see Section 4.2.4).
4. Program NACs 3 and 4 as unsupervised (NACs With EOL). See Section 4.2.4.
5. Program NAC 3 cadence as Steady (see Section 4.2.3).

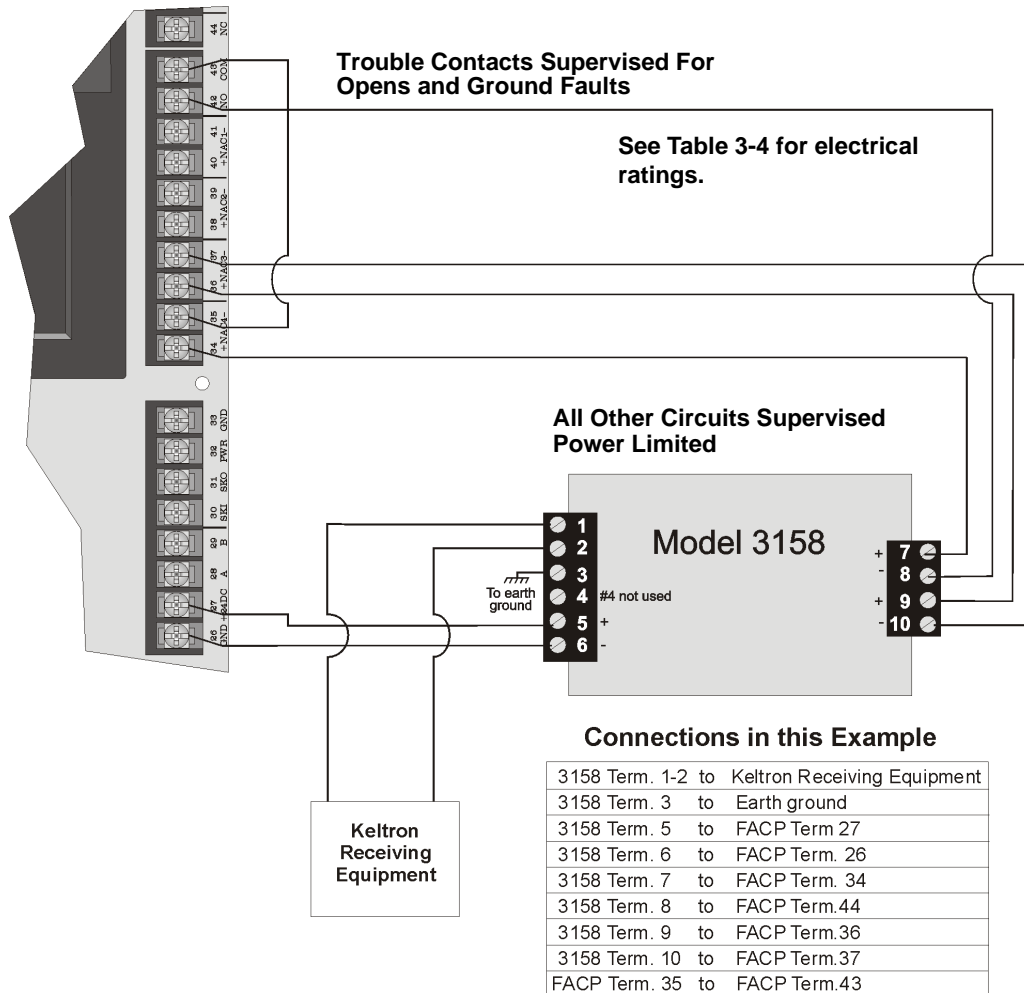

Note: The term FACP Term. refers to terminals on the SK-5208

Figure 3-26 Wiring the Keltron 3158 to the SK-5208













Section 4

Programming

The SK-5208 control panel can be programmed from either the on-board annunciator or the SK-5235 remote annunciator. You must be in Programming Mode to program the control panel.

4.1 Keypad Operation During Programming

This section describes the function of the buttons on the keypad while in program mode.

Operation/Button	Operation/Description
Enter Step Programming mode	Press 2 7  , followed by installer level code (the factory programmed code is 123456 or 5208). See Section 4.2.6 for user code programming information.
Moving through programming	When you have entered programming correctly, the display will show Zone 1 Options. Press  to move to next programming option. See Table 4-3 for list of programming options (column 1) and their menu items (column 2). When the display shows the option you wish to program press  to program items in this option. If you receive a trouble beep and the message TRY AGAIN appears you are not using an installer level code.
Exit Step Programming	Press  . You will return to normal operation. Note: If you have made a selection in programming the Enter or Down arrow must be pressed to enter that selection in programming. If the Reset button is pressed before the Enter or Down arrow the selection made will not be entered into programming.
Down Arrow 	Accepts the entered data and scrolls down to the next menu item.
Enter Button 	Accepts the entered data and scrolls down to the next menu item.
Left Arrow 	Scrolls backwards through the programmable items list for the currently selected option.
Right Arrow 	Scrolls forward through the programmable options list or choices for an the selected item.
Silence Button 	Enables extended programming list so you can scroll through lists of items that have multiple components such as, Zone 1 -30. See Section 4.1.2 for an example.
Up Arrow 	Accepts the entered data and scrolls up to the next menu item.
* Button 	Used as shift key when entering special characters (A, B, C, D, E, or F characters). See Section 4.1.1 for more information.
# Button 	Clear entry.

4.1.1 Special Characters

Special characters are characters used while dialing such as pause, *, #, or 2nd dial tone. Table 4-1 list the Special characters and what they mean.

Table 4-1: Special Characters

To Enter:	Press	LCD Display
Pause		A
*		B
#		C
2nd Dial Tone		D

4.1.2 Enabling Extended Programming List

While programming there are several programming options that have multiple components that can be programmed within that menu item, such as Zones, NAC Cadence, User Codes, Accounts, etc. However when you scroll through these options only the first one may be displayed (see Figure 4-1). In order to view and program subsequent items the Silence button must be pressed. This enables you to move through the other Zones, NAC Cadence, etc.

Example:

If the Zone 1 Options is displayed (see Figure 4-1) and you want to program zone 2 options, press the button.

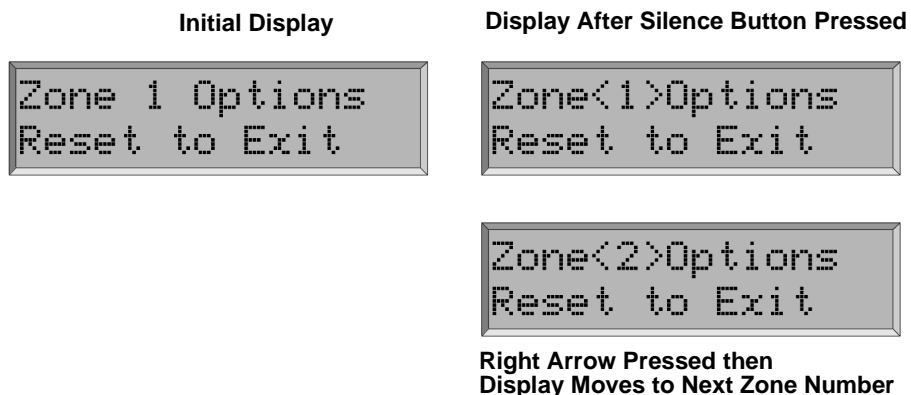


Figure 4-1 Extended Programming List Access Example

The display will add brackets around the zone number (see Figure 4-1). To move to the next zone number press the right arrow to go forward through the zone numbers or the left arrow to go backward through the zone numbers. Press the Silence button again to remove the bracket and lock the menu on this Zone number, NAC number, or Relay, etc.

This Feature works for the following programming options: Zone Options, NAC Cadence, User Codes, Accounts, Line Options, and SK-5280 Options.

4.2 Programming Flow

Figure 4-2 is an overview of the programming menu flow. Figure 4-3 through Figure 4-14 illustrate the programming flow within each option. The arrows indicate how to maneuver through programming.

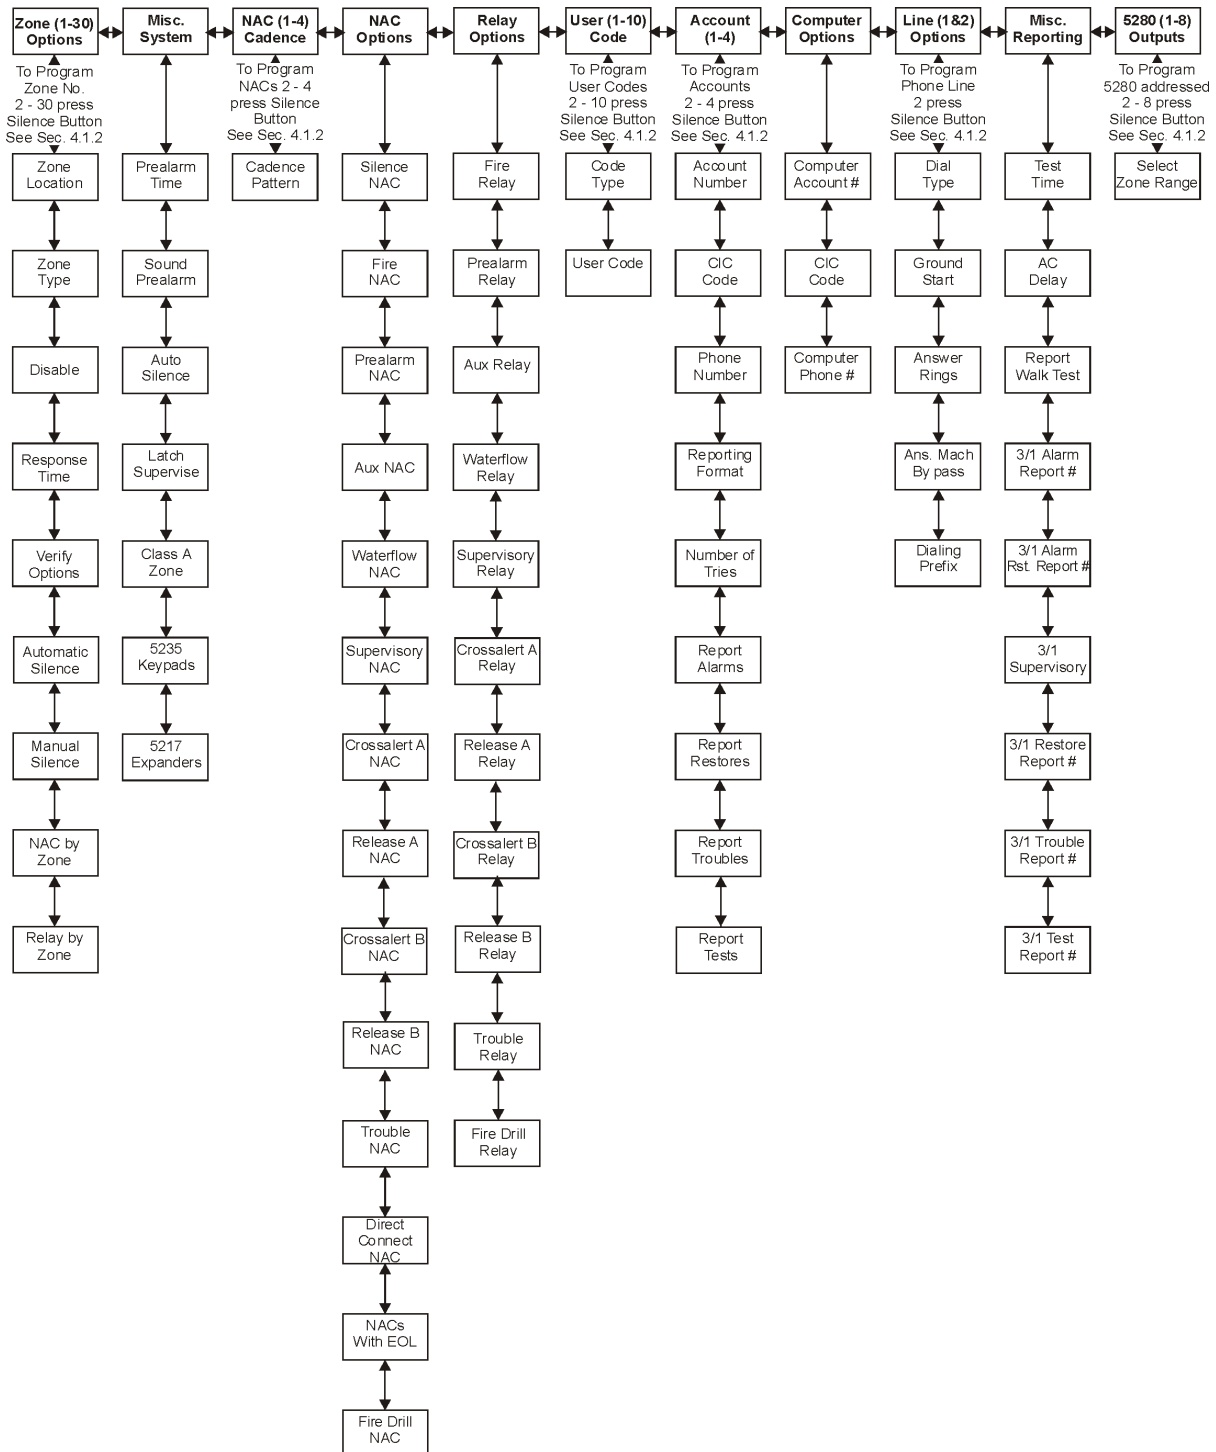


Figure 4-2 Programming Overview Flow Chart

4.2.1 Zone Options

Figure 4-3 illustrates, in more detail, the programming flow when in the zone options menu.

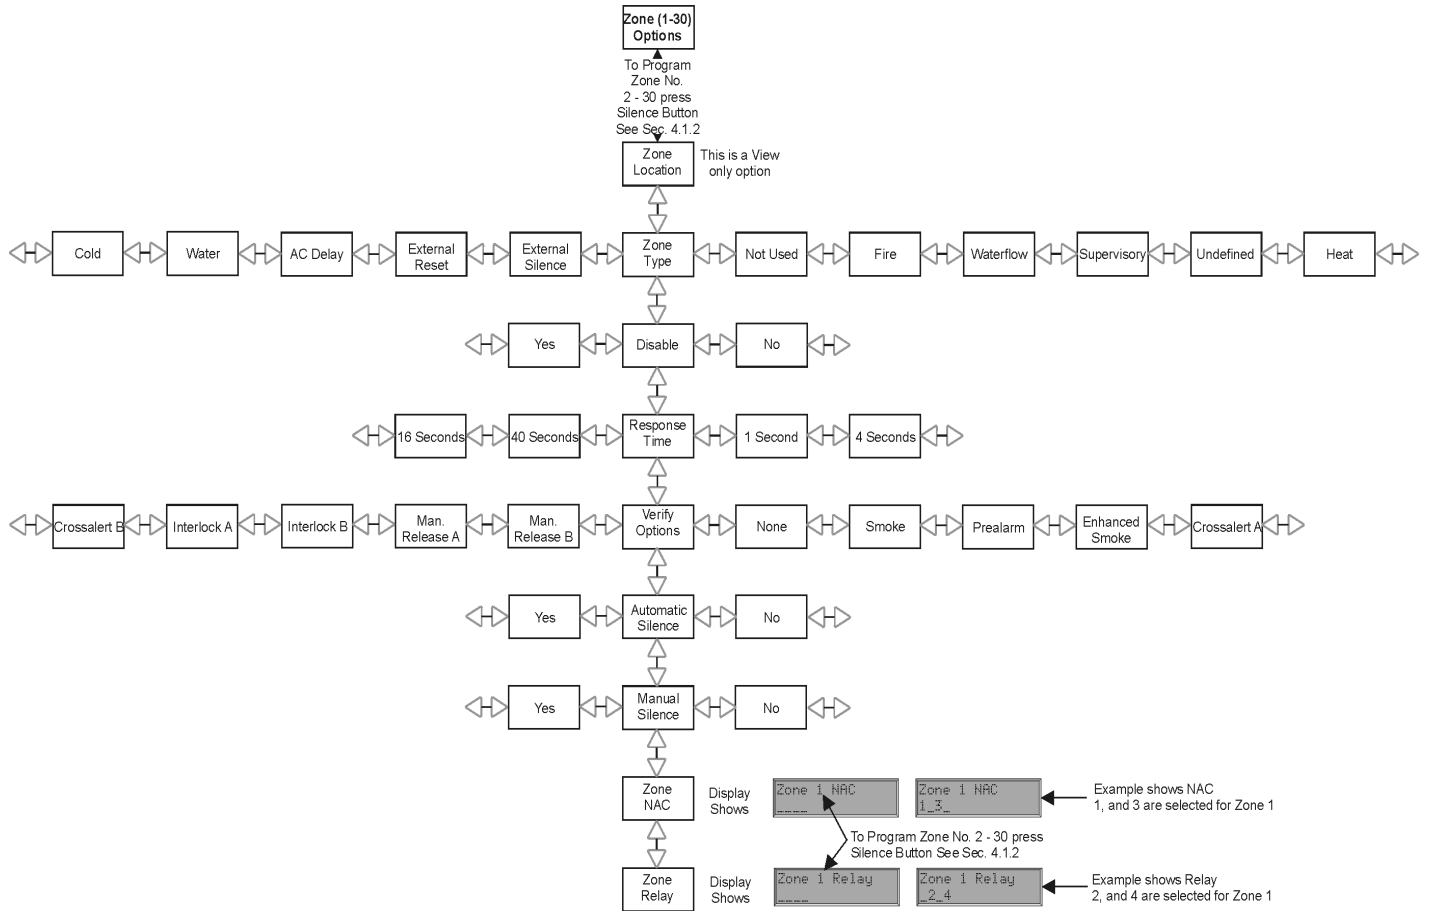


Figure 4-3 Zone Options

4.2.2 Misc System Option

Figure 4-4 illustrates, in more detail, the programming flow when in the misc system menu.

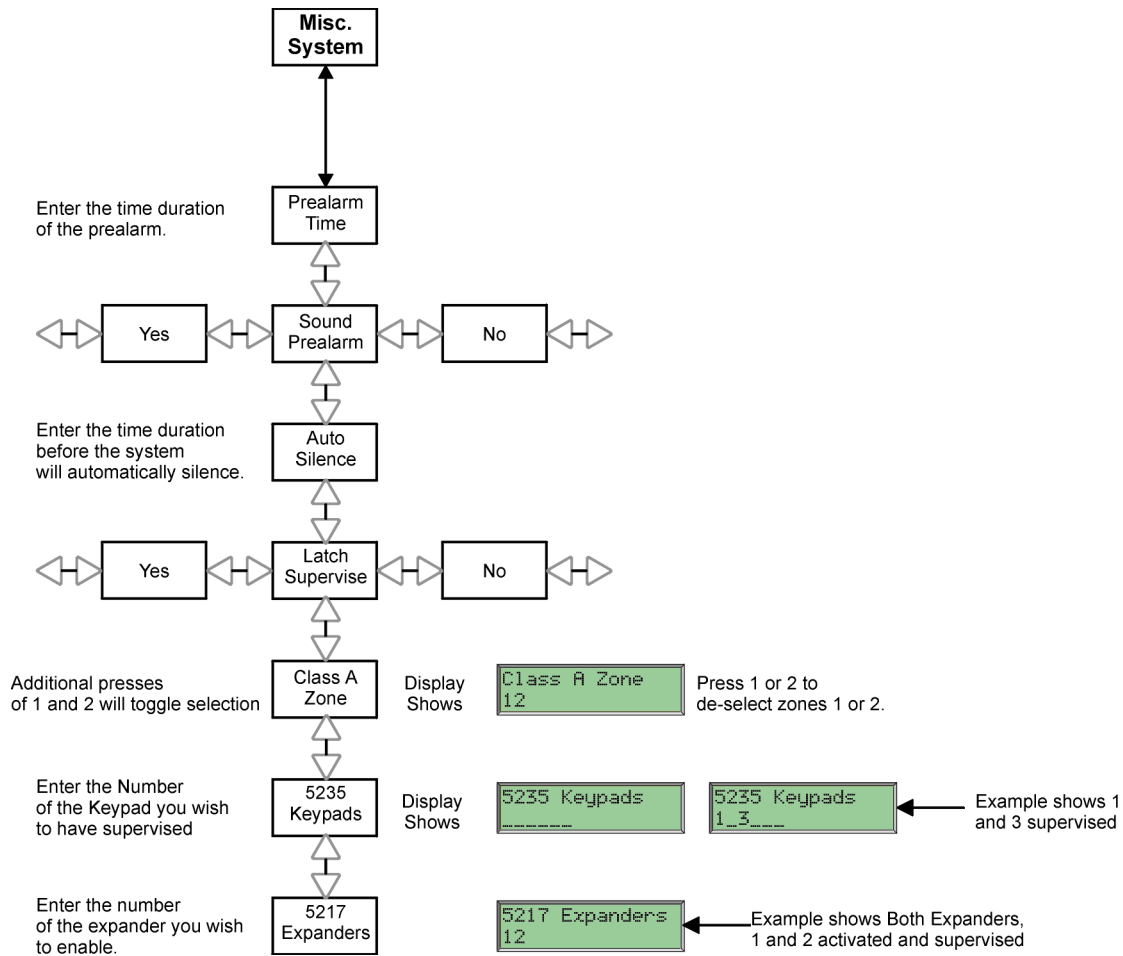


Figure 4-4 Miscellaneous System Options

4.2.3 NAC Cadence

Figure 4-5 illustrates, in more detail, the programming flow when in the NAC cadence menu.

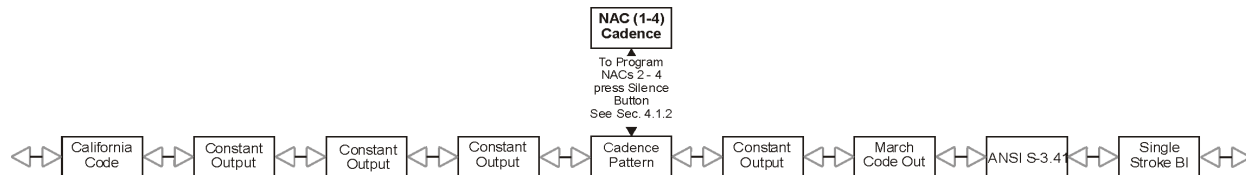


Figure 4-5 NAC Cadence

4.2.3.1 Cadence Patterns

The cadence patterns shown in Figure 4-6 can be selected for NAC outputs. Each NAC can select an output pattern. Special cadence patterns can be selected for fire drill or an auxiliary input switches used with the system.

#	Name	Pattern Description
		Patterns repeat until condition is cleared.
1	Constant Output	Continuous sound
2	March Code Out	 .5 sec on .5 sec off
3	ANSI S-3.41	 .5 sec on .5 sec off 1.5 sec off
4	Single Stroke Bl	 .1 sec on 1.9 sec off
5	California Code	 5 sec. on 10 sec. off
6	Constant Output	
8		

Figure 4-6 Cadence Patterns

4.2.4 NAC Options

Figure 4-7 illustrates, in more detail, the programming flow when in the NAC options menu.

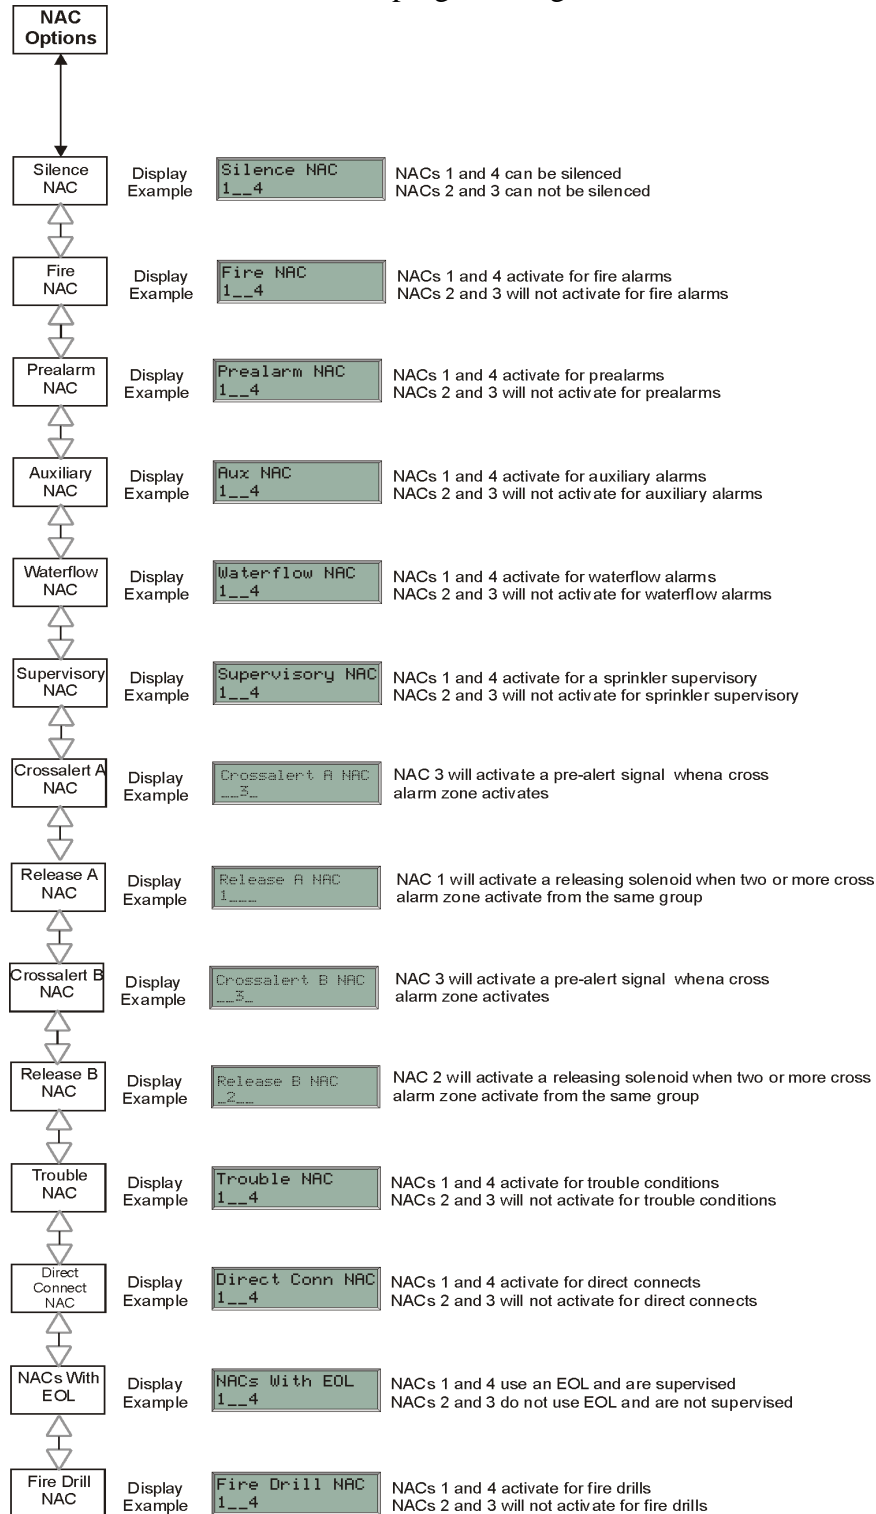


Figure 4-7 NAC Options Programming Menu

4.2.5 Relay Options

Figure 4-8 illustrates, in more detail, the programming flow when in the relay options menu.

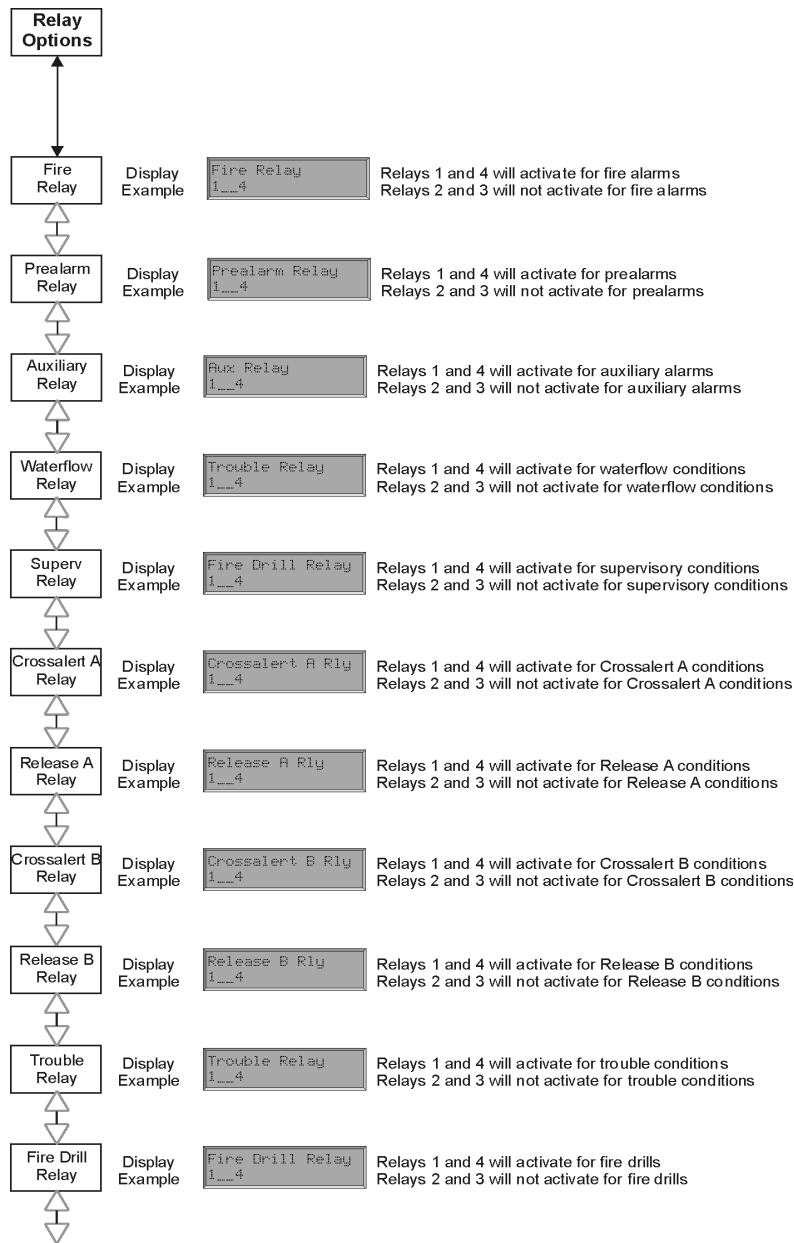


Figure 4-8 Relay Options Programming Menu

4.2.6 User Code

Figure 4-9 illustrates, in more detail, the programming flow when in the user code menu.

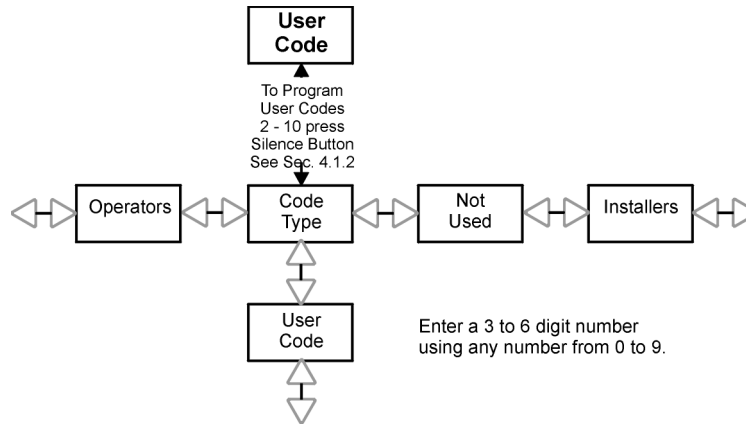


Figure 4-9 User Code Programming Menu

4.2.7 Account

Figure 4-10 illustrates, in more detail, the programming flow when in the account menu.

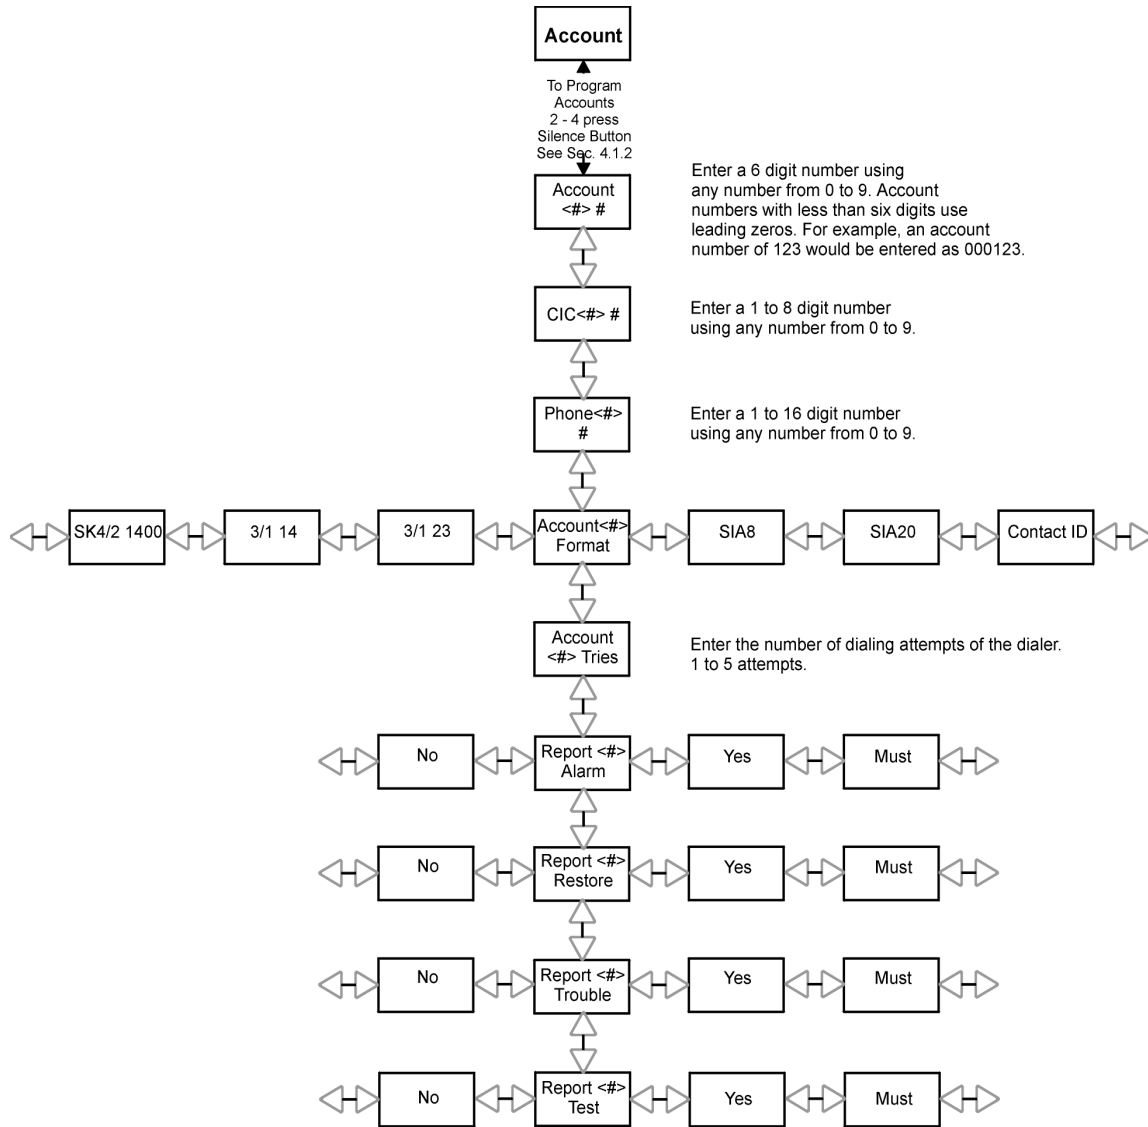


Figure 4-10 Account Programming Menu

Must	The dialer MUST report events in this family to this account. Selecting Must makes an account a primary reporting account. The dialer will try to report the event to the primary account until it exceeds the "Account Tries" value. When the dialer has exceeded the Account Tries retry limit, it will switch to a backup account (a "Can Report" or "Yes" account, see below). If the dialer cannot report the event to any of the backup accounts, it will return to the primary account and repeat the process until it exceeds the a total of 10 attempts. When the Account Tries limit is exceeded, an Account Trouble condition is generated and a local trouble will sound.
Yes	Can Report. Selecting Y makes this a backup account for this event family. The dialer will report to this account only if it was previously unable to report the event to a Must account.
No	No events in this family will ever be reported to this account.

Note: CIC and Phone number can also use special characters as described in Section 4.1.1.

4.2.8 Computer Options

Figure 4-11 illustrates, in more detail, the programming flow when in the computer options menu.

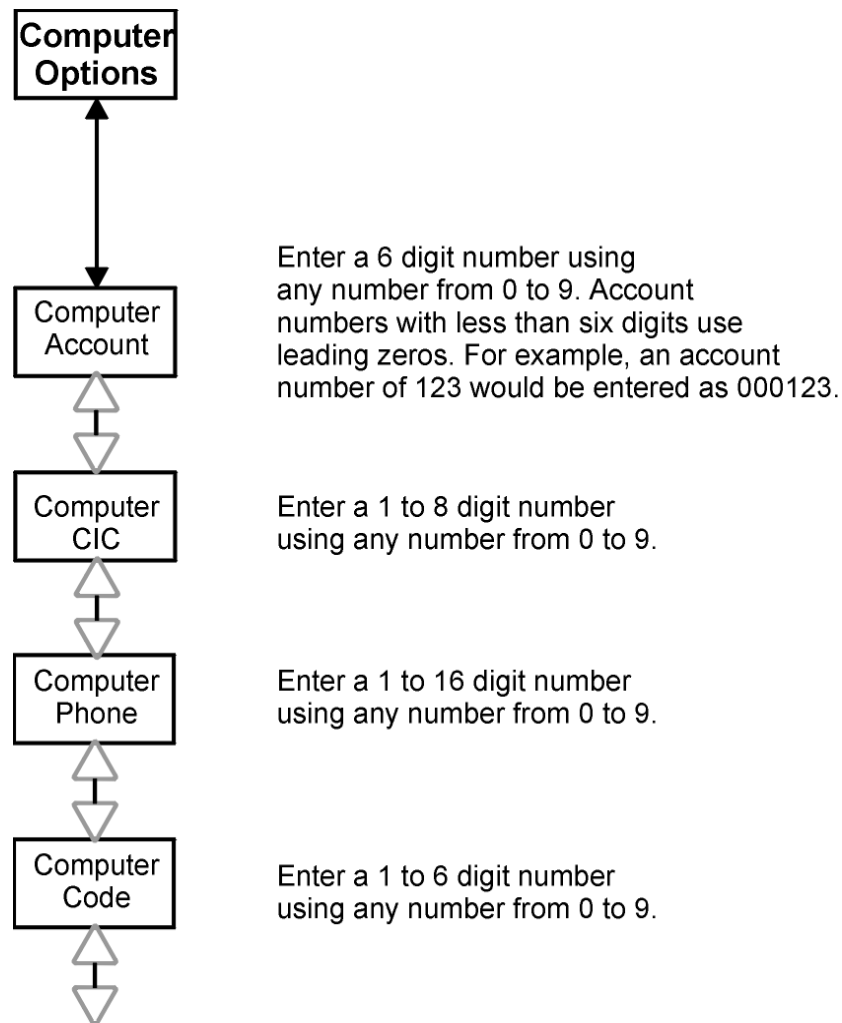


Figure 4-11 Computer Options Programming Menu

Note: Computer CIC & Phone can also use special characters as described in Section 4.1.1.

4.2.8.1 Computer Code

In order to remote download to a control, the computer code programmed in the panel, and the computer code used in the downloading software must match.

! Important !

Remote downloading can only be used for Central Station Signaling Services, if this system does not meet Central Station Signaling requirements, this feature must be set to zero.

4.2.9 Line Options

Figure 4-12 illustrates, in more detail, the programming flow when in the line options menu.

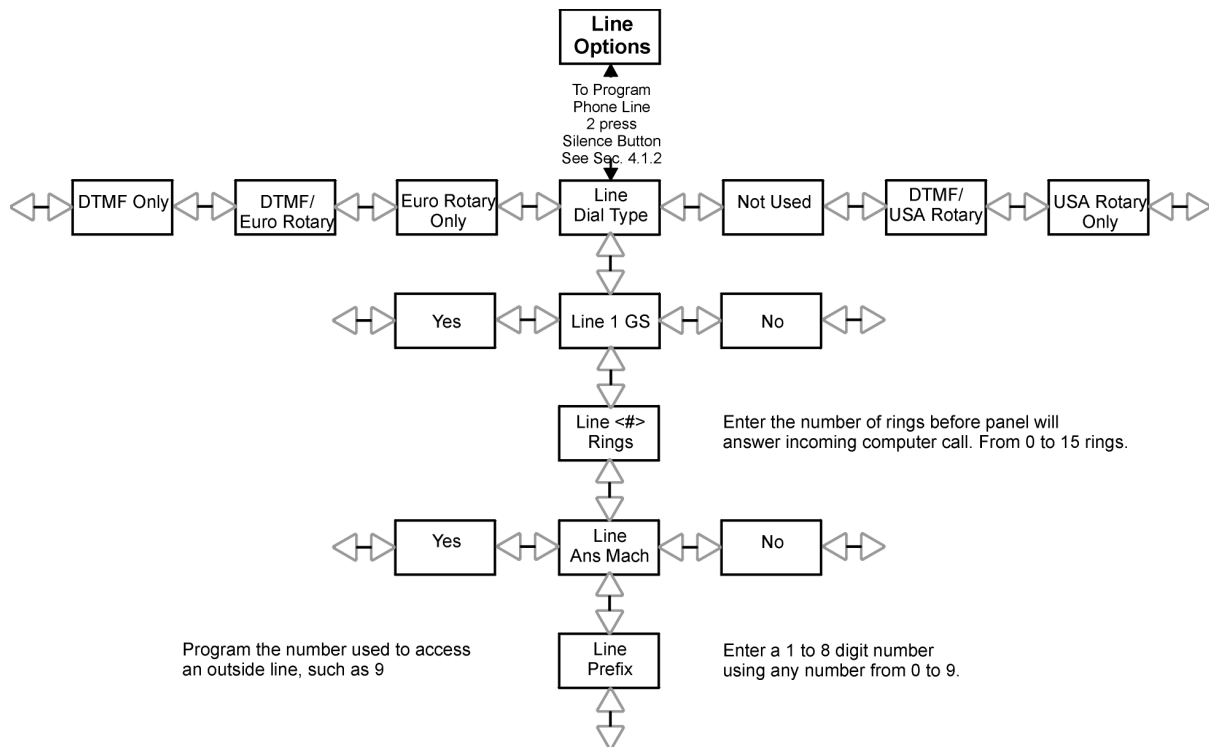


Figure 4-12 Line Options Programming Menu

Note: Line prefix can also use special characters as described in Section 4.1.1.

4.2.10 Misc Reporting

Figure 4-13 illustrates, in more detail, the programming flow when in the miscellaneous reporting menu.

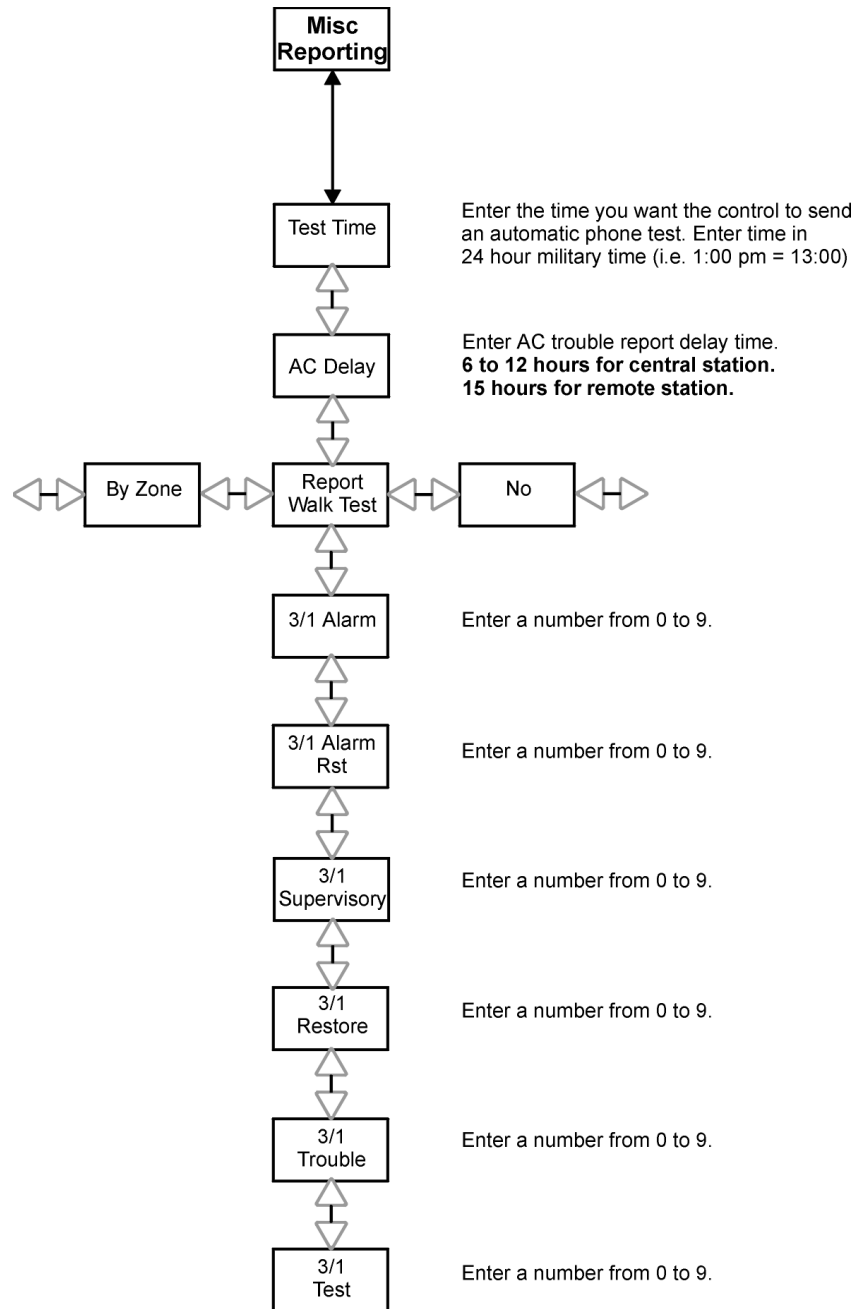


Figure 4-13 Misc Reporting Programming Menu

4.2.11 5280 Outputs

Figure 4-14 illustrates, in more detail, the programming flow when in the SK-5280 outputs menu.

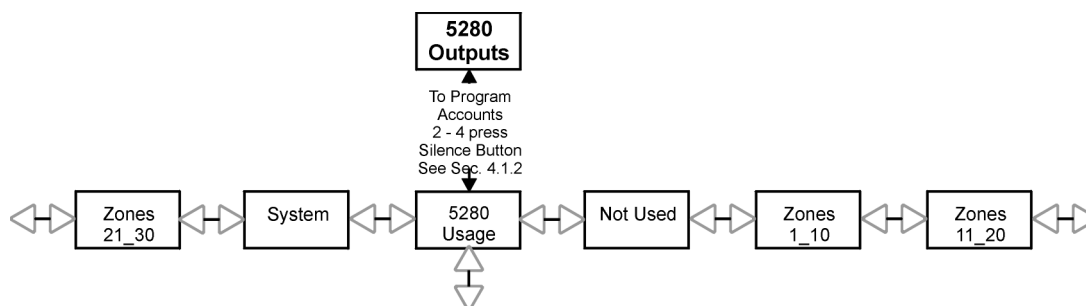


Figure 4-14 5280 Outputs Programming Menu

If Zones 1-10 is selected then the SK-5280 will output when alarms and troubles occur for zones 1 through 10. If Zones 11-20 is selected then SK-5280 will output when alarms and troubles occur for zones 11 through 20. If Zones 21-30 is selected then the SK-5280 will output when alarms and troubles occur for zones 21-30.

If System is selected then the SK-5280 will output as shown in Table 4-2 for the following system conditions:

Table 4-2: System Outputs

SK-5280 Output Terminal	Output For:
A1	Fire Alarm
A2	Waterflow Alarm
A3	Supervisory
A4	Aux Alarm
A5	Prealarm
A6	Trouble
A7	Communications Fail
A8	Communicating
A9	Alarm Silenced
A10	Trouble Silenced
T1	Low AC
T2	Low Battery
T3	Relay 1 Active
T4	Relay 2 Active
T5	Relay 3 Active
T6	Relay 4 Active
T7	NAC 1 Active
T8	NAC 2 Active
T9	NAC 3 Active
T10	NAC 4 Active

4.3 Programming Options

Table 4-3 list all the programming options and the items that can be modified within those programming option menus.

Note: Programming options that have a # in the Programming Options column have multiple programmable components. See Section 4.1.2 for additional information.

Table 4-3: Programming Options

Programming Option	Menu Item	Choices	Default	Comments	
Zone (1-30) # Options	Zone # Location			Programmable only through downloading software.	
	Zone # Type	Not Used			
		Fire	✓		
		Waterflow			
		Supervisory			
		Undefined			
		Heat			
		Cold			
		Water			
	AC Delay	AC Delay			Will generate an AC Trouble for either an open or shorted input. The report to the receiver will be delayed until the AC Delay timer expires. (See Section 4.2.10 for AC Delay Time programming.)
		Ext. Reset			A shorted input will reset active alarms. This type of zone is local only. No troubles will be reported to the central station receiver.
		Ext. Silence			A shorted input will silence alarms and troubles. This type of zone is local only. No troubles will be reported to the central station receiver.
	Zone # Disable	No			Zone cannot be bypassed.
		Yes	✓		Zone can be bypassed.
	Zone # Response	1 Sec	✓		
		4 sec			
		16 sec			
		40 sec			
	Verify # Options	None	✓		Note: Alarm verification feature must not be used if the FACP is being used for releasing.
		Smoke			Smoke verification for zones with 2- or 4-wire detectors. Do not use any other type of device on this circuit if Smoke Verification is selected.
		Prealarm			Activated zone will start a prealarm timer that counts down from a user programmed value (see Section 4.2.2 for prealarm time programming). If the timer reaches zero before the panel is reset, a general alarm will then be sounded.
		Crossalert A			See Section 5.4.
		Crossalert B			
Interlock A					
Interlock B					

Table 4-3: Programming Options

Programming Option	Menu Item	Choices	Default	Comments
Zone (1-30) # Options	Verify # Options (Cont.)	Manual Release A		See Section 5.4.
		Manual Release B		
		Enhanced Smoke		Smoke verification for zones with 2-wire detectors and contact type devices, such as pull stations, used on the same circuit. If the alarm current is greater than 78 mA, the smoke verification cycle will not occur.
	Zone # Auto Sil	No	✓	Alarm sounds for this zone cannot be automatically silenced.
		Yes		Alarm sounds for this zone can be automatically silenced.
	Zone # Man Sil	No		Alarm sounds for this zone cannot be manually silenced.
		Yes	✓	Alarm sounds for this zone can be manually silenced.
Zone # NAC	-----		Select the number of each NAC to operate with this zone in alarm.	
Zone # Relay	-----		Select the number of each Relay to operate with this zone in alarm.	
Misc System	Prealarm Time	Enter a value from 0 to 60	40 seconds	Enter time duration for prealarm verification.
	Sound Prealarm	No		No on-board or 5235 remote PZT sound for prealarms.
		Yes	✓	5235 and on-board PZTs will sound for prealarms.
	Auto Silence	Enter a value from 0 to 60	8 minutes	This feature selects the time in minutes in which the NAC will automatically silence. 0 = no automatic silence
	Latch Supervise	No	✓	Supervisory type zones will self restore.
		Yes		Supervisory type zones must be reset after any supervisory conditions.
	Class A Zone	1	Both selected as Class A.	
2				
5235 Keypads	-----		Touchpad numbers that are selected here will be supervised.	
5217 Expanders	1		Enables zones 11-20.	
	2		Enables zones 21-30	
NAC (1-4) # Cadence	Steady		Additional cadence patterns are programmable only through down loading software.	
	Pulse			
	Cadence 64			
	ANSI	All NACs		

Table 4-3: Programming Options

Programming Option	Menu Item	Choices	Default	Comments
NAC Options	Silence NAC	-----	No NACs selected	If number is selected that NAC may be silenced.
	Fire NAC	<u>1</u> <u>2</u> <u>3</u> <u>4</u>	All NACs selected	If number is selected that NAC will activate for any fire alarm.
	Prealarm NAC	-----	No NACs selected	If number is selected that NAC will activate during the prealarm timer countdown.
	Aux NAC	-----	No NACs selected	If number is selected that NAC will activate for undefined, heat, cold, and water alarms.
	Waterflow NAC	<u>1</u> <u>2</u> <u>3</u> <u>4</u>	All NACs selected	If number is selected that NAC will activate for waterflow alarms.
	Supervisory NAC	-----	No NACs selected	If number is selected that NAC will activate for sprinkler supervisories.
	Crossalert A NAC	-----	No NACs selected	If you have a single zone, that is programmed for crossalarm verification, in alarm, all NAC output select for this option will activate.
	Release A NAC	-----	No NACs selected	Activates during the group "A" releasing action. This circuit would be connected to a UL listed releasing solenoid. See Table 5-4 for compatible solenoids.
	Crossalert B NAC	-----	No NACs selected	If you have a single zone, that is programmed for crossalarm verification, in alarm, all NAC output select for this option will activate.
	Release B	-----	No NACs selected	Activates during the group "B" releasing action. This circuit would be connected to a UL listed releasing solenoid. See Table 5-4 for compatible solenoids.
	Trouble NAC	-----	No NACs selected	If number is selected that NAC will activate for any trouble condition.
	Direct Conn NAC	-----	No NACs selected	for alarms when using the 5220 module for city box or polarity reversal. Corresponding relay number will automatically be selected.
	NACs With EOL	1 2 3 4	All NACs selected	If number is selected that NAC output must be supervised with an 4.7 kΩ UL listed EOL.
	Fire Drill NAC	1 2 3 4	All NACs selected	If number is selected that NAC will activate during a fire drill.

Table 4-3: Programming Options

Programming Option	Menu Item	Choices	Default	Comments
Relay Options	Fire Relay	1 _ _ _	Relay 1 selected	If a relay is selected, that relay will activate for fire alarm conditions.
	Prealarm Relay	_ _ _ _	No Relays selected	If a relay is selected, that relay will activate for prealarm conditions.
	Aux Relay	_ _ _ _	No Relays selected	If a relay is selected, that relay will activate for Auxiliary conditions.
	Waterflow Relay	_ _ _ _	No Relays selected	If a relay is selected, that relay will activate for waterflow conditions.
	Superv Relay	_ _ _ _	No Relays selected	If a relay is selected, that relay will activate for supervisory conditions.
	Crossalert A Relay	_ _ _ _	No Relays selected	If a relay is selected, that relay will activate for crossalarm conditions.
	Release A Relay	_ _ _ _	No Relays selected	If selected will activate for releasing group "A".
	Crossalert B Relay	_ _ _ _	No Relays selected	If a relay is selected, that relay will activate for crossalarm conditions.
	Release B Relay	_ _ _ _	No Relays selected	If selected will activate for releasing group "B".
	Trouble Relay	_ _ _ 4	4	Relay will be activated when no troubles exist and will deactivate when a trouble condition occurs.
	Fire Drill Relay	1 _ _ _	Relay 1 selected	If a relay is selected, that relay will activate for fire drills.
User (1-10) # Code	Code # Type	Installers	5208 and 123456	
		Operators	1111	
		Not Used		
	User # Code	Enter 3 to 6 digit number		Enter any value from 001 to 999999.

Table 4-3: Programming Options

Programming Option	Menu Item	Choices	Default	Comments	
Account (1-4) #	Account <#> #	Enter a 6-digits number		Enter any value from 000001 to 999999. Account numbers with less than 6 digits must use leading zeros. For example, if the code 321 is used, it must be entered as 000321.	
	CIC <#> #	Enter up to 8 digits		Carrier Identification Code is the prefix that needs to be dialed before a phone number to access a particular long distance carrier. Use special characters to add pauses, #, *, and "2nd dial tone" characters into the phone number. See Section 4.1.1 for special characters.	
	Phone <#> #	Enter up to 16 digits		See Section 4.1.1 for special characters.	
	Account # Format	SIA8			
		SIA20			
		Contact ID			
		SK4/2 1400			
		3/1 1400			
	Account # Tries	3/1 2300			
		1 to 5			
	Report # Alarm	No			Do not report alarm events.
		Yes			Can report alarm events.
		Must			Must report alarm events.
	Report # Restore	No			Do not report alarm restores.
		Yes			Can report alarm restores.
		Must			Must report alarm restores.
	Report # Trouble	No			Do not report sprinkler supervisory, system troubles, zone troubles, zone bypasses, and zone restores.
		Yes			Can report sprinkler supervisory, system troubles, zone troubles, zone bypasses, and zone restores.
		Must			Must report sprinkler supervisory, system troubles, zone troubles, zone bypasses, and zone restores.
	Report # Test	No			Do not report manual test, auto test, downloading pass , downloading fail, data lest, and walk test.
Yes				Can report manual test, auto test, downloading pass , downloading fail, data lest, and walk test.	
Must				Must report manual test, auto test, downloading pass , downloading fail, data lest, and walk test.	

Table 4-3: Programming Options

Programming Option	Menu Item	Choices	Default	Comments
Computer Options	Computer Account	Enter 6-digit number		Enter any value from 000001 to 999999. Account numbers with less than 6 digits must use leading zeros. For example, if the code 321 is used, it must be entered as 000321.
	Computer CIC	Up to 8 digits.		Carrier Identification Code is the prefix that needs to be dialed before a phone number to access a particular long distance carrier. Use special characters to add pauses, #, *, and "look for second dial tone" characters into the phone number. See Section 4.1.1 for special characters.
	Computer Phone	up to 16 digits		See Section 4.1.1 for special characters.
	Computer Code	1 to 6 digits	0	The computer code must match the computer code in the remote downloading computer in order to perform a remote download. See also Section 4.2.8.1.
Line (1-2) # Options	Line # Dial Type	Not Used	✓	This disables the phone line.
		DTMF/USA Rotary		Attempts 1 through 6 will be DTMF, then the dialer will alternate between Rotary and DTMF for attempts 7 through 10, Rotary Make/Break ratio is 40/60.
		USA Rotary Only		Attempts 1 through 10 will be Rotary only, with a Make/Break ratio of 40/60.
		DTMF Only		Attempts 1 through 10 will be DTMF only.
		DTMF/Euro Rotary		Attempts 1 through 6 will be DTMF, then the dialer will alternate between Rotary and DTMF for attempts 7 through 10, Rotary Make/Break ratio 33/67.
		Euro Rotary Only		Attempts 1 through 10 will be Rotary only, with a Make/Break ratio of 33/67.
	Line # GS	No	✓	Yes enables Ground Start phone functions. A ground start relay (Model 5211) is required if this feature is enabled (see Figure 3-2).
		Yes		
	Line # Rings	0 - 15	2	Number of rings before the panel will answer an incoming telephone call.
	Line # Ans Mach	No	✓	This feature is used in installations where an answering machine is on the same phone line that the control panel is on. The answering machine may interfere with a computer download.
Yes			When enabled (Yes) the computer calls the control panel and the phone line rings twice, hangs up and calls again (within 10 to 60 seconds). When the control panel see two more rings on the phone line it will answer and acknowledge the calling computer.	
Line # Prefix	Up to 8 digits		See Section 4.1.1 for special characters.	

Table 4-3: Programming Options

Programming Option	Menu Item	Choices	Default	Comments
Misc Reporting	Test Time	00:00 - 23:59	12:00	Selects the time of day the control will send an automatic test signal to a central station receiver.
	AC Delay	6 - 15 Hours	6	Selects the delay time (in hours) before the control will report an AC power loss to the central station.
	Report Walk Test	No	✓	No zone information will be reported just test begin and test end.
		By Zone		Test begin, test end, and all events in between will be reported to central station.
	*3/1 Alarm		0	Alarms for Fire, Waterflow, Undefined, Heat, Cold, and Water events.
	*3/1 Alarm Rst		2	Alarms restores for Fire, Waterflow, Undefined, Heat, Cold, and Water events.
	*3/1 Supervisory		6	Sprinkler supervisories.
	*3/1 Restore		7	Restore reports for Troubles, Supervisories, and unbypasses. The only exceptions are the restores listed as alarm restores.
	*3/1 Trouble		8	All system and zone troubles, and zone/NAC bypasses, and NACs troubles.
*3/1 Test		9	All test events.	
5280 (1 - 8) # Outputs	5280 #	Not Used	✓	
		Zones 1_10		
		Zones 11_20		
		Zones 21_30		
		System		

* Event code for 3/1 and 4/2 reporting formats.

Section 5

Operation

To operate the SK-5208 you can use either the on-board touchpad or the Model SK-5235 Remote Annunciator.

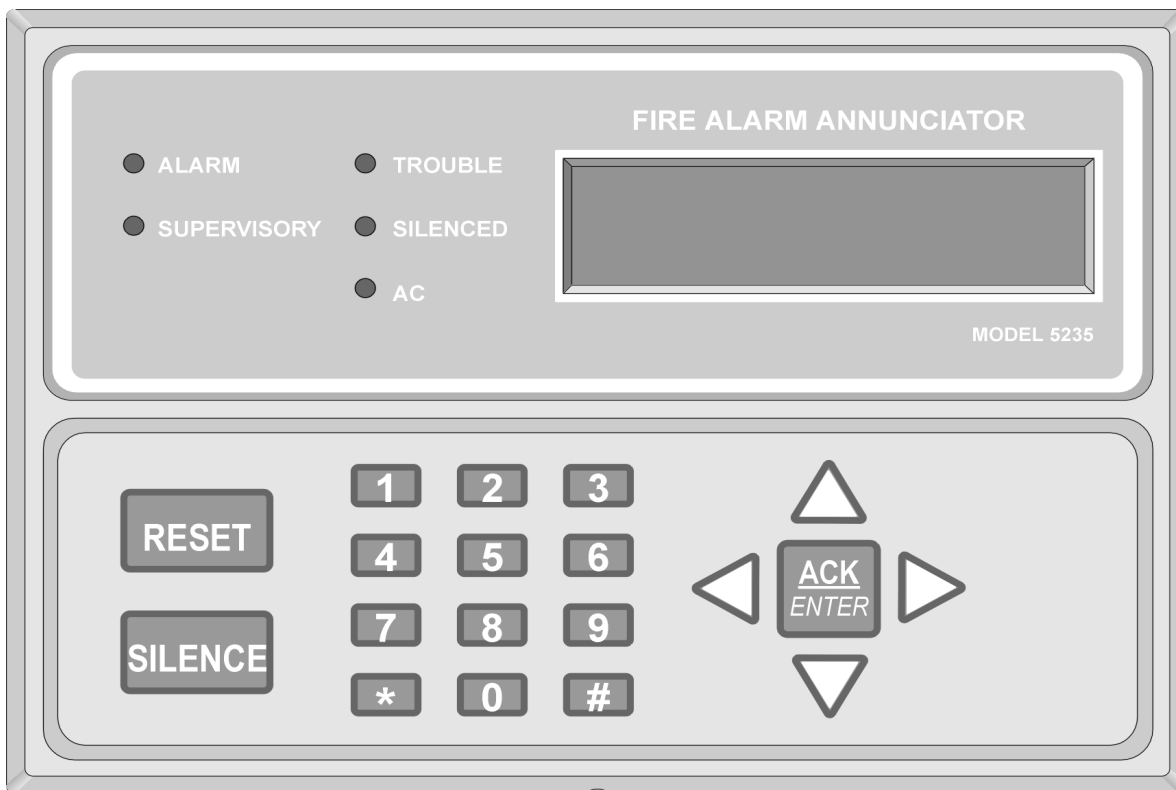


Figure 5-1 Model SK-5235 Remote Annunciator




























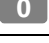












Important! Upon initial power up there is a 45 second delay before the initiation circuits become active. The system will be ready to receive alarms once the display indicates "System Normal"

5.1 On-board Touchpad and SK-5235 Operation

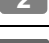

Basic operation of both the SK-5235 and the on-board touchpad is described in Table 5-1. Note that if no keys are pressed for 4 minutes while in program mode, the system will time out and resume normal operation.

Note: A valid code is required for all touchpad functions. In Table 5-1, code = any valid operating code.

Table 5-1: How to

How To	Do This			Comments
	Press	Display Message	Press	
Test the system	 	System Test Enter Code	Enter Code	The system will perform a display lamp test and a communication test.
Reset Alarms	 	Reset Alarm Enter Code	Enter Code	Resets system.
Clear History	 	Clear History Enter Code	Enter Installer Code	Clears event history of all events.
Reset the Dialer	 	Reset Dialer Enter Code	Enter Installer Code	Resets the dialer and aborts the call to central station.
Call Computer to Up/Download	 	Call Computer Enter Code	Enter Installer Code	Will dial the programmed phone number for the computer to initiate an up or download.
Display History Events	 	History Events Enter Code	Enter Installer Code	Displays the panel history, which includes alarms, supervisories, troubles, reports, time and date changes, etc.
Show Status	 	Show Status Enter Code	Enter Code	View existing system status. List Alarms first, supervisories and then troubles.
Silence Troubles or Alarms	  OR 	Silence Enter Code	Enter Code	Note: When an alarm occurs on an 5217 zone expander, upon reset the power will drop only on the expander that initiated the alarm.
Set the Date	 	Set Date Enter Code	Enter Code	Enter 8 digits for the date. For example, to set the date 08/31/1999 enter 08311999. Press  to clear incorrect entries.
Set the Time	 	Set Time Enter Code	Enter Code	Enter the time in 24 hour increments. For example, 1:00 pm = 13:00.
Disable/Enable a Zone	Zone # + 	Disable Zone Enter Code	Enter Code	Repeat the process to enable the zone.
Disable/Enable NAC	  NAC # 	Disable NAC Enter Code	Enter Code	Repeat the process to enable the NAC.
Conduct a Fire Drill	  	Fire Drill Enter Code	Enter Code	To End the Fire Drill press  then code.
Reset Detectors	  	Rst Smk Pwr Enter Code	Enter Code	Resets all smoke detector power.
Walk Test the System	  	Walk Test Enter Code	Enter Installer Code	To End the Walk Test press  .
Menu of Options	Press  or  to scroll trough list.		Enter Installer Code	To exit press  or wait 15 seconds.

5.2 Acknowledge Operation

To display an event, first press the , while the event is displayed the event can be acknowledged by pressing the  button again. No code is required to acknowledge events. The status LEDs (Alarm, Supervisory and Trouble) will flash when an un-acknowledged alarm, supervisory, or trouble condition exists.

After each event has been acknowledged its associated LED (Alarm, Supervisory, or Trouble LED) stop flashing and turn on steady. When viewing system status the LCD displays “Aked” for each individual event once has been acknowledged. The control panel piezo will silence after all alarms have been acknowledged.

Note: The control panel piezo will continue to sound for Supervisories and Troubles even after the event has been acknowledged. Supervisories and troubles will silence once the event is restored.

After the event is acknowledged an event is added to the event history buffer. Acknowledged events in the history buffer will be preceded with an asterisk “*”.

5.3 LED Indicators

Five light emitting diodes (LEDs) appear in the SK-5208 built in annunciator and remote annunciator. The chart below explains the meaning of these LEDs.

Table 5-2

LED	Status	Condition
ALARM (red)	Off	Normal condition
	On	System in alarm and all alarms have been acknowledged.
	Flashing	LED will flash when a alarm condition exists that has not been acknowledged.
SUPERVISORY (yellow)	Off	Normal condition
	On	If a supervisory condition exist on the system.
	Flashing	LED will flash when a supervisory condition exists that has not been acknowledged.
TROUBLE (yellow)	Off	Normal condition
	On	Trouble condition exists
	Flashing	LED will flash when a trouble condition exists that has not been acknowledged.
SILENCED (yellow)	Off	Normal condition.
	On	Alarm or trouble condition has been silenced but condition still exists.
AC (green)	On	Panel is running on AC (normal condition); standby battery fully charged.
	Off	Panel has lost all power.
	Flashing	Panel is running on battery power only or AC power only.

5.4 Releasing Operation

This system can perform two types of releasing operation, cross alarm releasing, and double interlock releasing operations. Install in accordance with NFPA 72 paragraphs 3-8.3.2.3.3 and 3-8.3.2.3.3.2.

Note: If cross alarm or interlocking is selected alarm verification will be disabled.

5.4.1 Cross Alarm Operation

The fire alarm control panel has two cross alert groups to select from, Cross Alert A and Cross Alert B that accommodate releasing water systems.

When two or more zones are programmed to one of these groups then a single activation of one zone in the group will cause a cross alert condition at the local annunciator and the pre-alert signal output for that group. (**Note:** the local annunciator and the pre-alert signal will continue to sound until it is silenced or until another cross alarm zone within the same group activates.) If a second zone in the same group activates then both will become active alarm zones.

If the second zone is not in the same group as the first zone then the cross alert zone will remain in the cross alert condition and the system will signal the second by how it is programmed.

The fire alarm control panel has four NAC and relay options that allow NACs and relays to be selected to indicate the cross alert condition and assign release circuits for each group.

5.4.1.1 Default NAC Settings for Releasing

When “Cross Alert A” is selected in “Zone Options” the NACs are defaulted to the following settings:

- NAC 1 Releasing Circuit
- NAC 3 Pre-Alert Signal Circuit
- NAC 4 General Alarm Circuit

When “Cross Alert B” is selected in “Zone Options” the NACs are defaulted to the following settings:

- NAC 2 Releasing Circuit
- NAC 3 Pre-Alert Signal Circuit
- NAC 4 General Alarm Circuit

Table 5-3: Cross Alarm Operation

Inputs	Output Results							
	Normal	Pre-Alert	Pre-Alert	Release and General Alarm	Release and General Alarm	Release and General Alarm	Release and General Alarm	Release and General Alarm
Cross Zone 1		✓		✓		✓		✓
Cross Zone 2			✓	✓			✓	✓
Pull Station					✓	✓	✓	✓

A Model 7641 EOL resistor/diode assembly is required when connecting the FACP to releasing solenoids. The 7641 allows the FACP to supervise the wiring between its NACs and the releasing solenoid.

Table 5-4: Approved Releasing Solenoids

Manufacturer	Part Number	Rating
Asco	T8210A107	24 VDC, 16.8 W
	8210G207	24 VDC, 10.6 W


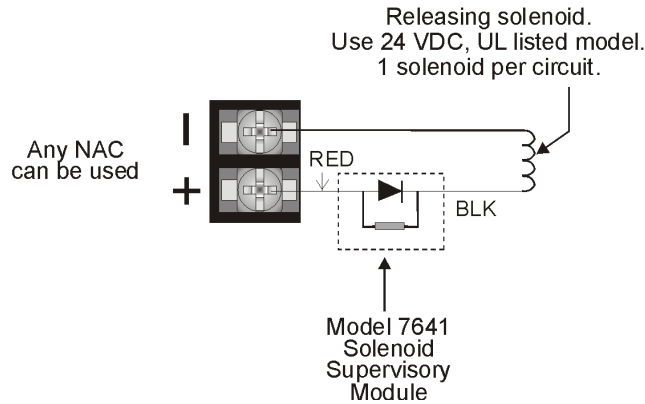


Figure 5-2 Solenoid Wiring Configuration

Do not mix cross alarming zones with smoke verification zones. There must be at least two automatic detection devices in each protected space. See Section 4.2.1 for zone option programming.

Figure 5-3 is an example of how cross alarming may be programmed.

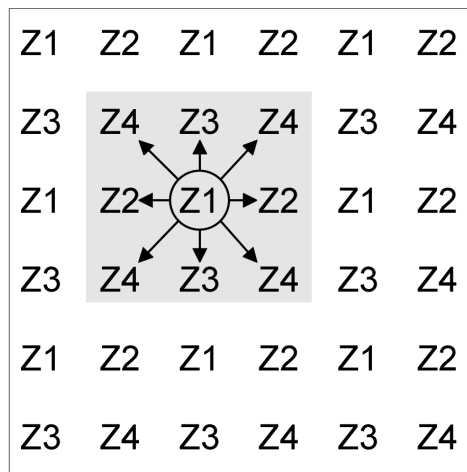

Highlighted segment shows that no Zone 1 detectors are adjacent to any other Zone 1 detector.

Figure 5-3 Example Showing Smoke Detector Cross Alarm Application

5.4.2 Double Interlock Releasing Operation

A typical double interlock releasing system would be programmed with a minimum of two zones selected for “Cross Alert A”, one zone selected as “Man. Release A”, and one selected as “Interlock A”. Additional zones can be selected as Cross Alert or Pull Station.

This double interlock system requires both cross alert and pull station verification zones. A single pull station and interlock zone can be used without any cross alert zones. In this system configuration an active pull station and the interlock zone is required to initiate the release.

Table 5-5 illustrates what will cause a Pre-alert, General Alarm, and a Release.

Table 5-5: Double Interlock Operation

Inputs	Output Results															
Cross Zone 1		✓		✓		✓		✓		✓		✓		✓		✓
Cross Zone 2			✓	✓			✓	✓			✓	✓			✓	✓
Manual Release A					✓	✓	✓	✓					✓	✓	✓	✓
Interlock									✓	✓	✓	✓	✓	✓	✓	✓
Normal																
Pre-Alert																
Pre-Alert																
General Alarm																
General Alarm																
General Alarm																
General Alarm																
General Alarm																
General Alarm																
General Alarm																
General Alarm																
General Alarm																
General Alarm																
General Alarm																
Release and General Alarm																
Release and General Alarm																
Release and General Alarm																
Release and General Alarm																
Release and General Alarm																

If no zones are selected for “Interlock: verification then the system will operate as a standard cross alarm releasing system (see Section 5.4.1).

See Section 5.4.1.1 for default NAC settings for releasing systems.

5.5 Smoke Alarm Verification

Figure 5-4 illustrates how the Smoke Alarm Verification cycle operates.

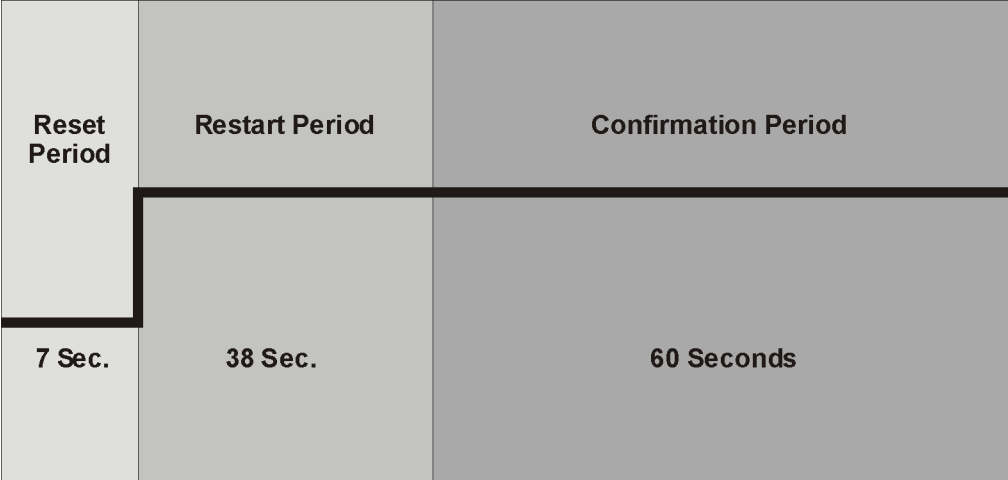


Figure 5-4 Smoke Verification Cycle

During the Confirmation Period if there is no alarm indication then the system will return to normal operation.

5.6 System Testing

This section describes operation of fire drills, zone testing, and the 24-hour automatic test.

5.6.1 Fire Drills

Fire drills can be run from either the on-board touchpad or the Model SK-5235 Remote

Annunciator. To initiate a fire drill, press **2** **0** **ACK ENTER** + Code. The system will sound an alarm and report a fire test. To end the fire drill, press **RESET** + Code.

5.6.2 Walk Test

The walk test is designed to be used for on-site testing only.

To enter walk test mode, press **2** **2** **ACK ENTER** + Installer Code.

Select the following test parameters:

Test Feature	Enable or Disable	Comments
Use Verify:	Yes or No	If Yes is selected then this option will be enabled during walk test. If No is selected this option will be disabled during walk test.
Mapped Rlys:	Yes or No	
Mapped NACs:	Yes or No	

The LCD will indicate that you are in walk test mode. When a zone is tripped, the SK-5208 will activate the bell outputs for approximately six second and will cycle smoke power off and on for the programmed time interval. When smoke power is restored, there is a two-second power up delay before the zone will respond to additional test inputs.

The system will time out and resume normal operation in 30 minutes if no keys are pressed or no zones are tripped during the walk test.

To exit walk test mode, press **RESET**.

5.6.3 Automatic Self Test

The Model SK-5208 lets you select the time of day that the 24-hour automatic test signal will be sent to the central station. See Sections 4.2.10 and 4.3 for additional information on automatic test time.

5.6.4 Watchdog Circuit

During normal operation, the control microprocessor of the SK-5208 is constantly running programs to check inputs and carry out other routine functions. If the program should ever stop running, the watchdog circuit will automatically detect this and attempt to resume normal operation by resetting the microprocessors. Each time the watchdog circuit initiates a reset signal, it will also sound the audible trouble signal for approximately four seconds.

5.7 Communicating with a Programming Computer

An installer at the panel site can initiate communications between the panel and a computer running the Silent Knight Software Suite SKSS. In order for this communication to function properly both the computer (running the software) and the control panel must have matching computer account numbers and computer access codes.

Before you program in this location you should know how your control panel will communicate with the downloading computer, either through direct connect (RS232) or via the phone lines (Internal Modem).

5.7.1 Programming From a Remote Computer Location




The panel can communicate with a Up/Downloading computer using two methods. The control panel can call the programming computer or the programming computer can call the control panel.

The programming information for the control panel will be stored in the queue of the downloading software SKSS P/N 5660. This data packet will have been pre-configured for the control panel that you are about to program. For more information see *SKSS Installation Manual* P/N 151240.

5.7.1.1 Having the Control Panel Call the Remote Computer

If the panel initiates the call to a downloading computer, a phone number must be programmed in the computer accounts area (see Section 4.2.8).

To initiate communication:

1. Press the   or the  up arrow until the display reads `Call Computer`.
2. Enter the Installer Code.

The control panel will then begin the communication process with the remote computer.

5.7.1.2 Having Remote Computer Call the Control Panel

If the computer initiates the call then answering machine bypass (see Section 4.2.8) may need to be selected.

To initiate communication:

1. From the SKSS Up/Downloading software File Menu, select the download or upload menu item you want to schedule.

Download Menu

Upload Menu

2. In the appropriate locations in the dialog box, enter your selections for the following options:

File Name: To download, select the file that you want to download. To upload assign a name to the file that will be uploaded from the panel. You can use the Browse option to select from the list of available files. If you do not select a name for the file, it will be automatically named with the panel model and the date and time of the download. For downloads, the latest saved version of the file will be sent. This means if the file you want to send is currently open and has been changed, save it before you attempt to download.

Account

Number: Enter the panel account number.

Computer Code: Enter the code that allows access to the panel from a PC.

Phone Number: Enter the panel phone number.

Call Option: Select how often and when the call should be placed.

Answering: Select the preferred options if the phone line used by the control panel has an answering machine installed. This feature is not used when connecting directly to a panel.

3. Click **OK** to begin downloading/uploading or to post the job to the Queue.


5.7.2 Directly Connecting to a Programming Computer

The control panel can be up or downloaded from a computer that is directly connected to the control panel.

Note: This connection is to be used as a temporary connection and should be disconnected after programming is completed.

To initiate communication:

1. Connect a serial cable from the control panel to the computer.

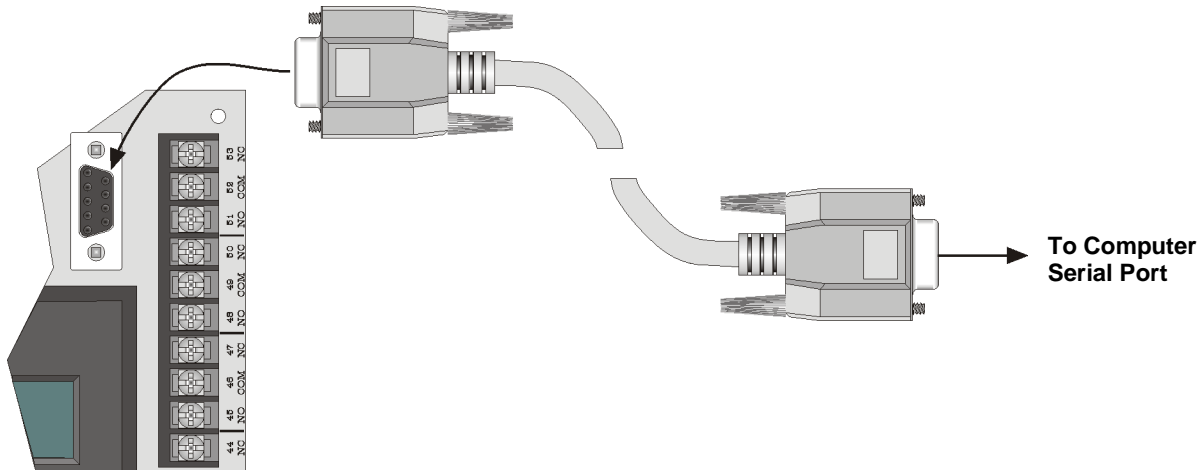

2. Make sure SKSS software is running and that the up/download task is in the queue.
3. Press the **4** **ACK** **ENTER** or the **△** up arrow until the display reads Call Computer.
4. Enter the Installer Code.

The control panel will then begin the communication process with the remote computer.

Section 6

Reporting

The SK-5208 can transmit information in four different formats. This section describes the four basic reporting formats of the SK-5208 and the codes that they send to a central station receiver. Of these four formats some of the formats offer a more specific selection for that format. For example, you can select a 3/1 format that requires a 1400 or 2300 Hz handshake, or SIA format that can handle 8 or 20 events per call. Selecting the correct format depends on the type of receiver that will receive calls from the SK-5208.

The SK-5208 DACT is compatible with Silent Knight Model 9800 and 9500 Digital Receivers.

6.1 Reporting Formats

This section gives a description of each of the SK-5208 reporting formats. Refer to Table 6-1.

Table 6-1: Reporting Formats Descriptions

Format Name		Description
Category Name	Programming Name	
3/1	3/1 14	Old format, transmits a 3-digit account number and a 1-digit event code. Transmissions are acknowledged at 1400 Hz.
	3/1 23	Old format, transmits a 3-digit account number and a 1-digit event code. Transmissions are acknowledged at 2300 Hz.
4/2	SK4/2 1400	Tone burst format, transmits a 4-digit account code and 2-digit event code. Transmissions are acknowledged at 1400 Hz.
SIA	SIA8	Security Industry Association standard communication format which send a maximum of 8 events per call.
	SIA20	Security Industry Association standard communication format which send a maximum of 20 events per call. Up to a 6-digit account number.
Contact ID	Contact ID	Ademco Contact ID format. DTMF (Dual Tone Multiple Frequency) format. Send a 4-digit account number. Transmission is acknowledged at both 1400 and 2300 Hz.

6.2 Reporting Codes

Table 6-2 list the events sent by the SK-5208 and the code that is sent for that event by the type of reporting format used.

Note: Codes under in the SK4/2 and 3/1 1400 & 2300 column are the codes programmed for 3/1 reporting formats in Misc Reporting. See Section 4.2.10 for Misc. Reporting options.

Table 6-2: Event and Reporting Code by Format

Event	SIA8 & 20	SK4/2	3/1 1400 &2300	Contact ID
AC Trouble	AT0	T0	Trouble Code	1 301 000
AC Restore	AR0	R0	Restore Code	3 301 000
Annunciator Trouble 1-7	ET17 - ET23	T7 - T3	Trouble Code	1 330 017 - 1 330 023
Annunciator Restore 1-7	ER17 - ER23	R7 - R3	Restore Code	3 330 017 - 3 330 023
Bell Trouble 1-4	ET32-ET35	T2 - T5	Trouble Code	1 320 032 - 1 320 035
Bell Restore 1-4	ER32-ET35	R2 - R5	Restore Code	3 320 032 - 3 320 035
Smoke (Loop) Power Trouble	ET36	T6	Trouble Code	1 320 036
Smoke (Loop) Power Restore	ET36	R6	Restore Code	3 320 036
Aux Power Trouble	ET37	T7	Trouble Code	1 330 037
Aux Power Restore	ER37	R7	Restore Code	3 330 037
Earth Ground Trouble	ET38	T8	Trouble Code	1 330 038
Earth Ground Restore	ER38	R8	Restore Code	3 330 038
Keypad Power Trouble	ET40	T0	Trouble Code	1 330 040
Keypad Power Restore	ET40	R0	Restore Code	3 330 040
5217 Expander Trouble	ET51-ET52	T1 - T2	Trouble Code	1 330 051 - 1 330 052
5217 Expander Restore	ER51-ER52	R1 - R2	Restore Code	3 330 051 - 3 330 052
5280 Expander Trouble	ET61-ET68	T1 - T8	Trouble Code	1-330 061 - 1 330 068
5280 Expander Restore	ER61-ER68	R1 - R8	Restore Code	3-330 061 - 3 330 068
NAC Bypass	ET101-ET104	T1 - T4	Trouble Code	1-330 101 - 1 330 104
NAC Restore	ER101-ER104	R1 - R4	Restore Code	3-330 101 - 3 330 104
Fire Alarm 1-30	FA1 - FA30	A1 - A0	Alarm Code	1 110 001 - 1 110 030
Fire Bypass	FB1-FB30	T1 - T0	Trouble Code	1 571 001 - 1 571 030
Fire Alarm Restore 1-30	FH1 - FH30	AR1 - AR0	Alarm Restore Code	3 110 001 - 3 110 030
Fire Test Begin	FI1 - FI10	Test 0	Test Code	1 604 000
Fire Trouble Restore 1-30	FJ1 - FJ30	R1 - R0	Restore Code	3 373 001 - 3 373 030
Fire Test End	FK0	Test 0	Test Code	1 604 000
Fire Restore	FR1-FR30	R1 - R0	Restore Code	3 110 001 - 3 110 030
Fire Trouble 1-30	FT1 - FT30	T1 - T0	Trouble Code	1 373 001 - 1 373 030
Fire Unbypass	FU1-FU30	R1 - R9	Restore Code	3 571 011 - 3 571 030
Heat Alarm	KA1-KA30	A1 - A9	Alarm Code	1 114 001 - 1 114 030
Heat Bypass	KB1-KB30	T1 - T0	Trouble Code	1 570 011 - 1 570 030
Heat Alarm Restore	KH1-KH30	AR1 - AR0	Alarm Restore Code	3 114 001 - 3 114 030

Table 6-2: Event and Reporting Code by Format

Event	SIA8 & 20	SK4/2	3/1 1400 & 2300	Contact ID
Heat Trouble	KT1-KT30	T1 - T0	Trouble Code	1 370 001 - 1 370 030
Heat Trouble Restore	KJ1-KJ30	R1 - R0	Restore Code	3 370 001 - 3 370 030
Heat Restoral	KR1-KR30	R1 - R0	Restore Code	3 370 001 - 3 370 030
Heat Unbypass	KU1-KU30	R1 - R0	Restore Code	3 570 001 - 3 570 030
Trouble Phone Line #1	LT1	T1	Trouble Code	1 351 000 01
Restore Phone Line #1	LR1	R1	Restore Code	3 351 000 01
Trouble Phone Line #2	LT2	T2	Trouble Code	1 352 000 02
Restore Phone Line #2	LR2	R2	Restore Code	3 352 000 02
Automatic Test	*RP0 or RP99 (See * Note)	*Test 0 or Test 9	Test Code	*1 602 000 or 1 602 099
Power Up	RR0	T0	Test Code	1 305 000
Downloading Passed	RS0	Test 0	Test Code	1 412 000
Data Lost	RT0	Test 0	Trouble Code	1 354 000
Downloading Failed	RU0	Test 0	Test Code	1 413 000
Manual Test	RX1-RX10	Test 1 - Test 0	Test Code	1 601 001 - 1 601 010
Sprinkler Alarm	SA1-SA30	A1 - A0	Alarm code	1 113 001 - 1 113 030
Sprinkler Bypass	SB1-SB30	T1 - T0	Trouble Code	1 570 001 - 1 570 030
Sprinkler Alarm Restore	SH1-SH30	AR1 - AR0	Alarm Restore Code	3 113 001 - 3 113 030
Sprinkler Trouble Restore 1-30	SJ1 - SJ30	R1 - R0	Restore Code	3 370 001 - 3 370 030
Sprinkler Supervisory Restore 1-30	SR1 - SR30	R1 - R0	Restore Code	3 203 001 - 3 203 030
Sprinkler Supervisory 1-30	SS1 - SS30	S1 - S0	Supervisory Code	1 203 001 - 1 203 030
Sprinkler Trouble 1-30	ST1 - ST30	T1 - T0	Trouble Code	1 370 001 - 1 370 030
Sprinkler Unbypass 1-30	SU1-SU30	R1 - R0	Restore Code	3 570 001 - 3 570 030
Untyped Zone Alarm 1-30	UA1-UA30	A1 - A0	Alarm Code	1 140 001 - 1 140 030
Untyped Bypass 1-30	UB1-UB30	T1 - T0	Trouble Code	1 570 001 - 1 570 030
Untyped Alarm Restore 1-30	UH1-UH30	AR1 - AR9	Alarm Restore Code	3 140 001 - 3 140 030
Untyped Trouble Restore 1-30	UJ1-UJ30	R1 - R0	Restore Code	3 370 001 - 3 370 030
Untyped Zone Trouble 1-30	UT1-UT30	T1 - T0	Trouble Code	1 370 001 - 1 370 030
Untyped Zone Unbypass 1-30	UU1-UU30	R1 - R0	Restore Code	3 570 001 - 3 570 030
Water Alarm 1-30	WA1-WA30	A1 - A0	Alarm Code	1 154 001 - 1 154 030
Water Bypass 1-30	WB1-WB30	T1 - T0	Trouble Code	1 570 001 - 1 570 030
Water Alarm Restore 1-30	WH1-WH30	AR1 - AR0	Alarm Restore Code	3 154 001 - 3 154 030
Water Trouble Restore 1-30	WJ1-WJ30	R1 - R0	Restore Code	3 370 001 - 3 370 030
Water Trouble 1-30	WT1-WT30	T1 - T0	Trouble Code	1 370 001 - 1 370 030
Water Unbypass 1-30	WU1-WU30	R1 - R0	Restore Code	3 570 001 - 3 570 030
Communications Failure Line #1	YC1	T1	Trouble Code	1 354 001

Table 6-2: Event and Reporting Code by Format

Event	SIA8 & 20	SK4/2	3/1 1400 &2300	Contact ID
Communications Restore Line #1	YK1	R1	Restore Code	3 354 001
Communications Failure Line #2	YC2	T2	Trouble Code	1 354 002
Communications Restore Line #2	YK2	R2	Restore Code	3 354 002
System Battery Restore	YR0	R0	Restore Code	3 302 000
System Battery Trouble	YT0	T0	Trouble Code	1 302 000
Cold Alarm 1-30	ZA1-ZA30	A1 - A0	Alarm Code	1 153 001 - 1 153 030
Cold Bypass 1-30	ZB1-ZB30	T1 - T0	Trouble Code	1 570 001 - 1 570 030
Cold Alarm Restore 1-30	ZH1-ZH30	AR1 - AR0	Alarm Restore Code	3 153 001 - 3 153 030
Cold Trouble Restore 1-30	ZJ1-ZJ30	R1 - R0	Restore Code	2 370 001 - 3 370 030
Cold Trouble 1-30	ZT1-ZT30	T1 - T0	Trouble Code	1 370 001 - 1 370 030
Cold Unbypass 1-30	ZU1-ZU30	R1 - R0	Restore Code	3 570 001 - 3 570 030

* **Note:** 99 replaces 0 (or 9 with 0 for SK4/2 format) when off normal conditions exists on the control panel when the automatic test is sent to the central station receiver. For example, if a trouble condition exists on the control panel when the control sends an automatic phone test.

Section 7

Troubleshooting

This section of the manual contains information that can be used to isolate and correct installation problems encountered in the field.

7.1 System Error Messages

Table 7-1 contains a list of possible error messages along with their meaning and possible solution.

Table 7-1: Error Messages

Error Message	Description	Solution
FLASH Defaulted	On power up the SK-5208 will check the flash for an "option record".	If an "option record" is not found during power up, one will be created and the display will indicate "Flash Defaulted" for approximately one second.
Earth Fault Trb	The SK-5208 has built-in earth ground fault detection that will detect an earth ground fault connection between earth and any panel terminal. When an earth ground fault is detected the SK-5208 display will indicate Earth Fault Trb. The SK-5208 will also add two events to the history buffer Expand Trb 38 and Earth ###. The Earth ### is a debug event number between 0 and 255.	See Section 7.2 for earth ground fault troubleshooting procedure.
Key BUS Trouble	This message will display when communication is lost between the 5235 and the control panel.	Check for a short or an open on either the SKI or SKO terminals.
NAC # Trb	This message indicates that a short or an open is detected on a Notification Appliance Circuit. The # indicates which NAC has the trouble.	Check for a short or an open on the indicated NAC wire run.
Remote # Trb	Each 5235 can be programmed to be supervised (see Section 4.2.2). If the SK-5208 is unable to communicate with the 5235 it will indicate this message. # indicates the ID number of the faulted touchpad.	Check the wire connections between the indicated touchpad and the control panel.
5217 Trb #	If the SK-5208 is unable to communicate with a 5217 expander it will display this message. The # indicates the ID number of the expander in trouble.	Check all wire connections between the control panel and the 5217 expander in trouble.
5280 Trb #	If the control panel is unable to communicate with a SK-5280 Status Display Module this message will be displayed. # indicates the ID number of the SK-5280 in trouble.	Check all wire connections between the control panel and the SK-5280 in trouble.

Table 7-1: Error Messages

Error Message	Description	Solution
Smk Pwr Trb	Smoke power terminals 11, 14, 17, and 20 are supervised. If the voltage between circuit ground (terminals 9, 22, 26, 33) and loop power is less than 20VDC this message will display.	This may occur when the maximum current draw for the initiation circuit is exceeded. See Section 3.11 for initiation circuit current requirements.
5235 Pwr Trb	The power terminal for the 5235 is supervised and a trouble indication will occur if the voltage between circuit ground and terminal 32 drops below 20 VDC.	This may occur if the maximum current rating (1Amp) for this circuit is exceeded.
Aux Pwr Trb	The SBUS power terminal (27) is supervised and will display this message when the voltage between SBUS power and circuit ground drops below 20 VDC.	This may occur if the maximum current rating (1Amp) for this circuit is exceeded.
AC Trb	This message is displayed when the AC voltage drops below 98 VAC.	Check the AC power connection. This report will be sent to the central station after the AC delay time has expired. See Section 4.2.10 to program AC delay time.
Battery Trb	This message will be displayed when the battery voltage drops below 20.4 VDC under load. The control panel performs a load test every minute.	Check battery connection. Verify that the control panel has AC power.
Ph Line # Trb	This message is displayed when the phone line voltage drops below 2 VDC or can not supply a minimum of 4 mA of current. The # indicates which phone line is in trouble.	
Data Lost	This event will be reported to the central station if the reporting buffer fills. This may occur if more than 24 events need to be reported. When the report buffer is full and additional events are added to the report buffer, the oldest event will be overwritten and the data lost event will be added.	
Com # Trb	The SK-5208 must use alternating phone lines (according to NFPA) when reporting auto tests and manual tests. If the control panel can not communicate using the selected phone line, the Com # Trb message will be displayed. The # indicates which line had the trouble.	The trouble condition will clear after the control panel is successful in communicating using the phone line.

7.2 Earth Ground Fault Troubleshooting

An Earth Fault Trb indicates that the panel has detected a short between any terminal on the panel and earth ground. To determine the location of the short, place a DC volt meter with ground on terminal 22 (circuit ground) and positive on any of the screws that secure the circuit board to the cabinet (earth ground).

A typical meter reading should indicate a voltage of approximately 10.85 volts DC. Any reading lower than 8.5 volts DC or higher than 13.1 volts DC will put the panel into Earth Fault Trb (see also Table 7-1). Remove and leave off field wiring from the panel until the meter reads in the normal range (about 10.85 VDC).

When an Earth Fault Trb is indicated at the touchpad two messages will be added to the event history buffer, Expand Trb 38 and Earth ###. This information can be very helpful to identify where an earth ground fault exists in an intermittent earth ground situation.

If the Earth ### is lower than 74 this typically would indicate an earth ground short to a low voltage source (8.5 VDC or less). For example, any circuit ground terminal or zone input terminal.

If the Earth ### is higher than 114 this typically would indicate an earth ground to a higher voltage source (13.1 VDC or higher). For example, any circuit power, standby battery, phone lines, or AC power.

Appendix A

Compatible Devices

This section of the manual lists devices (smoke detectors and notification appliances) that are compatible with the SK-5208. Contact Silent Knight if you have a question about whether a device not listed here is compatible.

A.1 Smoke Detectors

This section of the manual contains information about smoke detectors that are compatible with the SK-5208.

	SK-5208	SK-5217
Identifier	24J	24J
Maximum Voltage	27.4 VDC	27.4 VDC

Note: The maximum number of smoke detectors per zone is determined by both the current draw and the impedance of the smoke detector. If too many smoke detectors are used on any zone, false alarms could occur.

Do not mix different models of detectors on any zone; false alarms could occur.

Control unit Smoke Reset Time must be programmed for a number greater than or equal to the maximum reset time of the smoke detector.

Two-Wire Smoke Detectors

The table below lists two-wire smoke detectors that are compatible with the SK-5208 and SK-5217 zone expander. The table is organized by manufacturer. The columns show the number of detectors per loop that can be used.

Manufacturer	Enhanced Mode Compatible	Model Name or Number (Base model name or number in parentheses.)	Compatibility ID		# per Loop
			Head	Base	
Apollo		55000-150, 151, 152, 153 (45681-200, 220, 230, 231, 232)	55000-150, 151, 152, 153	45681-200, 220, 230, 231, 232	40
	✓	55000-250 (45681-200, 220, 230, 231, 232)	55000-350	45681-200, 220, 230, 231, 232	40
	✓	55000-350 (45681-200, 220, 230, 231, 232)	55000-250	45681-200, 220, 230, 231, 232	25
		55000-380 (45681-200, 220, 230, 231, 232)	55000-380	45681-200, 220, 230, 231, 232	15
Detection Systems		DS200 (MB200-2W)	B	A	24
		DS200HD (MB200-2W)	B	A	24
		DS250 (MB2W or MB2WL)	B	A	18
		DS250HD (MB2W or MB2WL)	B	A	18
		DS250TH (MB2W or MB2WL)	B	A	18
ESL	✓	425 (S10)	N/A	S00	30
	✓	425C (S10)	N/A	S00	30
	✓	425CR (S10)	N/A	S00	30
	✓	425CRT (S10)	N/A	S00	30
	✓	425CT (S10)	N/A	S00	30
	✓	429C (S10A)	N/A	S10A	30
	✓	429CRT (S11A)	N/A	S11A	30
	✓	429CST (S11A)	N/A	S11A	30
	✓	429CT (S10A)	N/A	S10A	30
	✓	521B	N/A	S10A/S11A	40
	✓	521BXT	N/A	S10A/S11A	40
	✓	609U01-11	S10	S00	40
	✓	609U02-11	S10	S00/S03	40
	✓	611U (601U or 602U)	S10	S00/S03	40
	✓	611UD (601U or 602U)	S10	S00/S03	40
	✓	611UT (601U or 602U)	S10	S00/S03	40
	✓	612U (601U or 602U)	S10	S00/S03	40
	✓	612UD (601U or 602U)	S10	S00/S03	40
	✓	711U (701E or 701U)	N/A	S10A	25
	✓	712U (701E or 701U)	N/A	S10A	25
✓	713-5U (702E or 701U)	N/A	S10A	25	
✓	713-6U (702E or 701U)	N/A	S10A	25	
✓	721-U (S10A)	N/A	S10A	30	
✓	721-UT (S10A)	N/A	S10A	30	

Manufacturer	Enhanced Mode Compatible	Model Name or Number (Base model name or number in parentheses.)	Compatibility ID		# per Loop
			Head	Base	
FCI		30II (301B)	A	A	20
		30IIL (301BL/SS B401BH)	N/A	N/A	20
		30IP (301B)	A	N/A	20
		30IPL (301BL/SS B401BH)	A	N/A	20
		30IPT (301B)	A	N/A	20
		30IP (301DH-2)	A	N/A	20
		30II-DH (301DH-2)	A	N/A	20
		2100S	A	N/A	20
		2100TS	A	N/A	20
		2100TR	A	N/A	20
		2100AT	A	N/A	20
		SBS-1101	A	N/A	20
		SBS-1201	A	N/A	20
		SBS-120IT	N/A	N/A	20
		PSD-7155 (2WB/2WRLT/2WRB)	P55FE1	FE51A	40
		PSD-7155 (CPD-001/-002/-003/-005)	P56FE1	FE51A	40
		PSD-7156 (2WB/2WRLT/2WRB)	P55FE1	FE01A	40
		PSD-7156 (CPD-001/-002/-003/-005)	P56FE1	FE01A	40
		CPD-7051 (2WB/2WRLT/2WRB)	CPD7051	FE51A	40
		CPD-7051 (CPD-001/-002/-003/-005)	CPD7051	FE51A	40
	DH100P (Duct Housing)	N/A	N/A	40	
Grinnell Fire Protection		612H (4B, 6B, 612/912)	612H	4B, 6B, 612/912	15
		612HP (4B, 6B, 612/912)	612HP	4B, 6B, 612/912	15
		612I (4B, 6B, 612/912)	612I 4B	4B, 6B, 612/912	15
		612P (4B, 6B, 612/912)	612P	4B, 6B, 612/912	15
		622HP (4B, 6B, 612/912)	622HP	4B, 6B, 612/912	15
		632H(4B, 6B, 612/912)	632H	4B, 6B, 612/912	15
		MD612 (4B, 6B, 612/912)	MD612	4B, 6B, 612/912	15
		MD622 (4B, 6B, 612/912)	MD622	4B, 6B, 612/912	15
		MD632 (4B, 6B, 612/912)	MD632	4B, 6B, 612/912	15
		MF612 (4B, 6B, 612/912)	MF612	4B, 6B, 612/912	15
		MR612 (4B, 6B, 612/912)	MR612	4B, 6B, 612/912	15
		MR612T (4B, 6B, 612/912)	MR612T	4B, 6B, 612/912	15
		ISC—350I (IBC-350, 351, 353)	ISC—350I	IBC-350, 351, 353	24
	ISC—350P (IBC-350, 351, 353)	ISC—350P	IBC-350, 351, 353	24	
Hochiki		SIH-24F (HS-224D or HSB-224)	N/A	N/A	25
		SLK-12	N/A	N/A	25
		SLK-24F (HS-224D)	N/A	N/A	25
		SLK-24FH (HS-224D)	N/A	N/A	25
		(HS224L) Heat Detector base	N/A	N/A	30
		SLR-8358B	N/A	N/A	25
Kidde-Fenwal		PSD-7155 (70-201000-001)	P55FE1, P56FE1	FE51A, FE01A	40
		PSD-7156 (70-201000-001)	P56FE1	FE01A	40
		CPD-7051 (70-201000-001)	CPD 7051, I51FE1	FE51A, FE01A	40

Manufacturer	Enhanced Mode Compatible	Model Name or Number (Base model name or number in parentheses.)	Compatibility ID		# per Loop
			Head	Base	
System Sensor		1100T			20
		1151 (B110LP)			20
		1400	A	N/A	20
		1451 (B401B)	A	A	20
		2100	A	N/A	20
		2100AT	A	N/A	20
		2100D	A	N/A	20
		2100T	A	N/A	20
		2100TR	A	N/A	20
		2100TS	A	N/A	20
		2151 (B110LP)			20
		2300	A	N/A	20
		2300T	A	N/A	20
		2300TB	A	N/A	20
		2400	A	N/A	20
		2400TH			20
		2400 (DH400)	A	N/A	20
		2451 (B401B)	A	N/A	20
		2451DH (DH 400)	A	N/A	20
	2451TH (B401B)	A	N/A	20	

Four Wire Smoke Detectors

Manufacturer	Model
Hochiki	SLR-835B with HD-6 Base
ESL	445C Series 449C Series
System Sensor	1851B 2851/2851BTH DH400AC/DC

A.2 Notification Appliances

The chart below lists notification appliances compatible with the SK-5208.

Manufacturer	Model	Type
Faraday	446X 12/24VDC	Vibrating Bell
	476X 12/24VDC	Vibrating Bell
	477X 12/24VDC	Single Stroke Bell
	5303B-0-14-24-DC	Chime (flush)
	5304B-0-14-24-DC	Chime (surface)
	5305B-0-4-24-DC	Chime (ceiling)
	5306B-()-14-24-DC	Chime/Strobe (flush)
	5307B-()-14-24-DC	Chime/Strobe (surface)
	5308B-()-4-24-DC	Chime/Strobe (ceiling)
	5333B-0-14-24-DC	Multi-Tone Horn (flush)
	5334B-0-14-24-DC	Multi-Tone Horn (surface)
	5336B-()-14-24-DC	Multi-Tone Horn/Strobe (flush)
	5337B-()-14-24-DC	Multi-Tone Horn/Strobe (surface)
	5338B-()-4-24-DC	Multi-Tone Horn/Strobe (ceiling)
	5343B-0-14-24-DC	Single Tone Horn (flush)
	5344B-0-14-24-DC	Single Tone Horn (surface)
	5345B-0-4-24-DC	Single Tone Horn (ceiling)
	5346B-()-14-24-DC	Single Tone Horn/Strobe (flush)
	5347B-()-14-24-DC	Single Tone Horn/Strobe (surface)
	5348B-()-4-24-DC	Single Tone Horn/Strobe (ceiling)
	5373B-0-14-24-DC	8-Tone Horn (flush)
	5374B-0-14-24-DC	8-Tone Horn (surface)
	5375B-0-4-24-DC	8-Tone Horn (ceiling)
	5376B-()-14-24-DC	8-Tone Horn/Strobe (flush)
	5377B-()-14-24-DC	8-Tone Horn/Strobe (surface)
	5378B-()-4-24-DC	8-Tone Horn/Strobe (ceiling)
	5405B-0-14-24-DC	Sync Control Unit
	5508B-()-14-24-DC	Single Gang Sync Strobe (flush)
	5521B-()-14-24-DC	4" Square Sync Strobe (surface)
	5522B-()-14-24-DC	4" Square Sync Strobe (flush)
	6126B-U-14-24 VDC	Horn/Strobe
	6223B-0-14-24-DC	Horn (flush)

Manufacturer	Model	Type
Faraday (Cont.)	6224B-0-14-24-DC	Horn (surface)
	6225B-0-4-24-DC	Horn (ceiling)
	6226B-()-14-24-DC	Horn/Strobe (flush)
	6227B-()-14-24-DC	Horn/Strobe (surface)
	6228B-()-4-24-DC	Horn/Strobe (ceiling)
	6243B-0-14-24-DC	Electron-Mechanical Horn (flush)
	6244B-0-14-24-DC	Electron-Mechanical Horn (surface)
	6245B-0-4-24-DC	Electron-Mechanical Horn (ceiling)
	6246B-()-14-24-DC	Electron-Mechanical Horn/Strobe (flush)
	6247B-()-14-24-DC	Electron-Mechanical Horn/Strobe (surface)
	6248B-()-4-24-DC	Electron-Mechanical Horn/Strobe (ceiling)
	6300B-0-14-24-DC	Mini-Horn (flush)
	6301B-0-14-24-DC	Mini-Horn (surface)
	6302B-0-4-24-DC	Mini-Horn (ceiling)
	6310B-()-14-24-DC	Mini-Horn/Strobe/Strobe (flush)
	6311B-()-14-24-DC	Mini-Horn/Strobe/Strobe (surface)
	6312B-()-14-24-DC	Mini-Horn/Strobe/Strobe (ceiling)
	6320B-()-14-24-DC	Sync Mini Horn/Strobe (1 gang)
	6321B-()-14-24-DC	Sync Mini Horn/Strobe (1,2 gang)
	6322B-()-14-24-DC	Sync Mini Horn/Strobe (1,2 gang, 4SQ)
FCI	130-3117C	Mini Horn
	130-3147C	Mini Horn
	BLV-6	Vibrating Bell
	BLV-10	Vibrating Bell
	BLVCH	Vibrating Chime
	BC/STW	Bell/Chime Plate w/15-75 cd Strobe
	B/STW	Bell/Chime Plate w/15-75 cd Strobe
	BC/STS	Bell/Chime Plate w/110 cd Strobe
	H12/24-FC	Horn
	H12/24W-FC	Horn
	H12/24K-FC	Horn
	HC12/24-FC	Horn
	HC12/24W-FC	Horn
	HC12/24K-FC	Horn
	P241575F-FC	Horn/Strobe
	P241575K-FC	Horn/Strobe
	P2430-FC	Horn/Strobe
	P2430W-FC	Horn/Strobe
	P2430K-FC	Horn/Strobe
	P2475-FC	Horn/Strobe
	P2475W-FC	Horn/Strobe
	P2475K-FC	Horn/Strobe
	P24110-FC	Horn/Strobe
	P24110W-FC	Horn/Strobe
	P24110K-FC	Horn/Strobe
	S2415-FC	Strobe
	S241575-FC	Strobe
	S241575W-FC	Strobe
	S241575K-FC	Strobe

Manufacturer	Model	Type
FCI (Cont.)	S2430-FC	Strobe
	S2430W-FC	Strobe
	S2430K-FC	Strobe
	S2475-FC	Strobe
	S2475W-FC	Strobe
	S2475K-FC	Strobe
	S24110-FC	Strobe
	S24110W-FC	Strobe
	S24110K-FC	Strobe
Federal Signal	450	Horn
	VALS 24 VDC version	Horn/Strobe
Gentex	GEH24-R	HORN 24VDC RED
	GEH24-W	HORN 24VDC WHT
	GEC24-15WR	HORN/STRB 24VDC 15CD WALL RED
	GEC24-15WW	HORN/STRB 24VDC 15CD WALL WHT
	GEC24-15PWR	HORN/STRB 24VDC 15CD WALL RED PLN
	GEC24-15PWW	HORN/STRB 24VDC 15CD WALL WHT PLN
	GEC24-30WR	HORN/STRB 24VDC 30CD WALL RED
	GEC24-30WW	HORN/STRB 24VDC 30CD WALL WHT
	GEC24-30PWR	HORN/STRB 24VDC 30CD WALL RED PLN
	GEC24-30PWW	HORN/STRB 24VDC 30CD WALL WHT PLN
	GEC24-60WR	HORN/STRB 24VDC 60CD WALL RED
	GEC24-60WW	HORN/STRB 24VDC 60CD WALL WHT
	GEC24-60PWR	HORN/STRB 24VDC 60CD WALL RED PLN
	GEC24-60PWW	HORN/STRB 24VDC 60CD WALL WHT PLN
	GEC24-75WR	HORN/STRB 24VDC 75CD WALL RED
	GEC24-75WW	HORN/STRB 24VDC 75CD WALL WHT
	GEC24-75PWR	HORN/STRB 24VDC 75CD WALL RED PLN
	GEC24-75PWW	HORN/STRB 24VDC 75CD WALL WHT PLN
	GEC24-110WR	HORN/STRB 24VDC 110CD WALL RED
	GEC24-110WW	HORN/STRB 24VDC 110CD WALL WHT
	GEC24-110PWR	HORN/STRB 24VDC 110CD WALL RED PLN
	GEC24-110PWW	HORN/STRB 24VDC 110CD WALL WHT PLN
	GEC24-15/75WR	HORN/STRB 24VDC 15/75 WALL RED
	GEC24-15/75WW	HORN/STRB 24VDC 15/75 WALL WHT
	GEC24-15/75PWR	HORN/STRB 24VDC 15/75 WALL RED PLN
	GEC24-15/75PWW	HORN/STRB 24VDC 15/75 WALL WHT PLN
	GES24-15WR	STROBE 24VDC 15CD WALL RED
	GES24-15WW	STROBE 24VDC 15CD WALL WHT
	GES24-15PWR	STROBE 24VDC 15CD WALL RED PLN
	GES24-15PWW	STROBE 24VDC 15CD WALL WHT PLN
	GES24-30WR	STROBE 24VDC 30CD WALL RED
	GES24-30WW	STROBE 24VDC 30CD WALL WHT
	GES24-30PWR	STROBE 24VDC 30CD WALL RED PLN
	GES24-30PWW	STROBE 24VDC 30CD WALL WHT PLN
	GES24-60WR	STROBE 24VDC 60CD WALL RED

Manufacturer	Model	Type
Gentex (cont.)	GES24-60WW	STROBE 24VDC 60CD WALL WHT
	GES24-60PWR	STROBE 24VDC 60CD WALL RED PLN
	GES24-60PWW	STROBE 24VDC 60CD WALL WHT PLN
	GES24-75WR	STROBE 24VDC 75CD WALL RED
	GES24-75WW	STROBE 24VDC 75CD WALL WHT
	GES24-75PWR	STROBE 24VDC 75CD WALL RED PLN
	GES24-75PWW	STROBE 24VDC 75CD WALL WHT PLN
	GES24-110WR	STROBE 24VDC 110CD WALL RED
	GES24-110WW	STROBE 24VDC 110CD WALL WHT
	GES24-110PWR	STROBE 24VDC 110CD WALL RED PLN
	GES24-110PWW	STROBE 24VDC 110CD WALL WHT PLN
	GES24-15/75WR	STROBE 24VDC 15/75 WALL RED
	GES24-15/75WW	STROBE 24VDC 15/75 WALL WHT
	GES24-15/75PWR	STROBE 24VDC 15/75 WALL RED PLN
	GES24-15/75PWW	STROBE 24VDC 15/75 WALL WHT PLN
	ST24-15WR	STROBE LO PRO 24VDC 15CD WALL RED
	ST24-15WW	STROBE LO PRO 24VDC 15CD WALL WHT
	ST24-15-PWR	STROBE LO PRO 24VDC 15CD WALL RED PLN
	ST24-15PWW	STROBE LO PRO 24VDC 15CD WALL WHT PLN
	ST24-30WR	STROBE LO PRO 24VDC 30CD WALL RED
	ST24-30WW	STROBE LO PRO 24VDC 30CD WALL WHT
	ST24-30PWR	STROBE LO PRO 24VDC 30CD WALL RED PLN
	ST24-30PWW	STROBE LO PRO 24VDC 30CD WALL WHT PLN
	ST24-60WR	STROBE LO PRO 24VDC 60CD WALL RED
	ST24-60WW	STROBE LO PRO 24VDC 60CD WALL WHT
	ST24-60PWR	STROBE LO PRO 24VDC 60CD WALL RED PLN
	ST24-60PWW	STROBE LO PRO 24VDC 60CD WALL WHT PLN
	ST24-75WR	STROBE LO PRO 24VDC 75CD WALL RED
	ST24-75WW	STROBE LO PRO 24VDC 75CD WALL WHT
	ST24-75PWR	STROBE LO PRO 24VDC 75CD WALL RED PLN
	ST24-75PWW	STROBE LO PRO 24VDC 75CD WALL WHT PLN
	ST24-110WR	STROBE LO PRO 24VDC 110CD WALL RED
	ST24-110WW	STROBE LO PRO 24VDC 110CD WALL WHT
	ST24-110PWR	STROBE LO PRO 24VDC 110CD WALL RED PLN
	ST24-110PWW	STROBE LO PRO 24VDC 110CD WALL WHT PLN
	ST24-15/75WR	STROBE LO PRO 24VDC 15/75 WALL RED
	ST24-15/75WW	STROBE LO PRO 24VDC 15/75 WALL WHT
	ST24-15/75PWR	STROBE LO PRO 24VDC 15/75 WALL RED PLN
	ST24-15/75PWW	STROBE LO PRO 24VDC 15/75 WALL WHT PLN
	HS24-15WR	HORN/STRB LO PRO 24VDC 15CD WALL RED
	HS24-15WW	HORN/STRB LO PRO 24VDC 15CD WALL WHT
	HS24-15PWR	HORN/STRB LO PRO 24VDC 15CD WALL RED PLN
	HS24-15PWW	HORN/STRB LO PRO 24VDC 15CD WALL WHT PLN
	HS24-30WR	HORN/STRB LO PRO 24VDC 30CD WALL RED
HS24-30WW	HORN/STRB LO PRO 24VDC 30CD WALL WHT	

Manufacturer	Model	Type
Gentex (cont.)	HS24-30PWR	HORN/STRB LO PRO 24VDC 30CD WALL RED PLN
	HS24-30PWW	HORN/STRB LO PRO 24VDC 30CD WALL WHT PLN
	HS24-60WR	HORN/STRB LO PRO 24VDC 60CD WALL RED
	HS24-60WW	HORN/STRB LO PRO 24VDC 60CD WALL WHT
	HS24-60PWR	HORN/STRB LO PRO 24VDC 60CD WALL RED PLN
	HS24-60PWW	HORN/STRB LO PRO 24VDC 60CD WALL WHT PLN
	HS24-75WR	HORN/STRB LO PRO 24VDC 75CD WALL RED
	HS24-75WW	HORN/STRB LO PRO 24VDC 75CD WALL WHT
	HS24-75PWR	HORN/STRB LO PRO 24VDC 75CD WALL RED PLN
	HS24-75PWW	HORN/STRB LO PRO 24VDC 75CD WALL WHT PLN
	HS24-110WR	HORN/STRB LO PRO 24VDC 110CD WALL RED
	HS24-110WW	HORN/STRB LO PRO 24VDC 110CD WALL WHT
	HS24-110PWR	HORN/STRB LO PRO 24VDC 110CD WALL RED PLN
	HS24-110PWW	HORN/STRB LO PRO 24VDC 110CD WALL WHT PLN
	HS24-15/75WR	HORN/STRB LO PRO 24VDC 15/75 WALL RED
	HS24-15/75WW	HORN/STRB LO PRO 24VDC 15/75 WALL WHT
	HS24-15/75PWR	HORN/STRB LO PRO 24VDC 15/75 WALL RED PLN
	HS24-15/75PWW	HORN/STRB LO PRO 24VDC 15/75 WALL WHT PLN
	GXS-4-15WW	STROBE 24VDC 15CD WALL WHT
	GXS-4-15PWR	STROBE 24VDC 15CD WALL RED PLN
	GXS-4-15PWW	STROBE 24VDC 15CD WALL WHT PLN
	GXS-4-30WR	STROBE 24VDC 30CD WALL RED
	GXS-4-30WW	STROBE 24VDC 30CD WALL WHT
	GXS-4-30PWR	STROBE 24VDC 30CD WALL RED PLN
	GXS-4-30PWW	STROBE 24VDC 30CD WALL WHT PLN
	GXS-4-60WR	STROBE 24VDC 60CD WALL RED
	GXS-4-60WW	STROBE 24VDC 60CD WALL WHT
	GXS-4-60PWR	STROBE 24VDC 60CD WALL RED PLN
	GXS-4-60PWW	STROBE 24VDC 60CD WALL WHT PLN
	GXS-4-110WR	STROBE 24VDC 110CD WALL RED
	GXS-4-110WW	STROBE 24VDC 110CD WALL WHT
	GXS-4-110PWR	STROBE 24VDC 110CD WALL RED PLN
	GXS-4-110PWW	STROBE 24VDC 110CD WALL WHT PLN
	GXS-4-15/75WR	STROBE 24VDC 15/75 WALL RED
	GXS-4-15/75WW	STROBE 24VDC 15/75 WALL WHT
	GXS-4-15/75CR	STROBE 24VDC 15/75 CLG RED
	GXS-4-15/75CW	STROBE 24VDC 15/75 CLG WHT
	GXS-4-15/75PWR	STROBE 24VDC 15/75 WALL RED PLN
	GXS-4-15/75PWW	STROBE 24VDC 15/75 WALL WHT PNL

Manufacturer	Model	Type
Gentex (cont.)	GXS-4-15/75PCR	STROBE 24VDC 15/75 CLG RED PLN
	GXS-4-15/75PCW	STROBE 24VDC 15/75 CLG WHT PLN
	GXS-4-15/75WRZ	SYNC STROBE 24VDC 15/75 WALL RED
	GXS-4-15/75WWZ	SYNC STROBE 24VDC 15/75 WALL WHT
	GXS-4-15/75PWRZ	SYNC STROBE 24VDC 15/75 WALL RED PLN
	GXS-4-15/75PWWZ	SYNC STROBE 24VDC 15/75 WALL WHT PLN
	GXS-4-30/75WR	STROBE 24VDC 30/75 WALL RED
	GXS-4-30/75WW	STROBE 24VDC 30/75 WALL WHT
	GXS-4-30/75PWR	STROBE 24VDC 30/75 WALL RED PLN
	GXS-4-30/75PWW	STROBE 24VDC 30/75 WALL WHT PLN
	GX90S-4-15WR	MINI-HORN/STRB 24VDC 15CD WALL RED
	GX90S-4-15WW	MINI-HORN/STRB 24VDC 15CD WALL WHT
	GX90S-4-15PWR	MINI-HORN/STRB 24VDC 15CD WALL RED PLN
	GX90S-4-15PWW	MINI-HORN/STRB 24VDC 15CD WALL WHT PLN
	GX90S-4-30WR	MINI-HORN/STRB 24VDC 30CD WALL RED
	GX90S-4-30WW	MINI-HORN/STRB 24VDC 30CD WALL WHT
	GX90S-4-30PWR	MINI-HORN/STRB 24VDC 30CD WALL RED PLN
	GX90S-4-30PWW	MINI-HORN/STRB 24VDC 30CD WALL WHT PLN
	GX90S-4-60WR	MINI-HORN/STRB 24VDC 60CD WALL RED
	GX90S-4-60WW	MINI-HORN/STRB 24VDC 60CD WALL WHT
	GX90S-4-60PWR	MINI-HORN/STRB 24VDC 60CD WALL RED PLN
	GX90S-4-60PWW	MINI-HORN/STRB 24VDC 60CD WALL WHT PLN
	GX90S-4-110WR	MINI-HORN/STRB 24VDC 110CD WALL RED
	GX90S-4-110WW	MINI-HORN/STRB 24VDC 110CD WALL WHT
	GX90S-4-110PWR	MINI-HORN/STRB 24VDC 110CD WALL RED PLN
	GX90S-4-110PWW	MINI-HORN/STRB 24VDC 110CD WALL WHT PLN
	GX90S-4-15/75-WR	MINI-HORN/STRB 24VDC 15/75 WALL RED
	GX90S-4-15/75WW	MINI-HORN/STRB 24VDC 15/75 WALL WHT
	GX90S-4-15/75CR	MINI-HORN/STRB 24VDC 15/75 CLG RED
	GX90S-4-15/75CW	MINI-HORN/STRB 24VDC 15/75 CLG WHT
	GX90S-4-15/75PWR	MINI-HORN/STRB 24VDC 15/75 WALL RED PLN
	GX90S-4-15/75PWW	MINI-HORN/STRB 24VDC 15/75 WALL WHT PLN

Manufacturer	Model	Type
Gentex (cont.)	GX90S-4-15/75PCR	MINI-HORN/STRB 24VDC 15/75 CLG RED PLN
	GX90S-4-15/75PCW	MINI-HORN/STRB 24VDC 15/75 CLG WHT PLN
	GX90S-4-15/75WRZ	MINI-HORN/SYNC STRB 24VDC 15/75 WALL RED
	GX90S-4-15/75WWZ	MINI-HORN/SYNC STRB 24VDC 15/75 WALL WHT
	GX90S-4-15/75PWRZ	MINI-HORN/SYNC STRB 24VDC 15/75 CLG RED
	GX90S-4-15/75PWWZ	MINI-HORN/SYNC STRB 24VDC 15/75 CLG WHT
	GX90S-4-30/75WR	MINI-HORN/STRB 24VDC 30/75 WALL RED
	GX90S-4-30/75WW	MINI-HORN/STRB 24VDC 30/75 WALL WHT
	GX90S-4-30/75PWR	MINI-HORN/STRB 24VDC 30/75 WALL RED PLN
	GX90S-4-30/75PWW	MINI-HORN/STRB 24VDC 30/75 WALL WHT PLN
	HG124R	HORN 12/24VDC RED
	HG124W	HORN 12/24VDC WHT
	SHG24-15WR	HORN/STRB 24VDC 15CD WALL RED
	SHG24-15WW	HORN/STRB 24VDC 15CD WALL WHT
	SHG24-15PWR	HORN/STRB 24VDC 15CD WALL RED PLN
	SHG24-15PWW	HORN/STRB 24VDC 15CD WALL WHT PLN
	SHG24-30WR	HORN/STRB 24VDC 30CD WALL RED
	SHG24-30WW	HORN/STRB 24VDC 30CD WALL WHT
	SHG24-30PWR	HORN/STRB 24VDC 30CD WALL RED PLN
	SHG24-30PWW	HORN/STRB 24VDC 30CD WALL WHT PLN
	SHG24-60WR	HORN/STRB 24VDC 60CD WALL RED
	SHG24-60WW	HORN/STRB 24VDC 60CD WALL WHT
	SHG24-60PWR	HORN/STRB 24VDC 60CD WALL RED PLN
	SHG24-60PWW	HORN/STRB 24VDC 60CD WALL WHT PLN
	SHG24-110WR	HORN/STRB 24VDC 110CD WALL RED
	SHG24-110WW	HORN/STRB 24VDC 110CD WALL WHT
	SHG24-110PWR	HORN/STRB 24VDC 110CD WALL RED PLN
	SHG24-110PWW	HORN/STRB 24VDC 110CD WALL WHT PLN
	SHG24-15/75WR	HORN/STRB 24VDC 15/75 WALL RED
	SHG24-15/75WW	HORN/STRB 24VDC 15/75 WALL WHT
	SHG24-15/75CR	HORN/STRB 24VDC 15/75 CLG RED
	SHG24-15/75CW	HORN/STRB 24VDC 15/75 CLG WHT
	SHG24-15/75PWR	HORN/STRB 24VDC 15/75 WALL RED PNL
	SHG24-15/75PWW	HORN/STRB 24VDC 15/75 WALL WHT PLN
	SHG24-15/75PCR	HORN/STRB 24VDC 15/75 CLG RED PLN
	SHG24-15/75PCW	HORN/STRB 24VDC 15/75 CLG WHT PLN
	SHG24-15/75WRZ	HORN/SYNC STRB 24VDC 15/75 WALL RED
	SHG24-15/75WWZ	HORN/SYNC STRB 24VDC 15/75 WALL WHT
	SHG24-15/75PWRZ	HORN/SYNC STRB 24VDC 15/75 WALL RED PLN
	SHG24-15/75PWWZ	HORN/SYNC STRB 24VDC 15/75 WALL WHT PLN
	SHG24-30/75WR	HORN/STRB 24VDC 30/75 WALL RED

Manufacturer	Model	Type
Gentex (cont.)	SHG24-30/75WW	HORN/STRB 24VDC 30/75 WALL WHT
	SHG24-30/75CR	HORN/STRB 24VDC 30/75 CLG RED
	SHG24-30/75CW	HORN/STRB 24VDC 30/75 CLG WHT
	SHG24-30/75PWR	HORN/STRB 24VDC 30/75 WALL RED PNL
	SHG24-30/75PWW	HORN/STRB 24VDC 30/75 WALL WHT PLN
	GMH24R	HORN 24VDC RED
	GMS24-15WR	HORN/STRB 24VDC 15CD WALL RED
	GMS24-15PWR	HORN/STRB 24VDC 15CD WALL RED PLN
	GMS24-30WR	HORN/STRB 24VDC 30CD WALL RED
	GMS24-30PWR	HORN/STRB 24VDC 30CD WALL RED PLN
	GMS24-60WR	HORN/STRB 24VDC 60CD WALL RED
	GMS24-60PWR	HORN/STRB 24VDC 60CD WALL RED PLN
	GMS24-110WR	HORN/STRB 24VDC 110CD WALL RED
	GMS24-110PWR	HORN/STRB 24VDC 110CD WALL RED PLN
	GMS24-1575WR	HORN/STRB 24VDC 15/75 WALL RED
	GMS24-1575CR	HORN/STRB 24VDC 15/75 CLG RED
	GMS24-1575PWR	HORN/STRB 24VDC 15/75 WALL RED PLN
	GMS24-1575PCR	HORN/STRB 24VDC 15/75 CLG RED PLN
	GMS24-15/75WRZ	HORN/SYNC STRB 24VDC 15/75 WALL RED
	GMS24-15/75PWRZ	HORN/SYNC STRB 24VDC 15/75 WALL RED PLN
	GMS24-30/75WR	HORN/STRB 24VDC 30/75 WALL RED
	GMS24-30/75PWR	HORN/STRB 24VDC 30/75 WALL RED PLN
	WGMS24-75WR	HORN/STRB WP 24VDC 75CD WALL RED
	WGMS24-75CR	HORN/STRB WP 24VDC 75CD CLG RED
	WGMS24-75PR	HORN/STRB WP 24VDC 75CD WALL RED PLN
	SPKE4R	SPKR SQ 25/70 RED
	SPKE4W	SPKR SQ 25/70 WHITE
	SPKE4-15WR	SPKR/STRB SQ 25/70 15CD WALL RED
	SPKE4-15WW	SPKR/STRB SQ 25/70 15CD WALL WHITE
	SPKE4-15PWR	SPKR/STRB SQ 25/70 15CD WALL RED PLN
	SPKE4-15-PWW	SPKR/STRB SQ 25/70 15CD WALL WHITE PLN
	SPKE4-30WR	SPKR/STRB SQ 25/70 30CD WALL RED
	SPKE4-30WW	SPKR/STRB SQ 25/70 30CD WALL WHITE
	SPKE4-30PWR	SPKR/STRB SQ 25/70 30CD WALL RED PLN
	SPKE4-30-PWW	SPKR/STRB SQ 25/70 30CD WALL WHITE PLN
	SPKE4-60WR	SPKR/STRB SQ 25/70 60CD WALL RED
	SPKE4-60WW	SPKR/STRB SQ 25/70 60CD WALL WHITE
	SPKE4-60PWR	SPKR/STRB SQ 25/70 60CD WALL RED PLN
	SPKE4-60-PWW	SPKR/STRB SQ 25/70 60CD WALL WHITE PLN
	SPKE4-110WR	SPKR/STRB SQ 25/70 110CD WALL RED
	SPKE4-110WW	SPKR/STRB SQ 25/70 110CD WALL WHITE
	SPKE4-110PWR	SPKR/STRB SQ 25/70 110CD WALL RED PLN
	SPKE4-110PWW	SPKR/STRB SQ 25/70 110CD WALL WHITE PLN
SPKE4-15/75WR	SPKR/STRB SQ 25/70 15/75 WALL RED	
SPKE4-15/75WW	SPKR/STRB SQ 25/70 15/75 WALL WHITE	
SPKE4-15/75CR	SPKR/STRB SQ 25/70 15/75 CLG RED	
SPKE4-15/75CW	SPKR/STRB SQ 25/70 15/75 CLG WHITE	

Manufacturer	Model	Type
Gentex (cont.)	SPKE4-15/75PWR	SPKR/STRB SQ 25/70 15/75 WALL RED PLN
	SPKE4-15/75PWW	SPKR/STRB SQ 25/70 15/75 WALL WHITE PLN
	SPKE4-15/75WRZ	SPKR/SYNC STRB SQ 25/70 15/75 WALL RED
	SPKE4-15/75WWZ	SPKR/SYNC STRB SQ 25/70 15/75 WALL WHITE
	SPKE4-15/75PWRZ	SPKR/SYNC STRB SQ 25/70 15/75 WALL RD PN
	SPKE4-15/75PWWZ	SPKR/SYNC STRB SQ 25/70 15/75 WALL WT PL
	SPKE4-30/75WR	SPKR/STRB SQ 25/70 30/75 WALL RED
	SPKE4-30/75WW	SPKR/STRB SQ 25/70 30/75 WALL WHITE
	SPKE4-30/75PWR	SPKR/STRB SQ 25/70 30/75 WALL RED PLN
	SPKE4-30/75PWW	SPKR/STRB SQ 25/70 30/75 WALL WHITE PLN
	SPKE8R	SPKR RND 25/70 RED
	SPKE8W	SPKR RND 25/70 WHITE
	SPKE8-15WR	SPKR/STRB RND 25/70 15CD WALL RED
	SPKE8-15WW	SPKR/STRB RND 25/70 15CD WALL WHITE
	SPKE8-15PWR	SPKR/STRB RND 25/70 15CD WALL RED PLN
	SPKE8-15PWW	SPKR/STRB RND 25/70 15CD WALL WHITE PLN
	SPKE8-30WR	SPKR/STRB RND 25/70 30CD WALL RED
	SPKE8-30WW	SPKR/STRB RND 25/70 30CD WALL WHITE
	SPKE8-30PWR	SPKR/STRB RND 25/70 30CD WALL RED PLN
	SPKE8-30PWW	SPKR/STRB RND 25/70 30CD WALL WHITE PLN
	SPKE8-60WR	SPKR/STRB RND 25/70 60CD WALL RED
	SPKE8-60WW	SPKR/STRB RND 25/70 60CD WALL WHITE
	SPKE8-60PWR	SPKR/STRB RND 25/70 60CD WALL RED PLN
	SPKE8-60PWW	SPKR/STRB RND 25/70 60CD WALL WHITE PLN
	SPKE8-110WR	SPKR/STRB RND 25/70 110CD WALL RED
	SPKE8-110WW	SPKR/STRB RND 25/70 110CD WALL WHITE
	SPKE8-110PWR	SPKR/STRB RND 25/70 110CD WALL RED PLN
	SPKE8-110PWW	SPKR/STRB RND 25/70 110CD WALL WHITE PLN
	SPKE8-15/75WR	SPKR/STRB RND 25/70 15/75 WALL RED
	SPKE8-15/75WW	SPKR/STRB RND 25/70 15/75 WALL WHITE
	SPKE8-15/75CR	SPKR/STRB RND 25/70 15/75 CLG RED
	SPKE8-15/75CW	SPKR/STRB RND 25/70 15/75 CLG WHITE
	SPKE8-15/75PWR	SPKR/STRB RND 25/70 15/75 WALL RED PLN
	SPKE8-15/75PWW	SPKR/STRB RND 25/70 15/75 WALL WHITE PLN
	SPKE8-15/75WRZ	SPKR/SYNC STRB RND 25/70 15/75 WALL RED
	SPKE8-15/75WWZ	SPKR/SYNC STRB RND 25/70 15/75 WALL WHITE
	SPKE8-15/75PWRZ	SPKR/SYNC STRB RND 25/70 15/75 WALL RED PLN
	SPKE8-15/75PWWZ	SPKR/SYNC STRB RND 25/70 15/75 WALL WHITE PLN
	SPKE8-30/75WR	SPKR/STRB RND 25/70 30/75 WALL RED
	SPKE8-30/75WW	SPKR/STRB RND 25/70 30/75 WALL WHITE
	SPKE8-30/75PWR	SPKR/STRB RND 25/70 30/75 WALL RED PLN
	SPKE8-30/75PWW	SPKR/STRB RND 25/70 30/75 WALL WHITE PLN

Manufacturer	Model	Type
Gentex (cont.)	AVS-44	SYNC MODULE GANGABLE AVS-44
	ZMS-4	SYNC MODULE ZMS-4
	TRIM RING RED	"TRIM RING ""FIRE ALARM RED"" 4 PER UNIT"
	TRIM RING WHITE	"TRIM RING ""WHITE"" 4 PER UNIT"
	TRIM RING COMMANDER	TRIM PLATE SINGLE GANG RED 4 PER UNIT
	TRIM RING COMMANGER	TRIM PLATE SINGLE GANG 4 PER UNIT
	WGBB-R	BACKBOX WEATHERPROOF OR SURFACE RED
	GSB	BACKBOX SURFACE
System Sensor	H12/24	Horn
	HC12/24	Horn
	MASS241	Horn/Strobe
	MASS24110ADA	Horn/Strobe
	MASS2415ADA	Horn/Strobe
	MASS2475ADA	Horn/Strobe
	P241575	Horn/Strobe
	P2430	Horn/Strobe
	P2475	Horn/Strobe
	P24110	Horn/Strobe
	S2415	Strobe
	S241575	Strobe
	S2430	Strobe
	S2475	Strobe
	PS2415	Mini-Horn/Strobe
	PS241575	Mini-Horn/Strobe
	PS24110	Mini-Horn/Strobe
	PS2475	Mini-Horn/Strobe
	SS24110	Strobe
	SS2415	Strobe
SS2475	Strobe	
Wheelock	46T-G4-24-R	Bell
	46T-G6-24-R	Bell
	46T-G10-24-R	Bell
	46T-G6-24-WS-24-HF-R	Strobe/Bell
	46T-G10-24-WS-24-HF-R	Strobe/Bell
	46T-G6-24-WH-24-HF-R	Strobe/Bell
	46T-G10-24-WH-24-HF-R	Strobe/Bell
	700IT-12\24-W-FR	Strobe Horn
	7002T-12\24-W-FR	Strobe Horn
	AES-DL1-R	Multitone Horn
	AES-EL1-R	Multitone Horn
	AES-DL1-WS-24-VF-R	Multitone Horn
	AES-EL1-WS-24-VF-R	Multitone Horn
	AES-DL1-WH-24-VF-R	Multitone Horn
	AES-EL1-WH-24-VF-R	Multitone Horn
AES-DL1-WM-24-VF-R	Multitone Horn	

Manufacturer	Model	Type
Wheelock (Cont.)	AES-EL1-WM-24-VF-R	Multitone Horn
	AH-24-R	Horn
	AMT-12\24-R	Strobe Horn
	AMT-24-LS-VFR	Strobe Horn
	AMT-24-LSM-VFR	Strobe Horn
	AMT-24-IS-VFR	Strobe Horn
	AS-2415-VFR	Strobe Horn
	AS-241575-VFR	Strobe Horn
	AS-2430-VFR	Strobe Horn
	AS-2475-VFR	Strobe Horn
	AS-24110-HFR	Strobe Horn
	SM-12\24-R	Strobe Horn Controller
	DSM-12\24-R	Strobe Horn Controller
	CH-BF1	Chime
	CH-BF1-R	Chime
	CH-CF1	Chime
	CH-CF1-R	Chime
	CH-CF1-W	Chime
	CH-DF1	Chime
	CH-DF1-R	Chime
	CH-BF1-WS-24-HF-R	Strobe Chime
	CH-CF1-LS-24	Strobe Chime
	CH-CF1-MS-24	Strobe Chime
	CH-CF1-IS-24	Strobe Chime
	CH-CF1-LS-24-CFW	Strobe Chime
	CH-CF1-MS-24-CFW	Strobe Chime
	CH-CF1-IS-24-CFW	Strobe Chime
	CH-CF1-WS-24-CF-W	Strobe Chime
	CH-DF1-LS-24	Strobe Chime
	CH-DF1-MS-24	Strobe Chime
	CH-DF1-IS-24	Strobe Chime
	CH-DF1-LS-24-VFR	Strobe Chime
	CH-DF1-LSM-24-VFR	Strobe Chime
	CH-DF1-MS-24-VFR	Strobe Chime
	CH-DF1-IS-24-VFR	Strobe Chime
	CH-DF1-WM-24-VFR	Strobe Chime
	CH-DF1-WS-24-VF-R	Strobe Chime
	DSM-12/24	Sync Module
	EH-DL1-R	Electronic Horn
	EH-EL1-R Electronic Horn	Electronic Horn
	EHS-DL1-W-VF-R	Strobe Horn (single input)
	EHS-EL1-W-VF-R	Strobe Horn (single input)
	EH-DL1-WS-24-VF-R	Strobe Horn (dual input)
	EH-EL1-WS-24-VF-R	Strobe Horn (dual input)
	EH-DL1-WH-24-VF-R	Strobe Horn (dual input)
	EH-EL1-WH-24-VF-R	Strobe Horn (dual input)

Manufacturer	Model	Type
Wheelock (Cont.)	EH-DL1-WM-24-VF-R	Strobe Horn (dual input)
	EH-EL1-WM-24-VF-R	Strobe Horn (dual input)
	HSW-24-HFR	Remote Strobe
	HS2W-24-HFR	Remote Strobe
	HSPW-24-HFR	Remote Strobe
	IS-24-VFR	Remote Strobe
	IS1-24-VFR	Remote Strobe
	IS3-24-VFR	Remote Strobe
	ISP-24-HFR	Remote Strobe
	LS-24-VFR	Remote Strobe
	LS1-24-VFR	Remote Strobe
	LS3-24-VFR	Remote Strobe
	LSP-24-HFR	Remote Strobe
	LSM-24-VFR	Remote Strobe
	LS1M-24-VFR	Remote Strobe
	LS3M-24-VFR	Remote Strobe
	LSPM-24-VFR	Remote Strobe
	MS-24-VFR	Remote Strobe
	MS1-24-VFR	Remote Strobe
	MS3-24-VFR	Remote Strobe
	MSP-24-HFR	Remote Strobe
	MB-G6-24-R	Motor Bell
	MB-G10-24-R	Motor Bell
	MBS-G6-24-W-HF-R	Motor Bell with Strobe
	MBS-G10-24-W-HF-R	Motor Bell with Strobe
	MIZ-24-R	Mini-Horn
	MIZ-24-W	Mini-Horn
	MIZ-24-LS-VFR	Mini-Horn/Strobe
	MIZ-24-LSM-VFR	Mini-Horn/Strobe
	MIZ-24-MS-VFR	Mini-Horn/Strobe
	MIZ-24-HSW-HFR	Mini-Horn/Strobe
	MIZ-24-IS-VFR	Mini-Horn/Strobe
	MIZ-24-WS-VF-R	Mini-Horn/Strobe
	MIZ-24-WS-VF-W	Mini-Horn/Strobe
	MIZ-24-WH-VF-W	Mini-Horn/Strobe
	MIZ-24-WM-VF-W	Mini-Horn/Strobe
	MT-24-LS-VFR	Strobe Horn
	MT-24-LSM-VFR	Strobe Horn
	MT-24-MS-VFR	Strobe Horn
	MT-24-IS-VFR	Strobe Horn
	MT-24-SL-VFR	Strobe Horn
	MT-24-SLM-VFR	Synch. Multitone Strobe
	MT-24-WM	Strobe
	MT-24-WM-VF-R	Horn
MT-24-WM-VFR	Horn	

Manufacturer	Model	Type
Wheelock (Cont.)	RS-2415-HFR	Strobe
	RSP-2415-VFR	Strobe
	RS-241575-VFR	Strobe
	RSP-241575-VFR	Strobe
	RS-2430-VFR	Strobe
	RS-2430-HFR	Strobe
	RS-2475-VFR	Strobe
	RSP-2475-HFR	Strobe
	RS-24110-HFR	Strobe
	RSP-24110-HFR	Strobe
	SL-24-VFR	Synchronized Remote Strobe
	SL1-24-VFR	Synchronized Remote Strobe
	SL3-24-VFR	Synchronized Remote Strobe
	SLP-24-VFR	Synchronized Remote Strobe
	SLM-24-VFR	Synchronized Remote Strobe
	SL1M-24-VFR	Synchronized Remote Strobe
	SL3M-24-VFR	Synchronized Remote Strobe
	SLPM-24-VFR	Synchronized Remote Strobe
	SHW-24-VFR	Synchronized Remote Strobe
	SH2W-24-VFR	Synchronized Remote Strobe
	SHPW-24-VFR	Synchronized Remote Strobe
	SCM-24-R	Controller for Synchronized Strobes
	SM-12/24-R	Sync Module
	SR-2415-VFR	Sync Strobe
	SRP-2415-HFR	Sync Strobe
	SR-241575-VFR	Sync Strobe
	SRP-241575-VFR	Sync Strobe
	SR-2475-VFR	Sync Strobe
	SR-2475-HFR	Sync Strobe
	SR-24110-HFR	Sync Strobe
	SRP-24110-HFR	Sync Strobe
	WM3T-24-FR	Remote Strobe
	WM3T-24-VFR	Remote Strobe
	WS1T-24-FR	Strobe
WS3T-24-FR	Strobe	
WST-24-FR	Strobe	

Silent Knight Fire Product Warranty and Return Policy

General Terms and Conditions

- All new fire products manufactured by Silent Knight have a limited warranty period of 18 months from the date of manufacture against defects in materials and workmanship. See limited warranty statement for details.
- This limited warranty does not apply to those products that are damaged due to misuse, abuse, negligence, exposure to adverse environmental conditions, or have been modified in any manner whatsoever.

Repair and RA Procedure

- All products that are returned to Silent Knight for credit or repair require a RA (Return Authorization) number. Call Silent Knight Customer Service at 800-446-6444 or 763-493-6435 between 8:00 A.M. and 4:45 P.M. CST, Monday through Friday to obtain a return authorization number. Silent Knight Technical Support is available at 800-328-0103 between 8:00 A.M. and 6:00 P.M. CST, Monday through Friday.
- RA number must be prominently displayed on the outside of the shipping box. See return address example under Advanced Replacement Policy.
- Include a packing slip that has the RA number, a content list, and a detailed description of the problem should be included with each return.
- All products returned to Silent Knight must be sent freight pre-paid. After product is processed, Silent Knight will pay for shipping product back to customer via UPS ground.
- Return the Silent Knight product circuit board only. Products that are returned in cabinets will be charged an additional \$50 to cover the extra shipping and handling costs over board only returns. **Do not return batteries.** Silent Knight has the authority to determine if a product is repairable. Products that are deemed un-repairable will be returned to the customer.
- Product that is returned that has a board date code more than 18 months from date of manufacture will be repaired and the customer will be assessed the standard Silent Knight repair charge for that model.

Advanced Replacement Policy

- Silent Knight offers an option of advance replacement for fire product printed circuit boards that fail during the first 6 months of the warranty period.
- For advance replacement of a defective board contact your local Silent Knight Distributor or call Silent Knight at 800-446-6444 or 763-493-6435 to obtain a RA (Return Authorization) number and request advanced replacement.
- Customers without a Silent Knight account must use a MasterCard, Visa, or American Express credit card to get an advance replacement.

- A new or refurbished board will be shipped to the customer. The customer will initially be billed for the replacement board but a credit will be issued after the repairable board is received at Silent Knight. All returned products must comply with the guidelines described under “General Terms and Conditions”.
- The defective board must be returned within 30 days of shipment of replacement board for customer to receive credit. No credit will be issued if the returned board was damaged due to misuse or abuse.
- Repairs and returns should be sent to:

Silent Knight

Attn: Repair Department

7550 Meridian Circle Suite 100

Maple Grove, MN 55369-4927

RA Number: _____

Limited Warranty

Silent Knight warrants that the products of its manufacture shall be free from defects in materials or workmanship for 18 months from the manufacturing date code on the printed circuit board, if such goods have been properly installed, are subject to normal proper use, and have not been modified in any manner whatsoever. Upon return of the defective product, Silent Knight will at its sole discretion, either repair or replace, at no cost, such goods as may be of defective material or workmanship. Customers outside the United States are to return products to their distributor for repair.

SILENT KNIGHT SHALL NOT UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM LOSS OF PROPERTY OR OTHER DAMAGE OR LOSSES OWING TO THE FAILURE OF SILENT KNIGHT PRODUCTS BEYOND THE COST OF REPAIR OR REPLACEMENT OF ANY DEFECTIVE PRODUCTS.

SILENT KNIGHT MAKES NO WARRANTY OF FITNESS OR MERCHANTABILITY AND NO OTHER WARRANTY, ORAL OR WRITTEN, EXPRESS OR IMPLIED, BEYOND THE 18 MONTH WARRANTY EXPRESSLY SPECIFIED HEREIN.

SK-5208 Plus Basic Operating Instructions P/N 151214 Rev. A

These instructions must be framed and displayed next to the panel in accordance with NFPA 72 fire code for Local Fire Alarm System.

How To	Do This			Comments
	Press	Display Message	Press	
Test the system		System Test Enter Code	Enter Code	The system will perform a display lamp test and a communication test.
Reset Alarms		Reset Alarm Enter Code	Enter Code	Resets system.
Reset the Dialer		Reset Dialer Enter Code	Enter Code	Resets the dialer and aborts the call to central station.
Display History Events		History Events Enter Code	Enter Code	Displays the panel history, which includes alarms, supervisories, troubles, reports, time and date changes, etc.
Show Status		Show Status Enter Code	Enter Code	View existing system status. List Alarms first, supervisories and then troubles.
Silence Troubles or Alarms	or 	Silence Enter Code	Enter Code	
Disable/Enable a Zone	Zone # +	Disable Zone Enter Code	Enter Code	Repeat the process to enable the zone.
Disable/Enable NAC	NAC # + 	Disable NAC Enter Code	Enter Code	Repeat the process to enable the NAC.
Conduct a Fire Drill		Fire Drill Enter Code	Enter Code	To End the Fire Drill press then code.
Reset Detectors		Rst Smk Pwr Enter Code	Enter Code	Resets all smoke detector power.
Walk Test the System		Walk Test Enter Code	Enter Code	To End the Walk Test press .
Menu of Options	Press or to scroll trough list.		Enter Installer Code	To exit press or wait 15 seconds.
Acknowledge Events	<p>Events can be acknowledged by pressing the button. No code is required to acknowledge events. The status LEDs (Alarm, Supervisory and Trouble) will flash when an un-acknowledged alarm, supervisory, or trouble condition exists. After each event has been acknowledged its associated LED (Alarm, Supervisory, or Trouble LED) stop flashing and turn on steady. When viewing system status the LCD displays "Acked" for each individual event once it has been acknowledged. The control panel piezo will silence after all alarms have been acknowledged.</p> <p>Note: The control panel piezo will continue to sound for Supervisories and Troubles even after the event has been acknowledged. Supervisories and troubles will silence once the event is restored.</p> <p>After the event is acknowledged an event is added to the event history buffer. Acknowledged events in the history buffer will be preceded with an asterisk "**".</p>			

LEDs Meaning

LED	Status	Condition
ALARM (red)	Off	Normal condition
	On	System in alarm.
	Flashing	LED will flash when a alarm condition exists that has not been acknowledged.
SUPERVISORY (yellow)	Off	Normal condition
	On	If a supervisory condition exist on the system.
	Flashing	LED will flash when a supervisory condition exists that has not been acknowledged.
TROUBLE (yellow)	Off	Normal condition
	On	Trouble condition exists
	Flashing	LED will flash when a trouble condition exists that has not been acknowledged.
SILENCED (yellow)	Off	Normal condition.
	On	Alarm or trouble condition has been silenced but condition still exists.
AC (green)	On	Panel is running on AC (normal condition); standby battery fully charged.
	Off	Panel has lost all power.
	Flashing	Panel is running on battery power only or AC power only.

For Service Contact:	
----------------------	--

Cut Along the Dotted Line

Cut Along the Dotted Line



7550 Meridian Circle
Maple Grove, MN 55369-4927
763-493-6455
1-800-328-0103
Fax: 763-493-6475
<http://www.silentknight.com>

© 2001 Silent Knight
Part Number 151204C, 08/2001