

FROULA ALARM SYSTEMS, INC. OPERATING INSTRUCTIONS  
For Home Burglar Alarm System - 1024 Control Panel

MAIN CONTROL LITES:

Zone I Basic Protection----- This light will be on when any door  
RED LIGHT (perimeter) or window in the basic circuit is  
open.

Zone II Basic Protection----- This light will be on when any in-  
RED LIGHT (traps) side traps are not properly set.

Entry-Exit RED LIGHT----- This light will be on when any door  
that is used for leaving the house  
is open.

Memory Light----- This light will be on AFTER the  
alarm has tripped, and will remain  
on until the alarm is turned off  
by the subscriber.

AC Power GREEN LIGHT----- This light should remain on at all  
times to indicate that the control  
has AC power to charge the battery.

Panic Reset Button----- The alarm has a panic button to act-  
ivate sirens/bells. It has to be  
reset at the main control by pushing  
this button.

\*\*\*\*\*

Remote Keypad: Each remote keypad has one (1) RED LIGHT that has  
three (3) possible conditions...

- 1) LIGHT OFF - This indicates that alarm is off and that a  
door or window is open.
- 2) LIGHT FLASHING - This indicates that all doors are closed  
and alarm is ready to be turned on.
- 3) LIGHT ON - This indicates that the alarm is ON.

Zone II Shunt Switch: If you have inside doors, pads, or beams that  
you DO NOT wish to have on when you are home,  
a shunt switch will be mounted on the side of  
your control panel in the closet. When the  
switch is UP the doors will be part of the  
alarm. When the switch is DOWN they will not  
be a part of the alarm.

Panic Switch: To activate a remote panic alarm, press the '#' and  
'\*' on the remote keypad at the same time. NOTE:  
THIS MUST BE RESET AT THE MAIN CONTROL...  
See Panic Reset Button above.

FROULA ALARM SYSTEMS, INC. OPERATING INSTRUCTIONS  
For Home Burglar Alarm System - 1024 Control Panel

Continued from Page 1...

Turning the Alarm ON when leaving:

- 1) Close ALL doors and windows
- 2) Put Shunt Switch in UP position - RFD LIGHT will be FLASHING
- 3) Enter your own 4 digit code - RFD LIGHT will be ON
- 4) Exit through exit door within 45 seconds
- 5) Upon leaving, you should hear NO buzzer or sirens!!!

Turning the Alarm OFF upon entering:

- 1) As you enter, entry buzzer in keypad will start to buzz\*  
\*Buzzer ALWAYS indicates alarm will sound in 45 seconds
- 2) Enter your own 4 digit code to turn alarm OFF -  
Buzzer will stop when the alarm has been disarmed by you.

NOTES: When alarm is tripped, it will ring for twelve (12) minutes and automatically reset, providing that the system is ready to reactivate (NO open doors/windows). If the circuit with the doors and windows is not closed then the alarm will not re-arm but simply shut itself off. However, Zone II WILL re-arm, leaving you with partial (inside) protection.

Use your alarm EVERY time you leave your home, even if it is only to go next door. It can't work if it is not on, and that defeats the whole purpose. Using your alarm ALWAYS is a good habit to get into.

If any further questions arise, you may call our office at 747-8437 and we will either instruct you by phone or arrange to come out again to go over it with you.

Sincerely,

FROULA ALARM SYSTEMS, INC.